

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [All-Clad](#) /
- › [All-Clad Majestuo Stainless Steel Coffee Maker User Manual](#)

All-Clad CD883D51

All-Clad Majestuo Stainless Steel Coffee Maker User Manual

Model: CD883D51

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating Instructions](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This user manual provides detailed instructions for the safe and efficient operation of your All-Clad Majestuo Stainless Steel Coffee Maker. Please read this manual thoroughly before first use and keep it for future reference. This coffee maker is designed to deliver a superior brewing experience with its intuitive touchscreen, programmable timer, and keep-warm function.





Figure 1: All-Clad Majestuo Stainless Steel Coffee Maker. This image shows the sleek, modern design of the coffee maker with its stainless steel finish and integrated digital display.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
- Scalding may occur if the lid is removed during the brewing cycles.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your All-Clad Majestuo Coffee Maker:

1. Main Unit with Control Panel and Display
2. Removable Water Tank
3. Filter Basket
4. Glass Carafe with Handle
5. Warming Plate
6. Measuring Scoop (included)



PREMIUM STAINLESS STEEL COFFEE MAKER

Perfect for a quick morning routine!

Figure 2: The All-Clad Majestuo Coffee Maker positioned in a modern kitchen setting, highlighting its premium stainless steel construction and elegant design.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Cleaning:** Before first use, wash the carafe, filter basket, and removable water tank in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **Positioning:** Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure adequate ventilation around the unit.
4. **Initial Rinse Cycle:**
 - Fill the removable water tank with fresh, cold water up to the MAX fill line.
 - Place an empty paper filter (or permanent filter, if using) into the filter basket.
 - Place the empty carafe on the warming plate.

- Plug the coffee maker into a grounded electrical outlet.
- Press the "Start" button to run a full brewing cycle with only water. This cleans the internal components.
- Discard the water from the carafe after the cycle is complete.

5. OPERATING INSTRUCTIONS

5.1 Brewing Coffee

1. **Fill Water Tank:** Remove the water tank from the side of the unit. Fill it with fresh, cold water to the desired level, corresponding to the number of cups you wish to brew. Reinsert the water tank securely.



REMOVABLE WATER TANK

Figure 3: The removable water tank being lifted from the coffee maker, demonstrating its easy-to-fill design.

2. **Add Coffee Grounds:** Open the lid of the filter basket. Place a paper filter (size 4 cone filter recommended) into the filter basket. Add the desired amount of ground coffee. A general guideline is 1 tablespoon of ground coffee per cup (5 oz). Adjust to your taste. Close the lid firmly.
3. **Place Carafe:** Ensure the glass carafe is empty and properly seated on the warming plate.
4. **Start Brewing:** Press the "Start" button on the touchscreen display. The brewing process will begin. The anti-drip

system allows you to temporarily remove the carafe to pour a cup before the brewing cycle is complete.



AROMA FUNCTION

Tailor your brew from light to strong

Figure 4: A hand pouring freshly brewed coffee from the carafe into a cup, demonstrating the aroma function and ease of serving.

5. **Enjoy:** Once brewing is complete, the coffee maker will automatically switch to the Keep Warm function.



Figure 5: The glass carafe filled with coffee resting on the warming plate, indicating the active keep warm function.

5.2 Programmable Timer

The programmable timer allows you to set the coffee maker to start brewing at a specific time.

1. **Set Current Time:** If not already set, adjust the current time on the display using the +/- buttons.
2. **Activate Timer:** Press the timer icon on the touchscreen. The display will show the current programmed start time or a default time.
3. **Adjust Programmed Time:** Use the +/- buttons to set your desired brewing start time.
4. **Confirm:** The timer will automatically activate after a few seconds of inactivity or by pressing the timer icon again. The timer indicator will illuminate.
5. **Prepare Coffee Maker:** Ensure the water tank is filled and coffee grounds are in the filter basket before the programmed start time.



Figure 6: A hand touching the intuitive touchscreen display of the coffee maker, demonstrating how to set the programmable timer and access other smart functions.

5.3 Aroma Function (Brew Strength)

Customize your coffee's strength from light to strong using the aroma function.

1. Before starting a brew cycle, press the coffee bean icon on the touchscreen.
2. Each press will cycle through different strength settings (e.g., light, medium, strong). Select your preferred strength.
3. Proceed with brewing as described in section 5.1.

5.4 Keep Warm Function

The coffee maker automatically keeps your coffee warm after brewing. The duration of the keep warm cycle is typically 30 minutes to 1 hour, after which the unit will automatically shut off for safety and energy saving. Refer to the display for remaining keep warm time.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and longevity of your coffee maker.

6.1 Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Wash the carafe, filter basket, and removable water tank in warm, soapy water after each use. These parts are generally top-rack dishwasher safe, but hand washing is recommended for longevity.
- Wipe the exterior of the coffee maker, including the warming plate and control panel, with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the main unit in water or any other liquid.

6.2 Descaling

Mineral deposits from water can build up in your coffee maker over time, affecting performance and taste. The coffee maker features a descaling alert to notify you when descaling is needed. Descale regularly, especially in areas with hard water.

1. **Prepare Descaling Solution:** Mix 1 part white vinegar with 2 parts cold water. Alternatively, use a commercial descaling solution designed for coffee makers, following the product's instructions.
2. **Fill Water Tank:** Pour the descaling solution into the removable water tank up to the MAX fill line.
3. **Start Descaling Cycle:** Place an empty paper filter in the filter basket and the empty carafe on the warming plate. Press the descaling icon (if available) or initiate a regular brew cycle.
4. **Partial Cycle:** Allow half of the solution to brew through, then turn off the coffee maker and let it stand for 15-20 minutes to allow the solution to work.
5. **Complete Cycle:** Turn the coffee maker back on and allow the remaining solution to brew through.
6. **Rinse Cycles:** After the descaling cycle is complete, discard the solution. Fill the water tank with fresh, cold water and run at least two full brew cycles with only water to rinse out any remaining descaling solution.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Not plugged in. Water tank empty. Timer set for future brew.	Ensure unit is plugged into a working outlet. Fill water tank with water. Check timer settings or press "Start" to brew immediately.
Coffee tastes weak.	Not enough coffee grounds. Coffee grounds too coarse. Aroma function set to light.	Add more coffee grounds. Use finer ground coffee. Select a stronger aroma setting.
Coffee overflows from filter basket.	Too many coffee grounds. Filter basket not seated correctly. Clogged filter.	Reduce amount of coffee grounds. Ensure filter basket is properly inserted. Use a fresh filter or clean permanent filter.

Problem	Possible Cause	Solution
Descaling alert is on.	Mineral buildup.	Perform a descaling cycle as per section 6.2.

8. SPECIFICATIONS

Model Name: Majestuo Stainless Steel Coffee Maker

Model Number: CD883D51

Brand: All-Clad

Power: 1000 Watts

Voltage: 120V

Product Dimensions: 11.25"D x 8.24"W x 13.92"H

Item Weight: 7.28 pounds

Color: Stainless Steel

Special Features: Auto Shut-Off, Programmable Timer, Keep Warm Function, Removable Water Tank, Intuitive Touchscreen, Aroma Function

Filter Type: Paper (Cone)

Manufacturer: Groupe SEB

Country of Origin: China

UPC: 010942228714

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official All-Clad website. Keep your proof of purchase for warranty claims.

Customer Support:

If you have any questions, require assistance, or need to report an issue with your All-Clad Majestuo Coffee Maker, please contact All-Clad Customer Service:

Website: www.all-clad.com/customer-service (Example link, replace with actual if available)

Phone: Refer to the All-Clad website or product packaging for regional contact numbers.

When contacting support, please have your model number (CD883D51) and purchase date ready.

