

[Manuals.plus](#) /

> [Ankilo](#) /

> Ankilo 3D Walking Pedometer User Manual

Ankilo CR-815

Ankilo 3D Walking Pedometer User Manual

Model: CR-815

1. INTRODUCTION

Thank you for choosing the Ankilo 3D Walking Pedometer. This device is designed to accurately track your daily steps, helping you monitor your activity levels and support a healthy lifestyle. Its simple operation, large display, and portable design make it an ideal companion for walking, running, and everyday movement. Please read this manual carefully before using the pedometer to ensure proper operation and maintenance.



The Ankilo 3D Walking Pedometer, featuring a clear digital display and a reset button.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Easy to Use:** This 3D sensor pedometer counts up to 99,999 steps. No app or phone connection needed. Simply press the 'reset' button for 5 seconds to clear steps and start. Wear it on your body or in your bag.
- **Accurate Readings:** The mini pedometer uses advanced sensor technology to record daily activity steps. To prevent accidental movements from being counted, the pedometer requires at least 10 consecutive steps to begin counting.
- **Portable and Lightweight:** The simple pedometer is very light. It includes a detachable clip and a lanyard, allowing it to be attached to bags, waistbands, belts, or placed in a pocket or bag for normal operation.
- **Large Digital Display:** With the large LCD display, numbers are easily visible at a glance. There is also a large reset button on the front for convenient resetting of your exercise steps.
- **Intelligent Power Saving:** The pedometer automatically enters sleep mode when not in use. Once the pedometer detects movement, it wakes up and resumes counting.

2.2 Package Contents

Please check the box for the following items:

- 1 x Ankilo 3D Walking Pedometer
- 1 x Detachable Buckle/Clip
- 1 x Lanyard (Shoulder Strap)
- 1 x User Manual

2.3 Product Dimensions

The pedometer is compact and lightweight, designed for easy portability.



Detailed dimensions of the pedometer for reference.

Length: Approximately 65 mm (2.56 inches)

Width: Approximately 45 mm (1.77 inches)

Height: Approximately 22 mm (0.87 inches)

Weight: Approximately 50 g (1.76 oz)

3. SETUP

3.1 Battery Installation

The Ankilo 3D Pedometer uses one CR-2032 button cell battery. The battery is typically pre-installed, but you may need to remove a protective plastic tab before first use.

1. Locate the battery compartment on the back of the pedometer.
2. Use a small coin or screwdriver to gently open the battery cover by twisting it counter-clockwise.
3. If present, remove the plastic insulating tab.
4. Insert the CR-2032 battery with the positive (+) side facing upwards.
5. Replace the battery cover and twist clockwise to secure it.



The back of the pedometer, indicating the battery compartment.

3.2 First Use

After battery installation, the pedometer should power on automatically and display '0' steps. If not, press the 'RESET' button briefly to activate the display.

4. OPERATING INSTRUCTIONS

4.1 Turning On/Off

The pedometer features intelligent power saving. It will automatically enter sleep mode after a period of inactivity to conserve battery. It will wake up and resume counting automatically when movement is detected.

4.2 Counting Steps

The Ankilo 3D Pedometer uses a sensitive 3D sensor to detect your steps. To ensure accuracy and prevent false counts from incidental movements, the pedometer will only begin counting steps after detecting 10 consecutive steps. Once this threshold is met, it will count all subsequent steps.

4.3 Resetting Steps

To reset your step count to zero, press and hold the 'RESET' button located on the front of the pedometer for approximately 5 seconds. The display will clear to '0'.

4.4 Wearing Options

The pedometer is designed to be worn in various ways for convenience and accurate tracking:

- **Clip:** Attach the detachable clip to your waistband, belt, or pocket.
- **Lanyard:** Use the included lanyard to wear the pedometer around your neck.
- **Pocket/Bag:** Place the pedometer inside your pocket or a bag. Ensure it remains upright for optimal accuracy.

PRODUKTGRÖSSE



Examples of how to wear the Ankilo 3D Pedometer.

5. MAINTENANCE

5.1 Cleaning

To clean your pedometer, wipe it gently with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water, as this can damage the electronics.

5.2 Battery Replacement

When the display becomes dim or the pedometer stops responding, it's time to replace the battery. Follow the instructions in Section 3.1 for battery installation, ensuring you use a new CR-2032 battery.

6. TROUBLESHOOTING

6.1 Pedometer Not Counting Steps

- Ensure the battery is properly installed and has sufficient charge.
- Remember that the pedometer requires 10 consecutive steps to activate counting. Try walking more than 10 steps continuously.
- Check if the pedometer is securely attached and not swinging excessively, which might affect sensor accuracy.

6.2 Display Issues

- If the display is dim or blank, replace the battery.
- If the display shows erratic numbers, try resetting the pedometer by holding the 'RESET' button for 5 seconds.

6.3 Inaccurate Readings

- Ensure the pedometer is worn in a stable position (e.g., clipped to a waistband, in a pocket, or on a lanyard) and not swinging freely.
- The 3D sensor is designed to be accurate, but extreme movements or very short, shuffling steps might not be registered as full steps.

7. SPECIFICATIONS

Feature	Description
Model	CR-815
Sensor Type	3D Sensor
Step Range	0 - 99,999 steps
Error Correction	10 consecutive steps required to initiate counting
Power Supply	CR-2032 Button Cell Battery
Product Dimensions (L x W x H)	65 mm x 45 mm x 22 mm
Weight	Approx. 50 g
Color	Black
Display Type	LCD
Display Size	1.3 inches
Material	Acrylonitrile Butadiene Styrene (ABS)

8. WARRANTY AND SUPPORT

This Ankilo product comes with a standard manufacturer's warranty. For specific warranty details, duration, and terms, please refer to the product packaging or the official Ankilo website. If you encounter any issues or require technical assistance, please contact Ankilo customer support through the contact information provided with your purchase or on the brand's official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D66K3CBX>

More documents and user manuals: <https://manuals.plus/>