

[Manuals.plus](#) /

› [CNCEST](#) /

› CNCEST Portable LNG Stove User Manual

## CNCEST YLLAUT-000000

# CNCEST Portable LNG Stove User Manual

Model: YLLAUT-000000

## INTRODUCTION

---

This user manual provides comprehensive instructions for the safe and efficient operation, setup, and maintenance of your CNCEST Portable LNG Stove. Please read this manual thoroughly before using the appliance to ensure proper function and to prevent injury or damage.

The CNCEST Portable LNG Stove is designed for both home and outdoor cooking, featuring a robust design with support legs, a wind-blocking cover, and manual ignition. This model is equipped with 5 burners for versatile cooking needs.





Figure 1: Overview of the CNCEST Portable LNG Stove with its integrated stand and wind cover.

## SAFETY INFORMATION

---

**WARNING:** Failure to follow these safety instructions could result in fire, explosion, property damage, personal injury, or death.

- Always operate the stove in a well-ventilated area. Do not use indoors without proper ventilation.
- Ensure all connections are secure and leak-free before ignition. Use soapy water to check for gas leaks.
- Keep flammable materials away from the stove during operation.
- Do not leave the stove unattended while in use.
- Allow the stove to cool completely before cleaning or storing.
- This product is designed for LNG (Natural Gas) or LPG. Ensure you are using the correct fuel type and connection. If using LPG, a low-pressure valve and gas hose (not included) are required.
- The product does not contain natural gas.
- This product does not have a threaded air connection. Use an unthreaded hose (not included) and attach directly with a hose clamp.

## PRODUCT COMPONENTS AND FEATURES

---

Familiarize yourself with the various parts of your CNCEST Portable LNG Stove:

- **Burners:** Five high-efficiency burners, each with 2.5KW combustion power.
- **Control Knobs:** Five independent rotary knobs for manual ignition and flame adjustment.
- **Wind Blocking Cover:** Integrated cover to protect flames from wind and serve as a lid when not in use.
- **Support Leg Stand:** Sturdy frame providing stability and elevated cooking surface.
- **Placement Boards:** Two side boards for convenient placement of ingredients and utensils.
- **Non-slip Feet:** Ensures stability and prevents accidental movement.



Figure 2: All components included in the package, ready for assembly.



Figure 3: Detailed views showing the stove's side profile, a single burner, and the integrated storage shelves.

## SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all accessories for use are present as listed in the package contents.
2. **Assemble the Stand:** Attach the support legs to the main stove unit. Ensure all connections are secure and stable.
3. **Install Placement Boards:** Slide the two placement boards into their designated slots on the side of the stand.
4. **Connect Gas Supply:** Connect your natural gas (LNG) or LPG hose to the stove's pipe interface. As this product does not have a threaded air connection, use an unthreaded hose (not included) and secure it firmly with a hose clamp.
5. **Leak Test:** Before first use, perform a leak test on all gas connections using soapy water. Apply a soapy solution to connections; bubbles indicate a leak. Tighten connections or replace seals if leaks are detected.

6. **Positioning:** Place the assembled stove on a flat, stable, and non-combustible surface in a well-ventilated area, away from flammable materials.



Figure 4: The stove set up for outdoor cooking, demonstrating its portability and utility.

## OPERATING INSTRUCTIONS

1. **Prepare for Ignition:** Ensure the gas supply is connected and turned on. Place your cookware on the burner grates.
2. **Ignite a Burner:** Push down and rotate the desired burner's control knob counter-clockwise to the "ON" position. Simultaneously, use a long-stem lighter or match to ignite the gas at the burner head.
3. **Adjust Flame:** Once ignited, continue to rotate the control knob to adjust the flame size to your desired cooking intensity. Each burner has independent control.
4. **Multiple Burners:** You can operate multiple burners simultaneously. Repeat the ignition process for each additional burner.
5. **Turn Off:** To turn off a burner, rotate its control knob clockwise to the "OFF" position. Ensure the flame is

extinguished.

6. **After Use:** After cooking, turn off all burners and close the main gas supply valve. Allow the stove to cool completely before handling or moving.



Figure 5: The stove in operation, demonstrating cooking capabilities with multiple pots and pans.

## MAINTENANCE

- **Cleaning:** After each use, allow the stove to cool. Wipe down the surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
- **Burner Maintenance:** Periodically check burner ports for blockages. Clean with a soft brush if necessary. Ensure burner caps are properly seated after cleaning.
- **Storage:** Store the stove in a dry, protected area when not in use. Ensure the wind-blocking cover is closed to protect burners from dust.
- **Gas Hose Inspection:** Regularly inspect the gas hose for cracks, cuts, or wear. Replace immediately if any damage

is found.



Figure 6: Front view of the stove with the wind cover open, showing the burners and control knobs for easy access during cleaning.

TROUBLESHOOTING

| Problem                  | Possible Cause                                                         | Solution                                                                                                   |
|--------------------------|------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| Burner does not ignite.  | No gas supply; Gas hose kinked or blocked; Burner ports clogged.       | Check gas supply valve; Straighten hose or clear blockage; Clean burner ports.                             |
| Flame is weak or uneven. | Low gas pressure; Partially clogged burner ports; Incorrect fuel type. | Ensure adequate gas supply; Clean burner ports; Verify correct fuel (LNG/LPG) and regulator if applicable. |

| Problem            | Possible Cause                               | Solution                                                                                                                                                                   |
|--------------------|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Gas odor detected. | Gas leak.                                    | Immediately turn off gas supply. Ventilate area. Perform leak test with soapy water. Do not use until leak is resolved. Contact qualified technician if unable to resolve. |
| Stove is unstable. | Uneven surface; Legs not properly assembled. | Move stove to a flat surface; Re-check leg assembly and tighten all fasteners.                                                                                             |

## SPECIFICATIONS

| Feature                        | Detail                                                     |
|--------------------------------|------------------------------------------------------------|
| Model Number                   | YLLAUT-000000                                              |
| Material                       | Iron, Enamel, Aluminum                                     |
| Color                          | Black                                                      |
| Number of Burners              | 5                                                          |
| Fuel Type                      | Natural Gas (LNG) or LPG (requires additional accessories) |
| Combustion Power (Each Burner) | 2.5KW                                                      |
| Ignition Mode                  | Manual Ignition                                            |
| Stove Size (L*W*H)             | 64*44.5*16.5cm (25.2*17.52*6.5 in)                         |
| Total Height (with stand)      | 82cm (32.28in)                                             |
| Placement Board Size           | 61.5*42.5cm (24.21*16.73in)                                |
| Bottom Foot Height             | 6.5cm (2.56in)                                             |
| Assembly Required              | Yes                                                        |



Figure 7: Detailed dimensions of the stove and its components.

## WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty claims, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific warranty terms and contact information.

Protection plans are available for purchase separately to extend coverage beyond the manufacturer's warranty. Please refer to the product listing for details on available protection plans.

© 2024 CNCEST. All rights reserved.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0D66PXR6Y>

More documents and user manuals: <https://manuals.plus/>