

SUNHAIXIA HM903

SUNHAIXIA 3-Speed Hand Mixer HM903 Instruction Manual

Model: HM903

1. INTRODUCTION

Thank you for choosing the SUNHAIXIA 3-Speed Hand Mixer HM903. This compact and versatile appliance is designed to simplify your baking and cooking tasks, offering efficient mixing for various ingredients. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the appliance.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- 1 x SUNHAIXIA Hand Mixer Unit
- 2 x Flex Edge Beaters (Stainless Steel)
- 1 x Pro Whisk Attachment (Stainless Steel)
- 1 x USB Charging Cable
- 1 x Egg Separator
- Various Cleaning Brushes/Sponges (for multi-function models)



Image: The SUNHAIXIA 3-Speed Hand Mixer shown with its main unit, two flex edge beaters, a whisk attachment, a USB charging cable, and an egg yolk separator.

4. PRODUCT OVERVIEW

The hand mixer features a compact design with intuitive controls and interchangeable attachments for various mixing needs.

- **Main Unit:** Ergonomic handle with integrated power and speed controls.
- **Attachment Slots:** Two slots for beaters or one for the whisk.
- **Speed Indicator:** LED lights indicating the current speed setting.
- **USB Charging Port:** Located on the unit for convenient recharging.

INDIVIDUAL BASES FOR EASY AND STABLE STORAGE



radioactivity



Twin-stick



Powerful



Three-speed
control



High Capacity
Battery



Vertical design



Image: A close-up view of the hand mixer's control panel, highlighting the three speed indicator lights and the power/speed adjustment button.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the hand mixer using the provided USB cable.

1. Locate the USB charging port on the mixer unit.
2. Connect the USB cable to the mixer and a compatible USB power source (e.g., wall adapter, computer USB port).
3. The indicator lights will show charging status. Ensure the unit is fully charged before use.

Your browser does not support the video tag.

Video: This video demonstrates the charging process of the hand mixer, showing the USB cable connection and indicator lights.

5.2 Attaching Beaters/Whisk

The mixer comes with two types of attachments: flex edge beaters for general mixing and a pro whisk for whipping.

1. Ensure the mixer is turned off and unplugged (if applicable).
2. Insert the desired attachments into the designated slots on the mixer. Push firmly until they click into place.
3. To remove, press the eject button (if available) or pull firmly while twisting slightly.



Image: The hand mixer is shown with its two primary attachments: the flex edge beaters and the pro whisk, ready for insertion.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Speed Control

The mixer features a simple one-button control for power and speed adjustment.

1. **Power On:** Press and hold the power button for a few seconds until the indicator lights illuminate.
2. **Adjust Speed:** Briefly press the power button to cycle through the 3 available speeds (Low, Medium, High). The LED indicators will show the current speed.
3. **Power Off:** Press and hold the power button again until the lights turn off, or cycle past the highest speed setting.



Image: A visual guide to the three-speed control, showing recommended uses for low, medium, and high settings.

6.2 Mixing Guidelines

- **Low Speed (1st Gear):** Ideal for delicate mixing, folding ingredients, or starting to combine dry and wet ingredients. Use for nuts and chocolate chips.
- **Medium Speed (2nd Gear):** Suitable for general mixing, creaming butter and sugar, or preparing batters.
- **High Speed (3rd Gear):** Best for whipping egg whites to fluffy peaks, heavy cream, or thoroughly mixing dough.

Your browser does not support the video tag.

Video: This video demonstrates the hand mixer in action, showing the attachment of beaters and the mixing of eggs at various speeds.

Your browser does not support the video tag.

Video: This video illustrates the effective use of the whisk attachment for achieving desired consistency in mixtures.

○ **BIG POWER MOTOR**
GOURMET FOOD MADE EASY

16.25

**speed
reducer**



280 motor



Image: The hand mixer is shown mixing eggs in a bowl, illustrating its effectiveness for liquid and semi-liquid ingredients.



Image: The hand mixer is depicted whipping cream, showcasing its ability to create light and airy textures.

7. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your hand mixer.

- **Cleaning Attachments:** The stainless steel beaters and whisk are dishwasher-safe. For manual cleaning, rinse immediately after use and wash with warm, soapy water.
- **Cleaning Main Unit:** Wipe the motor unit with a damp cloth. Do not immerse the unit in water.
- **Storage:** Store the mixer and its attachments in a dry place. The compact design allows for easy storage.



 **First gear**

 **Second gear**

 **Third gear**

THREE-SPEED CONTROL TO BETTER UNDERSTAND YOUR CHOICE



First gear/Low speed deployment



Second/Medium speed mixing



Three-speed/high-speed mixing

Image: The hand mixer's beaters are shown being easily cleaned under running water, highlighting the dishwasher-safe feature.

8. TROUBLESHOOTING

If you encounter any issues with your hand mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Low battery or not charged.	Ensure the mixer is fully charged. Connect to a USB power source and wait for indicator lights to show full charge.
Attachments fall out during use.	Attachments not properly inserted.	Ensure attachments are pushed firmly into the slots until they click securely into place.
Mixer struggles with thick mixtures.	Mixture is too dense for the current speed or mixer capacity.	Use a higher speed setting. For very thick doughs, consider using a more powerful stand mixer or mixing by hand. This hand mixer is optimized for lighter batters and whipping.

Problem	Possible Cause	Solution
Reduced mixing power.	Low battery.	Recharge the mixer fully.

9. SPECIFICATIONS

Feature	Detail
Brand	SUNHAIXIA
Model Name	HM903-Hand Mixer
Color	milky white
Product Dimensions	3.4"D x 3.4"W x 8"H
Item Weight	7 ounces
Special Feature	Adjustable Speed Control (3 speeds)
Controls Type	Stainless Steel
Is Dishwasher Safe	Yes (attachments only)
Batteries	1 Lithium Ion battery required (included)
Manufacture Year	2024

10. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the official SUNHAIXIA website. Keep your proof of purchase for any warranty claims.