

Severin 2399

Severin 2399 Squeezing Grill User Manual

Model: 2399

INTRODUCTION

Thank you for choosing the Severin 2399 Squeezing Grill. This innovative table grill is designed to provide a versatile and convenient grilling experience for a variety of foods, from vegetables to meats. Its features include removable ceramic grill plates for easy cleaning, a digital display for precise temperature control, and multiple automatic programs to simplify your cooking. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new grill. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the grill.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Severin 2399 Squeezing Grill is designed for efficient and versatile indoor grilling. Key components include:

- **Digital Display:** Provides clear readings for temperature and program selection.
- **Removable Ceramic Grill Plates:** Non-stick and easy to clean, designed for optimal heat distribution.
- **Integrated Drip Tray:** Collects excess fats and liquids for healthier cooking and easier cleanup.
- **Adjustable Hinge:** Accommodates various food thicknesses.
- **Temperature Control:** Allows independent temperature regulation for each grill plate.



Figure 1: The Severin 2399 Squeezing Grill in its closed position, showcasing the digital display and control panel.



Figure 2: Front view of the grill, highlighting its sleek design and compact footprint.

SETUP

1. **Unpacking:** Carefully remove the grill and all accessories from the packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wipe down the exterior of the grill with a damp cloth. Remove the ceramic grill plates and the drip tray (refer to Maintenance section for removal instructions) and wash them with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the grill on a stable, heat-resistant, and flat surface. Ensure there is adequate ventilation around the appliance. Do not place it directly against a wall or under cabinets.
4. **Drip Tray Installation:** Ensure the drip tray is correctly inserted into its designated slot at the front of the grill.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.

OPERATING INSTRUCTIONS

Preheating the Grill

1. Close the grill lid.
2. Press the power button to turn on the grill.
3. Use the temperature control buttons on the digital display to set the desired temperature for each grill plate. The maximum temperature is approximately 230 °C (446 °F).
4. Allow the grill to preheat until the indicator light or display shows it has reached the set temperature. This typically takes several minutes.



Figure 3: Detailed view of the digital display, showing temperature settings and program indicators.

Grilling Food

1. Once preheated, carefully open the grill.
2. Place your food on the lower grill plate. Do not overload the grill.
3. Gently close the lid, allowing the top plate to rest on the food. The floating hinge adjusts to the thickness of your food.
4. Monitor cooking progress. Cooking times will vary based on food type, thickness, and desired doneness.

5. For larger grilling surfaces, the grill can be fully opened to create a double grilling area.



Figure 4: The grill in operation, with food cooking on the open plates, demonstrating its capacity.

Using Automatic Programs

The Severin 2399 features 5 automatic programs designed for common food types. Consult the quick start guide (if provided separately) or experiment to find the best program for your specific needs. These programs automatically adjust cooking time and temperature for optimal results.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your grill. Always unplug the grill and allow it to cool completely before cleaning.

1. **Removing Grill Plates:** The ceramic grill plates are removable for easy cleaning. Locate the release buttons or levers (usually on the side or front of the plates) and gently detach them from the grill base.
2. **Cleaning Grill Plates:** Wash the grill plates with warm, soapy water using a soft sponge or cloth. For stubborn food residue, soak the plates in warm water for a few minutes before cleaning. The ceramic plates are designed for easy release of food. Avoid abrasive cleaners or scouring pads that could

damage the non-stick coating. Rinse thoroughly and dry completely before reattaching.

3. **Cleaning Drip Tray:** Remove the drip tray and empty any collected grease. Wash it with warm, soapy water, rinse, and dry.
4. **Cleaning Exterior:** Wipe the exterior of the grill with a damp cloth. Do not use harsh chemicals or abrasive materials. Never immerse the main unit in water or any other liquid.



Figure 5: Demonstrating the ease of cleaning the removable ceramic grill plates under running water.



Figure 6: The grill base with plates removed, illustrating the heating elements and the design for easy plate detachment.



Figure 7: The removable drip tray, designed to collect excess grease and facilitate easy disposal.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the grill is securely plugged into a working outlet. Press the power button firmly. Check your circuit breaker.
Grill not heating up sufficiently.	Incorrect temperature setting; insufficient preheating time.	Increase the temperature setting on the digital display. Allow adequate time for the grill to preheat completely before adding food.
Food sticking to grill plates.	Plates not properly cleaned; food not oiled; plates worn.	Ensure plates are clean and dry. Lightly brush food or plates with cooking oil before grilling. If plates are worn, consider replacement.

Problem	Possible Cause	Solution
Error Code E00 or EEE displayed.	Internal malfunction; sensor issue.	Unplug the grill and wait 5 minutes before plugging it back in. If the error persists, contact Severin customer support. This code typically indicates an irreparable internal fault.

SPECIFICATIONS


Brand	Severin
Model Number	2399
Color	Blackone
Material	Stainless Steel, Ceramic
Product Dimensions	13.78"D x 12.6"W x 5.12"H
Item Weight	10.25 pounds (4.66 Kilograms)
Wattage	1800 watts
Voltage	220V
Special Features	Temperature Control, Versatile Cooking Surface
Included Components	1 x Grill Mat, 2 x Removable Ceramic Grill Plates
Number of Settings	5 (Automatic Programs)

WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Severin website.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Severin Customer Support. Have your model number (2399) and purchase details ready when contacting support.

Severin Official Website: www.severin.com

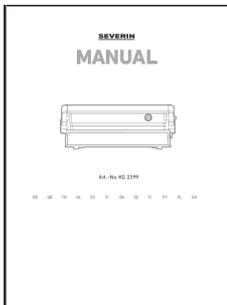

[SEVERIN KG 2399 Kontaktgrill Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für den SEVERIN KG 2399 Kontaktgrill, inklusive Sicherheitshinweisen, Bedienung, Reinigung und technischen Daten.



[SEVERIN KG 2398/KG2399 Sicherheitshinweise](#)

Umfassende Sicherheitshinweise für den SEVERIN Kontaktgrill KG 2398 und KG 2399. Erfahren Sie mehr über bestimmungsgemäßen Gebrauch, Installation, Betrieb und Risikovermeidung.




[Severin PG 8107 Barbecue Grill Parts Diagram and Overview](#)

An exploded view and parts list for the Severin PG 8107 Barbecue Grill, detailing all components for assembly and maintenance.



[SEVERIN RG 9690 Raclette Party Grill - Bedienungsanleitung](#)

Entdecken Sie den SEVERIN RG 9690 Raclette Party Grill. Diese umfassende Anleitung bietet detaillierte Informationen und Sicherheitshinweise in mehreren Sprachen.

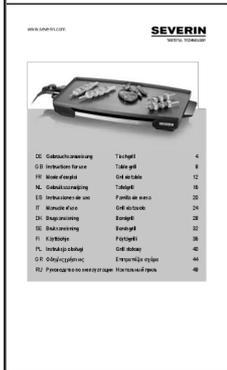

[SEVERIN Tischgrill Bedienungsanleitung und Sicherheitshinweise](#)

Umfassende Bedienungsanleitung und Sicherheitshinweise für den SEVERIN Tischgrill. Enthält Informationen zu Anschluss, Aufbau, Bedienung, Reinigung, Entsorgung und Garantie.



[SEVERIN RG 2373 Raclette-Partygrill: Bedienungsanleitung und Informationen](#)

Umfassende Bedienungsanleitung für den SEVERIN RG 2373 Raclette-Partygrill. Entdecken Sie Funktionen, Sicherheitshinweise, Bedienung und Pflege dieses vielseitigen Küchengeräts. Ideal für gesellige Runden.