

[Manuals.plus](#) /

> [REMAX](#) /

> REMAX CozyBuds W11 HiFi Stereo Wireless Earhook Earphones User Manual

REMAX CozyBuds W11

REMAX CozyBuds W11 HiFi Stereo Wireless Earhook Earphones User Manual

Model: CozyBuds W11

INTRODUCTION

This manual provides instructions for the proper use, setup, operation, and maintenance of your REMAX CozyBuds W11 HiFi Stereo Wireless Earhook Earphones. Please read this manual carefully before using the product to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The REMAX CozyBuds W11 are wireless earhook earphones designed for comfortable and stable wear, offering high-fidelity stereo sound. They feature Bluetooth connectivity for wireless audio and call management, intuitive touch controls, and a durable, sweatproof design suitable for active use.



Image: REMAX CozyBuds W11 Earphones and Charging Case. This image displays the earphones in their charging case, highlighting their compact design.

PACKAGE CONTENTS

- REMAX CozyBuds W11 Earphones (1 pair)
- Charging Case (1)
- Charging Cable (1)
- User Manual (this document)

SETUP

1. Charging the Earphones and Case

Before first use, fully charge the earphones and the charging case. Place the earphones into the charging case. Connect the charging cable to the case and a power source. The charging case has a 200mAh capacity and requires approximately 2 hours for a full charge. A full charge provides up to 8 hours of continuous earphone playback, with the case extending total playback time to up to 24 hours.



Image: Earphones and Charging Case illustrating battery life. This image shows the earphones and their charging cases, indicating a total usage time of 16 hours (likely referring to combined earphone and case battery life).

2. Pairing with a Bluetooth Device

1. Ensure the earphones are charged.

2. Open the charging case. The earphones will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "REMAX CozyBuds W11" from the list of found devices.
5. Once connected, you will hear a confirmation sound, and the earphones will be ready for use.

3. Wearing the Earphones

The CozyBuds W11 feature an ergonomic earhook design for a secure and comfortable fit. Gently place the earphone into your ear canal and position the soft silicone earhook around your ear. Adjust for optimal comfort and stability. The design ensures the earphones remain in place during activities.

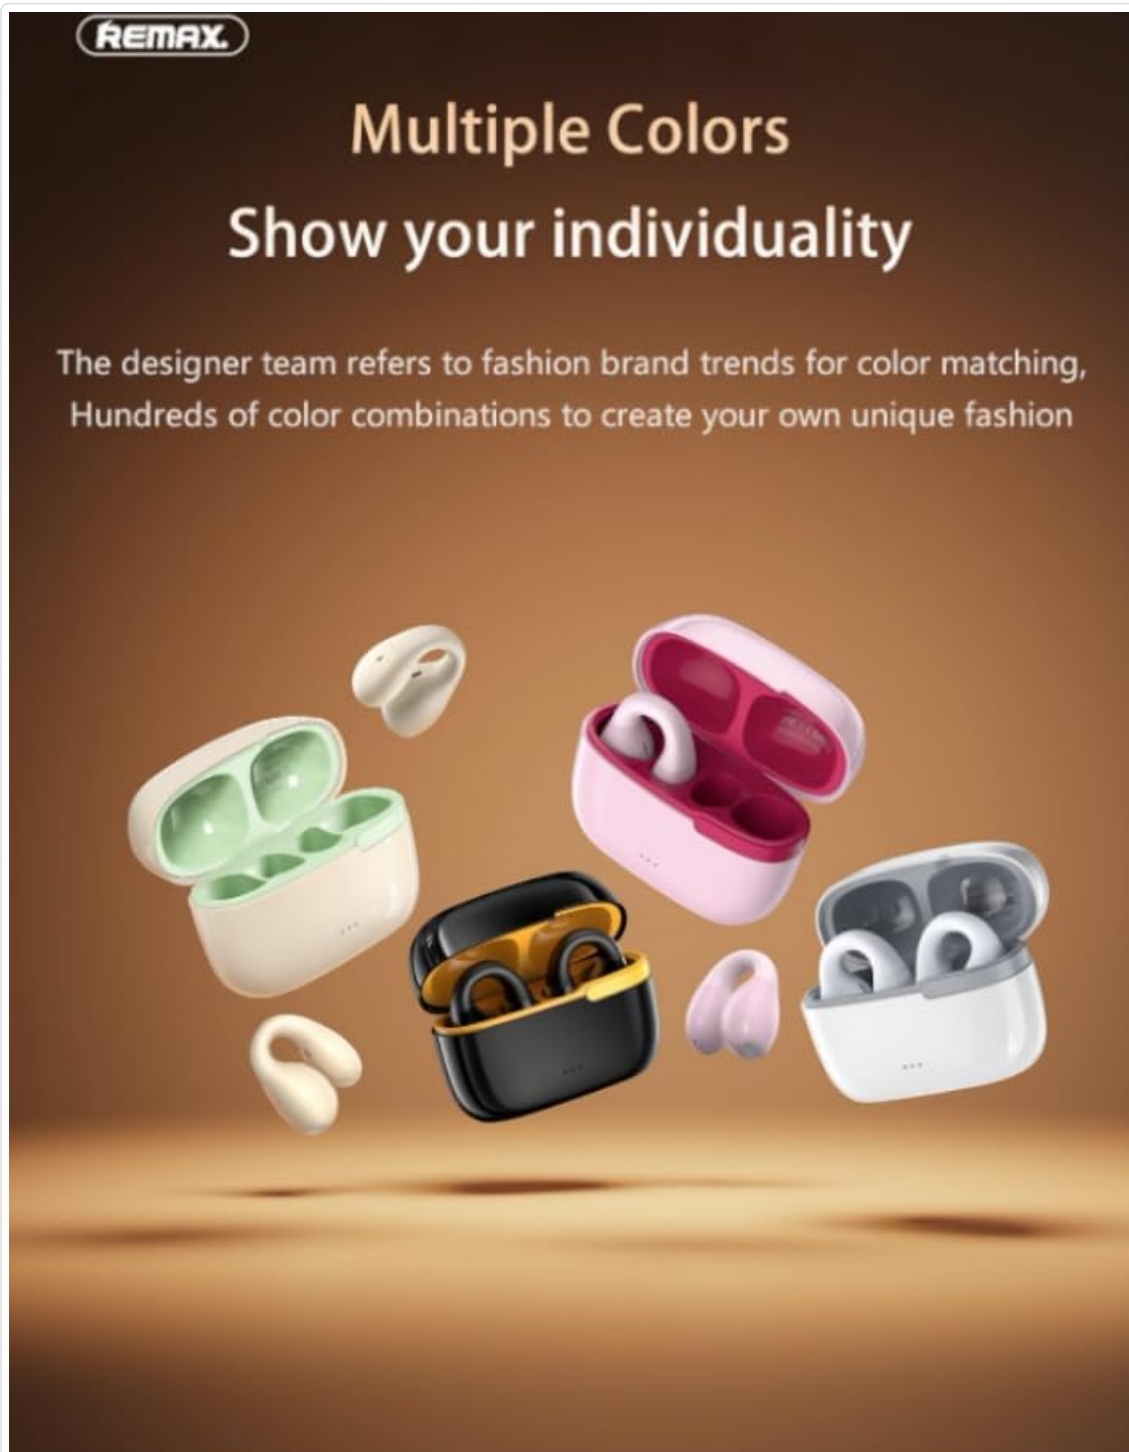


Image: A person wearing the REMAX CozyBuds W11 Earphones. This image demonstrates the proper way to wear the earhook earphones for a secure fit.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case, and the earphones will automatically power on.
- **Power Off:** Place the earphones back into the charging case and close the lid. They will automatically power off and begin charging.

Music and Call Control (Touch Controls)

The CozyBuds W11 feature intuitive touch controls on each earbud. Specific functions may vary slightly by device, but general controls are as follows:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud.
- **Volume Control:** (Specific gesture not detailed in product info, often press and hold left/right for volume down/up, or controlled via device). Please refer to your device's settings or experiment with long presses if not covered by other functions.

REMAX

CozyBuds W11

Directional Transmission Technology



Image: Detailed features of REMAX CozyBuds W11. This image highlights various features including touch operation, sound synchronization, and driver unit details.

Sound Features

The CozyBuds W11 incorporate advanced sound technologies for an enhanced listening experience:

- **HiFi Stereo Sound:** Delivers clear highs, balanced mids, and deep bass.
- **Panoramic Stereo Sound:** Utilizes a 3rd generation human acoustic structure cavity for high frequency transparency, delicate medium frequency, and plump low frequency.
- **Directional Transmission Technology:** Ensures clear sound is accurately transmitted to your ear.
- **Adaptive Directional Sound:** Sound is transmitted through pulse for an open panoramic sound experience.
- **Non In-Ear Design:** Promotes healthy listening and barrier-free communication without removing headphones.

REMAX.

Future Sense Clamp Design



Directional transmission

Clear sound
Accurately to ear



Wearing with Ear Clamping

Elastic soft adhesive
Unable to shake off wildly



Touch operation
Just one touch

**Fully open 360°
Panoramic sound**



Synchronization of sound and picture

low power consumption
Quick connection

[1]



High performance driver unit

Triple frequency enhancement
Natural reduction



90TM Days
Standby time

4TM H
Single ear using time

200TM mAh
Charging case capacity

2TM H
Charging time

Image: Diagram illustrating panoramic stereo sound technology. This image details the internal structure and sound delivery mechanisms for high-quality audio.

REMAX

**HIFI level sound quality
to reveal every detail**



**360° open
panoramic sound**



**Adaptive directional sound
transmitted through pulse**



**low power consumption
fast connection**

Image: Features related to HIFI level sound quality. This image highlights 360° open panoramic sound, adaptive directional sound, and low power consumption.

MAINTENANCE

Cleaning

Regularly clean your earphones and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, or chemical solvents. Avoid getting moisture into any openings.

Storage

When not in use, store the earphones in their charging case. This protects them from dust, damage, and also keeps them charged for your next use. Store in a cool, dry place away from extreme temperatures.

Water Resistance

The CozyBuds W11 earphones are IPX4 water-resistant, meaning they are protected against splashing water from any direction. They are suitable for workouts and light rain but are not designed for submersion in water. Do not expose them to strong jets of water or wear them while swimming or showering.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earphones do not power on.	Low battery.	Place earphones in the charging case and charge fully.
Cannot pair with device.	Bluetooth is off on device; earphones not in pairing mode; too far from device.	Ensure Bluetooth is enabled on your device. Open the charging case to put earphones in pairing mode. Keep earphones within 10 meters of your device.
No sound or poor sound quality.	Volume too low; earphones not properly seated; connection issue.	Adjust volume on your device. Ensure earphones are correctly worn. Re-pair the earphones with your device.
Earphones disconnect frequently.	Interference; low battery; too far from device.	Move away from sources of interference. Charge earphones. Stay within Bluetooth range.

SPECIFICATIONS

- **Model:** CozyBuds W11
- **Brand:** REMAX (Manufacturer) / Generic (Seller Brand)
- **Connectivity:** Wireless (Bluetooth)
- **Form Factor:** Over Ear (Earhook Design)
- **Color:** Black And Yellow
- **Charging Case Capacity:** 200mAh
- **Single Ear Using Time:** Up to 4 hours
- **Total Playback Time:** Up to 24 hours (with charging case)
- **Charging Time:** Approximately 2 hours for case
- **Standby Time:** Up to 90 days
- **Water Resistance Rating:** IPX4 (Sweatproof)
- **Additional Features:** Fast Charging, Intuitive Touch Controls, HiFi Stereo Sound, Panoramic Stereo Sound, Directional Transmission Technology

WARRANTY AND SUPPORT

Your REMAX CozyBuds W11 earphones come with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims or technical support, please contact your retailer or the manufacturer's customer service with your proof of purchase.