



Manuals.plus /

› Haunted Hill Farm /

› Haunted Hill Farm 72-inch Standing Popup Head Witch Animatronic Instruction Manual

Haunted Hill Farm HHWITCH-51FLSA

Haunted Hill Farm 72-inch Standing Popup Head Witch Animatronic Instruction Manual

Model: HHWITCH-51FLSA

INTRODUCTION

Thank you for purchasing the Haunted Hill Farm 72-inch Standing Popup Head Witch Animatronic. This product is designed to provide an engaging and spooky decoration for your indoor or covered outdoor Halloween display. Please read this manual thoroughly before assembly and operation to ensure safe and correct usage.

IMPORTANT SAFETY INFORMATION

- This product is intended for decorative purposes only. It is not a toy. Keep out of reach of small children and pets.
- Use only the specified battery type (4 AA batteries, not included). Do not mix old and new batteries, or different types of batteries.
- Ensure batteries are inserted with correct polarity (+/-).
- Remove batteries if the product is not used for an extended period to prevent leakage.
- For indoor or covered outdoor use only. Protect from direct rain, snow, and extreme weather conditions to prevent damage and ensure longevity.
- Keep away from open flames, heat sources, and flammable materials.
- Do not attempt to modify or repair the product. Refer to the troubleshooting section or contact customer support for assistance.
- Handle with care. The face and hands may be delicate.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1x Animatronic Witch Figure
- 1x Stand Base
- U-shaped Ground Stakes (for outdoor stability)
- Instruction Manual (this document)
- Warranty Information

ASSEMBLY AND SETUP

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Assemble the Stand:** The animatronic comes with an easy two-piece assembly for the stand. Connect the stand components securely according to the diagram.
3. **Attach Animatronic to Stand:** Place the witch figure onto the assembled stand. Ensure it is stable and upright.
4. **Insert Batteries:** Locate the battery compartment, typically at the back of the animatronic's head or body. Open the compartment and insert 4 AA batteries (not included), observing the correct polarity. Close the compartment securely.
5. **Secure Placement:**



EASY TWO-PIECE ASSEMBLY
INCLUDES U-SHAPED STAKES TO SECURE
ANIMATRONIC'S BASE TO THE GROUND

Image: The animatronic witch with a visual representation of its two-piece assembly and the included U-shaped ground stakes for securing the base.

- **Indoor Use:** Place the animatronic on a flat, stable surface where it will not be easily knocked over.
 - **Covered Outdoor Use:** Position the animatronic in a sheltered area, such as a porch or under an awning, protected from direct weather exposure. Use the provided U-shaped ground stakes to secure the stand base to the ground for added stability.
6. **Adjust Poseable Arms:** Gently adjust the animatronic's arms to your desired pose. Avoid excessive force to prevent damage.
 7. **Optional Hanging:** An optional hanging loop is located at the top of the witch's head for alternative display methods. Ensure the hanging point is strong enough to support the animatronic's weight.





Image: A complete view of the 72-inch Standing Popup Head Witch Animatronic, showcasing its full height and design.

OPERATING INSTRUCTIONS

The Haunted Hill Farm Witch Animatronic features touch activation, lights, sound, and a popup head mechanism.

1. **Power On:** Locate the ON/OFF switch, usually near the battery compartment. Switch it to the 'ON' position.
2. **Activation:** The animatronic is touch-activated. A touch or bump will trigger its sequence.



TOUCH ACTIVATED

HEAD POPS UP FOR A JUMP SCARE

Image: A detailed view highlighting the 'Touch Activated' feature, showing the witch's head popping up.

- 3. Features:** When activated, the witch will perform the following actions:
 - **Head Pops Up:** The witch's head will pop up to increase its height and visual impact.



Image: A close-up of the animatronic's two heads, the upper witch head and the lower skull head, both featuring glowing red LED eyes.

- **Eyes Glow Red:** Both the witch's eyes and the skull's eyes will glow with red LED lights.



Image: A detailed shot emphasizing the red LED lights in the witch's eyes, which also flash.

- **Speaks Phrases:** The animatronic will speak two distinct creepy phrases.



Image: A close-up of the witch's face, indicating its ability to speak two phrases.

4. **Power Off:** When not in use, switch the animatronic to the 'OFF' position to conserve battery life.

MAINTENANCE AND CARE

- **Cleaning:** Spot clean the animatronic with a soft, damp cloth. Do not immerse in water or use harsh chemicals.
- **Storage:** When storing, ensure the animatronic is clean and dry. Remove batteries to prevent corrosion. Store in its original packaging or a protective container in a cool, dry place away from direct sunlight.
- **Battery Replacement:** Replace all 4 AA batteries when the animatronic's lights dim or sounds become distorted.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Animatronic does not activate.	<ul style="list-style-type: none"> • Power switch is OFF. • Batteries are dead or incorrectly inserted. • Sensor is obstructed or not triggered. 	<ul style="list-style-type: none"> • Ensure power switch is ON. • Replace batteries with new ones, checking polarity. • Ensure the touch sensor area is clear and a firm touch/bump is applied.
Lights are dim or sound is distorted.	Low battery power.	Replace all 4 AA batteries with new ones.
Head does not pop up.	<ul style="list-style-type: none"> • Mechanism obstruction. • Battery power too low. 	<ul style="list-style-type: none"> • Check for any obstructions around the head mechanism. • Replace batteries.
Product falls over easily.	Unstable placement or insufficient securing.	Ensure the stand is fully assembled and placed on a flat surface. For outdoor use, utilize the U-shaped ground stakes to secure the base.

SPECIFICATIONS

Feature	Detail
Brand	Haunted Hill Farm
Model Number	HHWITCH-51FLSA
UPC	840148730861
Dimensions (H x W x D)	72.04" x 7.87" x 23.62" (approx. 6 feet tall)
Item Weight	3.75 pounds
Material	Plastic
Power Source	4 AA Batteries (not included)
Activation	Touch Activated
Features	Popup Head, Red LED Glowing Eyes, 2 Spooky Phrases
Usage Environment	Indoor or Covered Outdoor Use
Care Instructions	Spot Clean

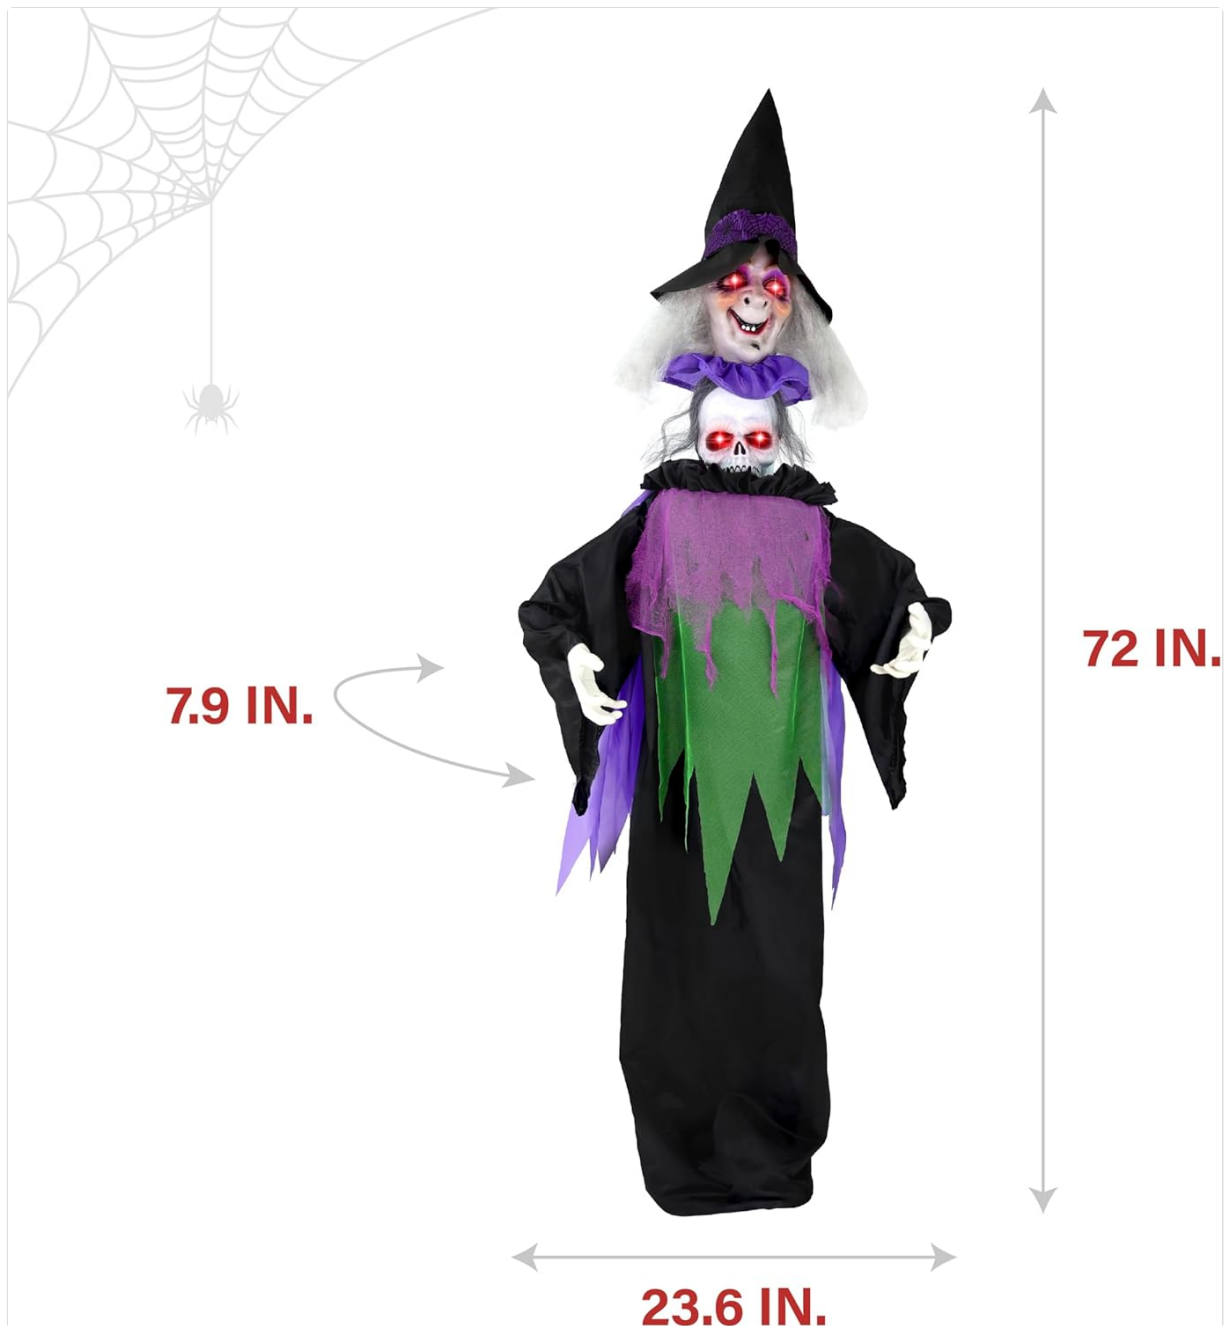


Image: A visual representation of the animatronic witch's dimensions, indicating its height, width, and depth.

WARRANTY INFORMATION

This product includes a manufacturer's warranty. Please refer to the warranty documentation included in your package for specific terms, conditions, and duration. For any warranty-related inquiries, retain your proof of purchase.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter issues not covered in the troubleshooting section, please contact Haunted Hill Farm customer support. Refer to the product packaging or the official Haunted Hill Farm website for the most current contact information.