

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Haunted Hill Farm](#) /
- › [Haunted Hill Farm 6-Ft. Tall Motion-Activated Ghostly Guide Instruction Manual](#)

Haunted Hill Farm HHGHSTLYGDE-5FLSA

Haunted Hill Farm 6-Ft. Tall Motion-Activated Ghostly Guide Instruction Manual

Model: HHGHSTLYGDE-5FLSA

1. INTRODUCTION

Thank you for choosing the Haunted Hill Farm 6-Ft. Tall Motion-Activated Ghostly Guide. This animatronic prop is designed to enhance your Halloween decorations with its motion-activated features, spooky sound effects, and illuminated eyes and lamp. This manual provides essential information for safe setup, operation, and maintenance of your Ghostly Guide.



Image 1.1: The Haunted Hill Farm 6-Ft. Tall Motion-Activated Ghostly Guide.

2. SAFETY INFORMATION

- **Indoor or Covered Outdoor Use Only:** This animatronic is designed for indoor use or covered outdoor areas protected from direct weather exposure. Exposure to rain, snow, or extreme humidity can damage the electronics and void the warranty.
- **Electrical Safety:** Ensure the power outlet used is easily accessible and in good condition. Do not overload electrical circuits. Keep power cords away from heat sources, sharp edges, and foot traffic.
- **Assembly:** Adult assembly is required. Follow all assembly instructions carefully.
- **Stability:** Ensure the prop is placed on a stable, level surface to prevent tipping.
- **Children and Pets:** Keep small children and pets away from the animatronic during operation to prevent accidental injury or damage to the prop.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Animatronic Figure (Ghostly Guide)
- Stand Components
- Instruction Manual
- Warranty Information
- UL Adapter (Power Supply)

4. ASSEMBLY AND SETUP

Assembly is required for this product. Please follow the included hardware and instructions carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Assemble the Stand:** Connect the stand components as per the diagrams in the separate assembly guide. Ensure all connections are secure.
3. **Attach the Animatronic:** Mount the Ghostly Guide figure onto the assembled stand. Secure it firmly to prevent wobbling.
4. **Position the Lantern:** Ensure the lantern is correctly positioned and its wiring is connected if separate.
5. **Connect Power:** Plug the UL adapter into the designated port on the animatronic, then plug the adapter into a standard electrical outlet.
6. **Placement:** Position the Ghostly Guide in your desired indoor or covered outdoor location, ensuring it is stable and clear of obstructions.



EYES LIGHT UP WHITE
AND LAMP LIGHTS UP ORANGE

Image 4.1: Visual reminder that assembly is required for the animatronic.



Image 4.2: Dimensions of the Ghostly Guide: 61 inches deep, 31 inches wide, and 72 inches high.

5. OPERATION

The Ghostly Guide is motion-activated and operates via a plug-in power source.

5.1 Motion Activation

The animatronic features a motion sensor that detects movement up to 6.5 feet away. When motion is detected, the prop will activate its sequence of movements, lights, and sounds.



Image 5.1: The Ghostly Guide's head turns side to side when motion is detected.

5.2 Lights and Movement

Upon activation, the Ghostly Guide's eyes will illuminate with white LED lights, and its lantern will glow with orange LED light. The head will also move from side to side.



ASSEMBLY REQUIRED

**INSTRUCTIONS, HARDWARE AND
UL ADAPTER INCLUDED WITH ITEM**

Image 5.2: The Ghostly Guide features white LED eyes and an orange LED lamp.

5.3 Sound Effects and Phrases

The animatronic plays spooky sound effects, including wind and tolling bells, and speaks three distinct phrases in a low voice. One phrase is: "Come this way, don't resist. Submit yourself to my embrace of death. At least then your suffering will not be as great."



SPEAKS THREE PHRASES

SOUNDS OF BELLS TOLLING

Image 5.3: The Ghostly Guide speaks three spooky phrases accompanied by bell tolling sounds.



**PREMIUM LIFE-SIZE
ANIMATRONIC**



**MAKES NOISE
& SPEAKS**



LIGHTS UP



**PLUG-IN
MOTION SENSOR
ACTIVATED**

Image 5.4: Summary of key features including premium design, sound, lights, and motion activation.

6. MAINTENANCE

To ensure the longevity of your Ghostly Guide, follow these simple maintenance guidelines:

- **Cleaning:** Spot clean the fabric and plastic components with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, disassemble the prop and store it in its original packaging or a protective container in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cord Care:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer support.

7. TROUBLESHOOTING

If you encounter issues with your Ghostly Guide, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Prop does not activate	No power; Motion sensor obstructed or not detecting movement; Power switch off	Check power connection and outlet; Ensure motion sensor is clear and prop is placed where movement occurs; Verify power switch is in the 'ON' position.
Lights not working	Loose connection; Damaged LEDs	Check all internal connections; If LEDs are damaged, contact customer support.
Sound is distorted or absent	Speaker issue; Volume too low; Loose wiring	Ensure no obstructions are blocking the speaker; Check for volume controls if available; Inspect wiring for loose connections.
Head not moving	Mechanism obstructed; Motor issue	Ensure no fabric or objects are impeding head movement; If motor issue, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	HHGHSTLYGDE-5FLSA
Brand	Haunted Hill Farm
Color	6ft Ghostly Guide With Led Eyes
Material	Plastic
Product Dimensions	61"D x 31"W x 72"H
Item Weight	17.2 Pounds
Mounting Type	Freestanding
Power Source	Plug-in Operated (UL Adapter)
Motion Activation Range	Up to 6.5 feet
Assembly Required	Yes
Batteries Required	No
UPC	840148730298

9. WARRANTY INFORMATION

This product includes a warranty. Please refer to the separate warranty document included in your package for details regarding coverage, terms, and conditions. Keep your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For further assistance, questions, or to report any issues not covered in this manual, please contact Haunted Hill Farm customer support. You can find more information and contact details by visiting the official [Haunted Hill Farm Store on Amazon](#).

© 2025 Haunted Hill Farm. All rights reserved.