

PZL Replacement Remote Control

PZL Replacement Remote Control User Manual

For Skyworth Ultra HDR 4K Smart Android TV Models

1. INTRODUCTION

This manual provides instructions for the PZL Replacement Remote Control, designed for seamless operation with various Skyworth Ultra HDR 4K Smart Android TV models. This remote control requires no programming or pairing; simply insert batteries, and it is ready for use.

Compatible Skyworth TV Models:

- 55Q20300
- 65Q20300
- 32E20300
- 55Q20200
- 65Q20200
- 50Q20300

2. SETUP

To begin using your replacement remote control, follow these simple steps for battery installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. **(Batteries are not included)**
4. Close the battery compartment cover securely.

Once batteries are installed, the remote control is ready for immediate use with your compatible Skyworth TV.



Image: The remote control's front and side view, illustrating its dimensions and indicating the battery type (2 x 1.5 AAA Batteries, not included).

3. OPERATING INSTRUCTIONS

The PZL Replacement Remote Control offers intuitive control over your Skyworth Smart Android TV. Familiarize yourself with the button layout for optimal use.

Replacement Remote Control for Ultra Smart Android TV



Image: Front view of the remote control, displaying all buttons and their respective functions for TV operation.

Key Functions:

- **Power Button (Red Circle):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels or input numerical data.
- **INFO:** Displays current program information.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **HOME:** Accesses the TV's main home screen.
- **MENU:** Opens the TV's settings or options menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Volume (+/-):** Adjusts the TV's volume level.
- **Channel (P +/-):** Changes TV channels.
- **Mute (Speaker with X):** Mutes or unmutes the TV audio.
- **Dedicated App Buttons:** Quick access to YouTube, Google Play, Netflix, and Prime Video.
- **Media Control Buttons:** Play, Pause, Fast Forward, Rewind, Stop for media playback.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies by application or TV menu.

The remote utilizes advanced IR technology, providing a responsive experience with a range of up to 12 meters (40 feet) and multi-angle control up to 120 degrees.



Image: Illustration demonstrating the remote control's effective long-range (up to 26 feet shown, actual up to 40 feet) and wide multi-angle control (120 degrees).

4. MAINTENANCE

Proper care and maintenance will extend the life of your remote control:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. Avoid using liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries promptly when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA 1.5V).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, which can damage internal circuitry.

5. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following troubleshooting tips:

- **Remote Not Responding:**
 - Ensure the batteries are correctly inserted with the proper polarity (+/-).
 - Replace old batteries with new AAA 1.5V batteries.
 - Check for any obstructions between the remote control and the TV's infrared (IR) receiver.
 - Ensure you are within the operational range of approximately 12 meters (40 feet) from the TV.
- **Specific Buttons Not Working:**
 - Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.
 - If only certain buttons are not working after checking batteries, the remote may be damaged.
- **Interference:**
 - Bright lights or other electronic devices can sometimes interfere with the IR signal. Try operating the remote in a different environment or adjusting lighting.

If these steps do not resolve the issue, please contact the seller for further assistance.

6. SPECIFICATIONS

Product Name	PZL Replacement Remote Control
Brand	PZL
Compatible Devices	Skyworth Ultra HDR 4K Smart Android TVs
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA 1.5V Batteries (not included)
Maximum Range	Approximately 12 meters (40 feet)
Color	Black
Parcel Dimensions	3.81 x 2.54 x 1.52 cm
Weight	54.43 g
Special Feature	No Programming Required

7. WARRANTY AND SUPPORT

For any questions regarding your order, product compatibility, or technical support, please contact the seller directly through your purchase platform. Please refer to your purchase documentation for specific warranty information provided by the seller.

