

CoasTeering Planet

CoasTeering Planet Robotic Pool Cleaner Instruction Manual

Model: Planet

INTRODUCTION

Thank you for choosing the CoasTeering Planet Robotic Pool Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pool cleaner. Please read this manual thoroughly before using the product and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of injury or damage:

- Read all instructions before operating the appliance.
- Do not operate the cleaner when people or animals are in the pool.
- Ensure the charging port is dry before connecting the charger.
- Use only the charger supplied by the manufacturer.
- Keep the cleaner out of reach of children.
- Do not use the cleaner for purposes other than cleaning swimming pools.
- Avoid operating the cleaner if the water temperature is outside the recommended range (typically 10°C to 35°C / 50°F to 95°F).
- Always remove the cleaner from the pool before adding chemicals or performing maintenance on the pool itself.

PRODUCT OVERVIEW

The CoasTeering Planet Robotic Pool Cleaner is designed for efficient cleaning of above-ground and flat-floored in-ground pools. It features dual motors, dual suction ports, and dual brushes for powerful cleaning performance.



Image: The CoasTeering Planet Robotic Pool Cleaner, a compact unit with an orange handle and blue-grey body.

Advanced Filtration System



2X Motors



2X Suction Ports



180µm Filter



Image: An exploded view of the pool cleaner, illustrating its internal components including dual motors, dual suction ports, and the 180µm filter system.

PACKAGE CONTENTS

Verify that all items are present in the package:

- CoasTeering Planet Robotic Pool Cleaner Unit
- Power Adapter/Charger
- Retrieval Hook
- Instruction Manual

SETUP

1. Charging the Cleaner

Before first use, fully charge the robotic pool cleaner.

1. Ensure the cleaner is dry and clean before charging.
2. Connect the power adapter to the charging port on the cleaner.
3. Plug the adapter into a power outlet.
4. The charging indicator light will illuminate. A full charge takes approximately 2.5 hours.



Image: The robotic pool cleaner connected to its charger, illustrating the fast charging capability.

2. Initial Placement in Pool

Once fully charged, the cleaner is ready for deployment.

1. Carefully place the cleaner into the pool.
2. Allow it to sink to the bottom.

OPERATING INSTRUCTIONS

1. Activating the Cleaner

The cleaner operates with a simple one-click activation.

1. Once the cleaner is at the bottom of the pool, press the power button located on the top of the unit.
2. The indicator lights will confirm activation, and the cleaner will begin its cleaning cycle.

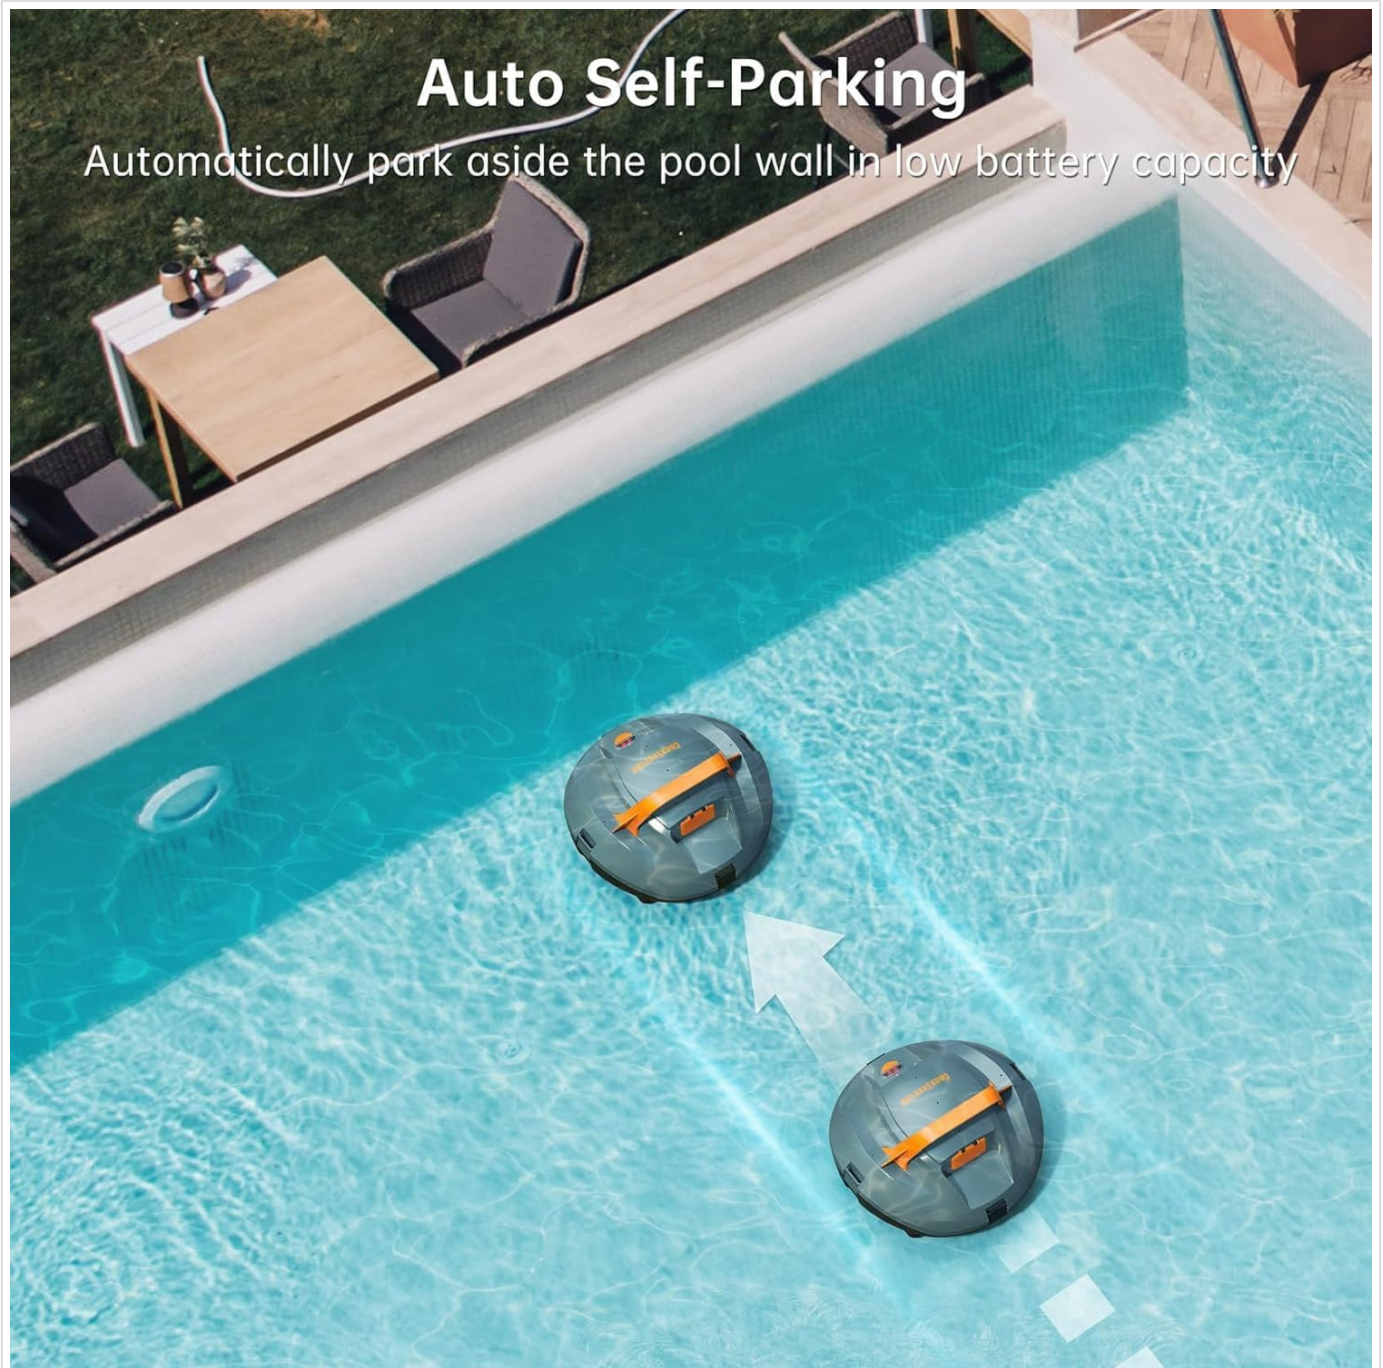


Image: A close-up view of the power button on the cleaner, highlighting its one-click activation feature.

2. Cleaning Cycle

The CoasTeering Planet is designed for efficient cleaning of flat-floored pools up to 850 sq.ft.

- The cleaner provides over 100 minutes of continuous cleaning on a full charge.
- It navigates the pool floor, collecting debris, leaves, sand, and small stones.

Cleaning Time Increased By 100%

Suitable for flat floored pools with no slopes up to 33ft in length



Image: An aerial view of a pool with the robotic cleaner operating, indicating a 100-minute cleaning time for up to 850 sq.ft.

3. Self-Parking Feature

When the battery is low, the cleaner will automatically move to the edge of the pool for easy retrieval.

One-Click Activation



Image: Two robotic pool cleaners in a pool, one moving towards the edge, demonstrating the self-parking function.

4. Retrieving the Cleaner

Use the provided retrieval hook to safely remove the cleaner from the pool.

1. Attach the retrieval hook to a standard pool pole (not included).
2. Hook the cleaner's handle and lift it out of the water.
3. Allow excess water to drain before placing it on a dry surface.

Lightweight and Easy to Retrieve



Image: A person using a pole with a hook to retrieve the robotic pool cleaner from the water.

5. Pool Compatibility

This cleaner is suitable for flat-floored above-ground pools or in-ground pools with no slopes. It works effectively on PVC, vinyl, mosaic concrete, and fiberglass surfaces.

Suitable for Above Ground Pools and Flat Floored Pools

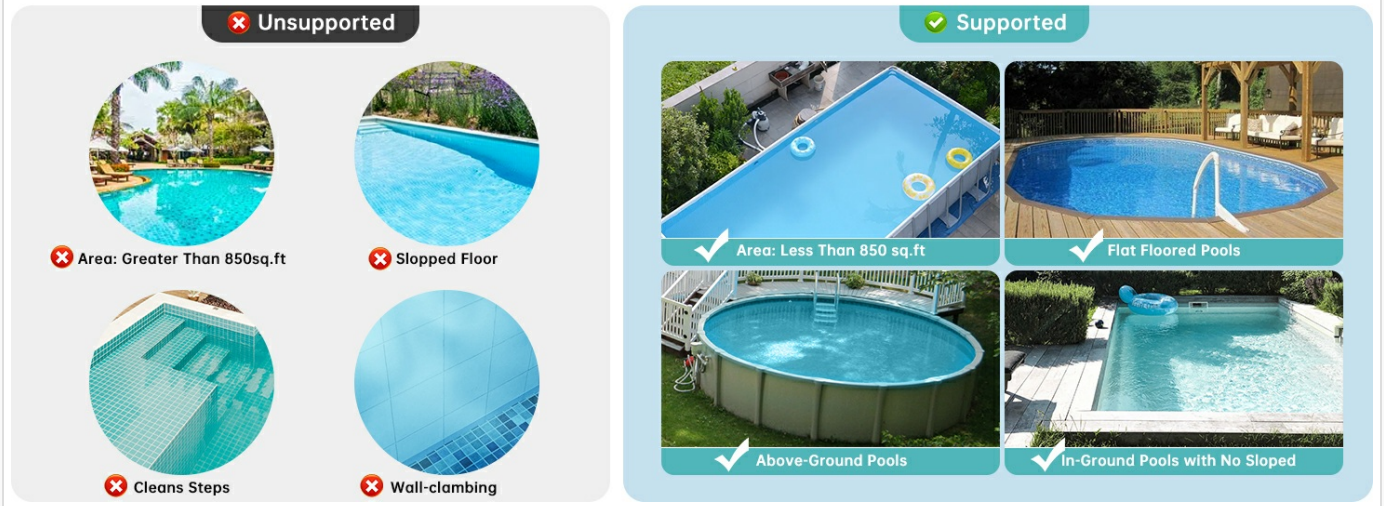


Image: A visual guide illustrating various pool types, clearly marking which are supported (flat-floored, above-ground, in-ground with no slopes) and unsupported (sloped floors, steps, wall-climbing).

MAINTENANCE

1. Cleaning the Filter

Regularly clean the filter to maintain optimal cleaning performance.

1. After each cleaning cycle, remove the cleaner from the pool.
2. Open the cleaner's cover to access the filter basket.
3. Remove the filter basket and empty any collected debris.
4. Rinse the filter basket thoroughly with a garden hose until clean.
5. Reinsert the clean filter basket and close the cover securely.



Image: A person cleaning the filter basket of the robotic pool cleaner with a hose, showing debris being washed away.

2. General Cleaning and Storage

- Wipe down the exterior of the cleaner with a soft, damp cloth.
- Store the cleaner in a cool, dry place away from direct sunlight when not in use.
- Ensure the battery is charged periodically during long storage periods to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cleaner does not turn on.	Low battery; Power button not pressed correctly.	Charge the cleaner fully; Press the power button firmly until indicator lights appear.
Cleaner moves slowly or stops mid-cycle.	Clogged filter; Low battery; Obstruction.	Clean the filter basket; Recharge the cleaner; Check for and remove any obstructions.

Problem	Possible Cause	Solution
Poor cleaning performance.	Clogged filter; Insufficient charge; Pool surface not compatible.	Clean the filter basket; Ensure cleaner is fully charged; Verify pool type is flat-floored and within size limits.
Cleaner gets stuck.	Wrinkles in pool liner; Uneven pool floor; Obstruction.	Ensure pool liner is smooth; Remove any large debris; This cleaner is designed for flat-floored pools.

SPECIFICATIONS

- **Model Name:** Planet
- **Brand:** CoasTeering
- **Power Source:** Battery Powered
- **Battery Type:** 1 Lithium Ion (included)
- **Battery Capacity:** 4000mAh (44.4 Watt Hours)
- **Charging Time:** Approximately 2.5 Hours
- **Runtime:** Over 100 Minutes
- **Max Pool Area:** Up to 850 sq.ft
- **Product Dimensions:** 13 x 13 x 8.6 inches
- **Item Weight:** 10.41 pounds (4.73 Kilograms)
- **Special Features:** Dual brushes, dual powerful motors, dual suction ports, one-click activation, self-parking technology
- **Control Method:** Touch
- **Material:** Plastic

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact CoasTeering customer service through the retailer where the product was purchased. Please have your model number (Planet) and purchase date available when contacting support.

© 2024 CoasTeering. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does my CoasTeering Planet Robotic Pool Cleaner beep when I try to charge it?

If your CoasTeering Planet Robotic Pool Cleaner is beeping when you attempt to charge it, it typically indicates a connection issue or a safety protection mode. Please check the following: Dry the Charging Port: The...

[Read full answer](#)

Why won't my CoasTeering Planet pool vacuum charge even though the charger light is green?

Based on the CoasTeering Planet manual and common troubleshooting for this model, if your charger shows a green light but the vacuum is not charging, please check the following: Dry the Charging Port: The manual...

[Read full answer](#)

Why is my CoasTeering Planet Robotic Pool Cleaner flashing green and blue after I replaced the charger and performed a hard reset?

Based on the CoasTeering Planet manual and standard robotic pool cleaner behavior, a flashing light sequence typically indicates a specific status or error code. While the manual does not explicitly define a "green and...

[Read full answer](#)