

[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Sport Kids Watch 27/1005 Instruction Manual

Armitron 27-1005NRD

Armitron Sport Kids Watch Instruction Manual

Model: 27-1005NRD

1. INTRODUCTION

Thank you for choosing the Armitron Sport Kids Easy to Read Patterned Silicone Strap Watch. This manual provides essential information for the proper use, care, and maintenance of your new timepiece. Designed for durability and ease of use, this watch is suitable for children aged 6 and up.





Figure 1.1: Front view of the Armitron Sport Kids Watch, showcasing its blue resin case, white dial with orange Arabic numerals, and red silicone strap with airplane designs.

Product Features:

- **Blue Resin Case:** Durable and lightweight for active children.
- **Mineral Crystal Lens:** Provides scratch resistance for daily wear.
- **White Dial with Multicolored Hands:** Features orange easy-to-read Arabic numerals for clear time telling.
- **Red Silicone Strap with Airplane Design:** Comfortable, flexible, and features a secure buckle closure.
- **Water Resistance:** Rated for 100 feet (30 meters), suitable for splashes and brief immersion.
- **Japanese Quartz Movement:** Ensures accurate timekeeping.

2. INITIAL SETUP

Setting the Time:

1. **Locate the Crown:** The crown is the small knob located on the right side of the watch case.
2. **Pull Out the Crown:** Gently pull the crown outwards until you feel a click. The watch hands will stop moving.





Figure 2.1: Side view illustrating the watch crown.

3. **Adjust the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
4. **Push In the Crown:** Once the time is set, push the crown back into its original position. The watch will resume normal operation.

3. OPERATING INSTRUCTIONS

Reading the Time:

The watch features a clear analog display designed for easy readability by children. The large orange Arabic numerals mark the hours, while smaller minute markers are present around the dial. The watch has three distinct hands:

- **Hour Hand:** The shorter, broader hand indicates the hour.
- **Minute Hand:** The longer, thinner hand indicates the minutes.
- **Second Hand:** The very thin, sweeping hand indicates the seconds.



Figure 3.1: Children wearing the watch during play, highlighting its comfortable fit and clear display.

Water Resistance:

This watch is water resistant to 100 feet (30 meters). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is *not* recommended for swimming, showering, or diving, as prolonged exposure to water or high-pressure water jets can compromise the seals.

Important: Do not operate the crown while the watch is wet or submerged, as this can allow water to enter the watch case.

4. CARE AND MAINTENANCE

Cleaning Your Watch:

To keep your Armitron Sport watch looking its best, follow these cleaning guidelines:

- **Case and Crystal:** Wipe the watch case and mineral crystal lens with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by wiping with a clean, damp cloth.
- **Silicone Strap:** The silicone strap can be cleaned with mild soap and water. Rinse thoroughly and dry completely.

before wearing.





Figure 4.1: Rear view of the watch, showing the silicone strap and buckle.

General Care:

- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Keep the watch away from strong magnetic fields, as these can affect the accuracy of the quartz movement.
- Do not expose the watch to harsh chemicals, solvents, or detergents, as these can damage the case, strap, or seals.
- If the watch is exposed to saltwater, rinse it with fresh water immediately and dry thoroughly.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch is not running.	Battery may be depleted.	Replace the battery. This should be done by a qualified watch technician.
Time is inaccurate.	Crown is not fully pushed in. Watch exposed to strong magnetic field.	Ensure the crown is fully pushed in. Move the watch away from magnetic sources. If inaccuracy persists, a battery replacement or professional inspection may be needed.
Condensation inside the crystal.	Water ingress due to damaged seal or crown not fully pushed in.	Immediately take the watch to a qualified watch technician for inspection and repair to prevent further damage.

6. SPECIFICATIONS

Feature	Detail
Model Number	27-1005NRD
Movement	Japanese Quartz
Case Material	Resin
Lens Material	Mineral Crystal
Strap Material	Silicone
Water Resistance	30 meters (100 feet)

Feature	Detail
Package Dimensions	10.2 x 2.76 x 1.3 inches
Item Weight	3 ounces
Manufacturer	Armitron Sport

7. WARRANTY AND SUPPORT

Warranty Information:

Armitron watches are typically covered by a limited warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty. Keep your proof of purchase for warranty claims.

Customer Support:

For further assistance, technical support, or warranty service, please contact Armitron customer service. You can find contact information on the official Armitron website or on the packaging of your product. For more information, visit the official Armitron website:www.armitron.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6CCL457>

More documents and user manuals: <https://manuals.plus/>