

- Manuals.plus /
- > [ECONTROLLY](#) /
  - > User Manual for ECONTROLLY 076R074050 Replacement Remote Control

ECONTROLLY 076R074050

# User Manual for ECONTROLLY 076R074050 Replacement Remote Control

Compatible with Orion TV Models: TV1325A, TV1318C, TV1925A, TV1326, TV1926AC, TV1928, TV1318A

## PRODUCT OVERVIEW

The ECONTROLLY 076R074050 is a replacement remote control designed for various Orion TV models. It is made from durable ABS material, ensuring wear-resistance and a long operational life. This remote control requires no programming or setup, making it ready for use immediately after battery installation.





Image: Front view of the ECONTROLLY 076R074050 replacement remote control, showing all buttons clearly.

## SETUP AND BATTERY INSTALLATION

---

This remote control does not require any programming or complex setup. Simply install the batteries, and it will be ready for use with compatible Orion TV models.

### Battery Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA-LR03 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: View of the remote control's battery compartment, showing where to insert two AAA batteries.

## OPERATING INSTRUCTIONS

The 076R074050 remote control provides full functionality for compatible Orion TV models. Its design is intuitive, mirroring the layout and functions of the original remote.

### Compatible TV Models:

- Orion TV1926AC
- Orion TV1928
- Orion TV1318A
- Orion TV1325A
- Orion TV1318C
- Orion TV1925A
- Orion TV1326

### Key Functions:

| Button               | Function                                                                       |
|----------------------|--------------------------------------------------------------------------------|
| POWER                | Turns the TV on or off.                                                        |
| MUTE                 | Mutes or unmutes the TV sound.                                                 |
| MENU                 | Accesses the TV's main menu.                                                   |
| RESET                | Resets certain TV settings (refer to TV manual for specifics).                 |
| ENTER                | Confirms selections in menus.                                                  |
| VOL +/-              | Adjusts the volume level.                                                      |
| CH +/-               | Changes TV channels.                                                           |
| CH.1/2 CAPTION TEXT  | Toggles closed captions or text modes.                                         |
| TV                   | Switches to TV input mode.                                                     |
| SLEEP                | Activates the sleep timer function.                                            |
| 0-9 (Number Buttons) | Direct channel selection.                                                      |
| QUICK VIEW           | Switches between the current and previously viewed channel.                    |
| CALL                 | Function may vary by TV model; typically for on-screen display or information. |



Image: A visual comparison showing the ECONTROLLY replacement remote control next to an original Orion TV remote, highlighting their similar layouts.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your remote control.

### Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the surface or internal components.

### Battery Replacement:

- Replace batteries when the remote's response becomes sluggish or it stops functioning.
- Always replace both batteries at the same time with new ones of the same type (AAA-LR03 1.5V).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with fresh ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Make sure you are within the effective range of the TV's sensor.
- **Certain buttons not working:**
  - This could indicate a specific button malfunction or a compatibility issue with that particular function on your TV model.
  - Ensure the remote is pointed directly at the TV.
- **Remote works intermittently:**
  - Batteries may be low; replace them.
  - Ensure a clear line of sight to the TV.

If the issue persists after trying these steps, please refer to the Support section for further assistance.

## SPECIFICATIONS

| Feature            | Detail                                                               |
|--------------------|----------------------------------------------------------------------|
| Model Number       | 076R074050                                                           |
| Brand              | ECONTROLLY                                                           |
| Compatible Devices | Orion Televisions (Specific models listed in Operating Instructions) |
| Power Source       | 2 x AAA-LR03 1.5V Batteries (not included)                           |
| Material           | ABS                                                                  |
| Color              | Black                                                                |
| Product Dimensions | 6 x 3 x 0.5 inches (approximately 15.24 x 7.62 x 1.27 cm)            |
| Item Weight        | 2 ounces (approximately 56.7 grams)                                  |
| Special Feature    | Ergonomic design                                                     |



16 cm / 6.3 in



Image: Diagram showing the approximate dimensions of the remote control: 16 cm (6.3 inches) in length and 4.3 cm (1.69 inches) in width.

## SUPPORT AND CONTACT

If you have any questions regarding the compatibility or functionality of your ECONTROLLY 076R074050 replacement remote control, please do not hesitate to contact us.

For assistance, you can leave a message online where you purchased the product, and we will provide guidance and suggestions. All of our products undergo testing before shipping to ensure proper functionality.

© 2024 ECONTROLLY. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6FL1JK7>

More documents and user manuals: <https://manuals.plus/>