

[Manuals.plus](#) /

› [ELPHECO](#) /

› ELPHECO 16-Gallon Stainless Steel Motion Sensor Trash Can Instruction Manual

ELPHECO ELPHECO 16-Gallon Motion Sensor Trash Can

ELPHECO 16-Gallon Stainless Steel Motion Sensor Trash Can Instruction Manual

Model: ELPHECO 16-Gallon Motion Sensor Trash Can

INTRODUCTION

Thank you for choosing the ELPHECO 16-Gallon Stainless Steel Motion Sensor Trash Can. This automatic, touch-free waste bin is designed for convenience and hygiene in various environments such as kitchens, offices, bedrooms, and bathrooms. This manual provides essential information for proper assembly, operation, and maintenance to ensure optimal performance and longevity of your product.



Image: The ELPHECO 16-Gallon Stainless Steel Motion Sensor Trash Can.

PACKAGE CONTENTS

- Lid with Motion Sensor Unit
- Two Stainless Steel Body Panels
- Two Fixing Straps (Side Connectors)
- Base Unit
- Bag Retaining Ring
- Instruction Manual
- Custom Fit Trash Bags (Starter Roll)

SETUP AND ASSEMBLY

Follow these steps to assemble your ELPHECO Motion Sensor Trash Can. No complicated tools are required.

1. **Insert Body Panels into Base:** Place the two stainless steel body panels into the designated slots on the base unit. Ensure they are securely seated.
2. **Install Fixing Straps:** Attach the two fixing straps along the vertical edges where the body panels meet. These straps help secure the panels together.
3. **Install Bag Retaining Ring:** Place the bag retaining ring onto the top edge of the assembled body. Snap it into the left and right slots to secure it.
4. **Place the Lid:** Position the lid with the motion sensor unit onto the bag retaining ring. Ensure it is properly aligned.
5. **Install Batteries:** Open the battery compartment on the underside of the lid and insert 3 AA batteries (not included) according to the polarity markings. Close the compartment securely.



Image: Visual guide for the four-step assembly process.

Your browser does not support the video tag.

Video: Detailed assembly and operation instructions for the ELPHECO Kitchen Trash Can.

OPERATING INSTRUCTIONS

The ELPHECO Motion Sensor Trash Can offers both automatic and manual operation modes.

Motion Sensor Operation

- To activate the motion sensor, ensure the power switch (usually on the back or underside of the lid) is in the 'ON' position.
- Wave your hand or approach the sensor area (typically at the front of the lid). The lid will open automatically within 0.3 seconds.
- The lid will remain open for a few seconds to allow for waste disposal and then close softly and silently.



Image: The trash can lid opening quickly via motion sensor.

Long Open Mode (Manual Operation)

- For extended use, such as during food preparation, press the 'Long-Open Button' (often marked with an 'L' or an open lid icon) on the control panel.
- The lid will open and remain open until you press the 'Close Button' (often marked with a square or closed lid icon) or the

'Long-Open Button' again.



Image: Close-up of the control panel showing the Long-Open and Turn Off buttons.

Your browser does not support the video tag.

Video: Demonstrates the motion sensor and manual long-open features of the ELPHECO Kitchen Sensor Trash Can.

MAINTENANCE

Changing Trash Bags

- Remove the lid from the trash can.
- Lift the bag retaining ring to access the trash bag.
- Carefully remove the full trash bag.
- Place a new custom-fit trash bag (Code C recommended) into the bin, ensuring the top edge is neatly tucked under the retaining ring.

- Replace the bag retaining ring and then the lid.



Image: Visual guide for installing a new trash bag.

Cleaning

- The trash can features a fully detachable design, allowing for easy cleaning of the outer container.
- Wipe the exterior with a soft, damp cloth and a mild detergent. Avoid abrasive cleaners or harsh chemicals.
- For the interior, wipe down with a damp cloth and disinfectant as needed. Ensure the interior is dry before placing a new trash bag.
- Do not immerse the lid with the electronic components in water.



ASSEMBLE



DISASSEMBLE

Image: The trash can in assembled and disassembled states, highlighting its detachable design for easy cleaning.

SPECIFICATIONS

Feature	Detail
Capacity	16 Gallons
Dimensions (L x W x H)	18.1" x 10.2" x 26"
Material	Stainless Steel
Opening Mechanism	Motion Sensor, Manual Button
Power Source	3 AA Batteries (not included)
Special Features	Touch-free operation, Detachable design, Soft-closing lid, Long open mode, Large diameter opening



Image: Detailed dimensions of the ELPHECO trash can.

TROUBLESHOOTING

If you encounter issues with your ELPHECO Motion Sensor Trash Can, please refer to the following common solutions:

- **Lid not opening/closing:** Check if the batteries are correctly installed and have sufficient power. Replace batteries if necessary. Ensure the power switch is in the 'ON' position.
- **Sensor not responding:** Ensure there are no obstructions blocking the motion sensor. Clean the sensor area if it appears dirty.
- **Lid closing too quickly/slowly:** This unit is designed for soft-closing. If the mechanism seems off, ensure no debris is interfering with the lid's movement.
- **Trash bag difficult to remove:** Ensure the bag is not overfilled. The detachable design and retaining ring are intended to ease bag changes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question