

EPOCH 7514

EPOCH Games Jurassic World T-Rex Panic Action Game

Instruction Manual - Model 7514

INTRODUCTION

Welcome to the Jurassic World T-Rex Panic Action Game by EPOCH Games. This game allows 2 to 4 players to experience an adventure in Jurassic World, attempting to escape dinosaurs and the formidable T-Rex. Follow these instructions to set up and play the game correctly.

SAFETY INFORMATION

WARNING: CHOKING RISK - Small parts. Not for children under 3 years old.

Always supervise young children during play. Keep all game components away from infants and pets to prevent accidental ingestion.

PACKAGE CONTENTS

Before starting, ensure all components are present. Refer to the image below for a visual guide to the game contents.

- Main unit (T.Rex with gate) x1
- Dice x2 (2 types x 1 each)
- Game board x1
- Dinosaur card x12
- Character base x8
- Paper sheet (Ranger paper plate x6, Dinosaur paper plate x4, Life chip x8, Outbuilding)



Image: All game components included in the box.

SETUP

Follow these steps to prepare your game for play:

1. **Assemble the T-Rex Gate:** Carefully attach the gate pieces to the main T-Rex unit. Ensure it is stable.
2. **Place the Game Board:** Unfold the game board and place it on a flat surface. Position the T-Rex gate unit at the designated area on the board.
3. **Prepare Characters and Dinosaurs:** Punch out the Ranger and Dinosaur paper plates from the paper sheet. Insert each paper plate into a character base.
4. **Distribute Cards and Chips:** Shuffle the Dinosaur cards and place them face down in their designated spot on the game board. Place the Life chips and Outbuilding pieces nearby.
5. **Player Setup:** Each player selects a Ranger character and places it on the 'START' space on the game board.



Image: Game board and T-Rex gate assembled and ready.



OPERATING: HOW TO PLAY

The objective of Jurassic World T-Rex Panic is to escape the island by reaching the rescue helicopter before the T-Rex or other dinosaurs catch you.

Game Flow

1. **Player Turn:** On your turn, roll both dice. One die indicates movement spaces, and the other indicates a special action or dinosaur encounter.
2. **Movement:** Move your Ranger character the number of spaces indicated by the movement die. You must follow the path on the game board.
3. **Space Actions:** Landing on certain spaces may trigger specific events, such as drawing a Dinosaur card, gaining a Life chip, or hiding in an Outbuilding.
4. **Dinosaur Encounters:** If you land on a space with a dinosaur icon or draw a Dinosaur card, follow the instructions on the card. This may involve moving a dinosaur piece or facing a challenge.
5. **T-Rex Panic:** When a player passes the T-Rex gate area, or a specific die roll occurs, the T-Rex mechanism may activate. Press the button on the T-Rex unit. The T-Rex may lunge forward, potentially knocking over Ranger characters in its path. Any Ranger knocked over loses a Life chip.
6. **Losing Life Chips:** If a Ranger loses all Life chips, that player is out of the game.
7. **Reaching the Helicopter:** The first player to reach the 'HELICOPTER' space and successfully avoid the T-Rex wins the game.



Image: Example of gameplay during a player's turn.

• Contents • Contenu • Contenido • Conteúdo
• Inhalt • Inhoud • Contenuti • Комплектность



Image: A Ranger character successfully reaching the escape helicopter.

MAINTENANCE

To ensure the longevity of your game:

- Store all components in the original box or a suitable container to prevent loss or damage.
- Keep the game away from direct sunlight and extreme temperatures.
- Clean game pieces with a dry, soft cloth. Do not use abrasive cleaners or solvents.
- Handle paper components and cards with care to avoid bending or tearing.

TROUBLESHOOTING

- **Missing Components:** If any components are missing upon opening, please contact customer support with your purchase details.
- **T-Rex Mechanism Not Activating:** Ensure the T-Rex unit is correctly assembled and placed on the game board. Check for any obstructions around the activation button.
- **Game Pieces Falling Over:** Ensure character bases are securely attached to the paper plates. Play on a stable, flat surface to prevent accidental tipping.

SPECIFICATIONS

- **Brand:** EPOCH
- **Model Number:** 7514
- **Item Type Name:** Jurassic World T-Rex Panic
- **Number of Players:** 2-4
- **Minimum Age Recommendation:** 60 months (5 years)
- **Material Type:** Plastic
- **Item Dimensions:** 23.62 x 15.75 x 0.1 inches (Game Board)
- **Assembly Required:** No (minor setup of standees and gate)

- **Batteries Required:** No

WARRANTY AND SUPPORT

This product comes with a **2 Year Limited Warranty** from the manufacturer, EPOCH. For warranty claims, missing parts, or technical support, please contact EPOCH customer service. Retain your proof of purchase for warranty validation. For further assistance, please visit the official EPOCH Games website or contact their customer support channels.

© 2024 EPOCH Games. All rights reserved. Jurassic World is a trademark and copyright of Universal Studios and Amblin Entertainment, Inc. Licensed by Universal Studios. All Rights Reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question