

- Manuals.plus /
- › [STRICH](#) /
 - › STRICH SPB-S10 P-Style Electric Bass Guitar Beginner Kit Instruction Manual

STRICH SPB-S10

STRICH SPB-S10 P-Style Electric Bass Guitar Beginner Kit Instruction Manual

Model: SPB-S10 | Brand: STRICH

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your STRICH SPB-S10 P-Style Electric Bass Guitar Beginner Kit. This kit is designed for new players and includes a full-size electric bass guitar, a portable amplifier, a gig bag, a tuner, a strap, a cable, and a cleaning cloth. Please read this manual thoroughly before using your instrument to ensure proper handling and longevity.



Image: The STRICH SPB-S10 P-Style Electric Bass Guitar in Sunburst finish, accompanied by its gig bag, amplifier, and accessories.

Kit Contents

Your STRICH SPB-S10 Electric Bass Guitar Beginner Kit includes the following items:

- STRICH SPB-S10 P-Style Electric Bass Guitar (Sunburst finish)
- Portable 20W Amplifier (with Bluetooth 5.1, 3.7V/3000mAh battery, 10W rated power, 30 Ohm headphone output)
- Gig Bag (Nylon material, waterproof)
- Electronic Tuner
- Adjustable Shoulder Strap
- 10 ft Instrument Cable (6.35mm Jack)
- Cleaning Cloth

ALL-IN-ONE FULL STARTER KIT



PORTABLE

Mini speaker



HIGH QUALITY

Nylon material waterproof backpack



- **BATTERY**
3.7V/3000mAh



- **HEADPHONE**
30 Ohm

- **BLUETOOTH**
VERSION 5.1

- **RATED POWER**
10W



Tuner



10 ft guitar line



Shoulder straps



Seamless cloth



Image: Detailed view of all components included in the STRICH SPB-S10 Electric Bass Guitar Beginner Kit, showing the bass guitar, amplifier, gig bag, tuner, strap, cable, and cleaning cloth with descriptive labels.

SETUP

1. Unpacking and Inspection

Carefully remove all items from the packaging. Inspect the bass guitar and accessories for any signs of damage. Retain

the packaging for future transport or storage.

2. Attaching the Strap

Locate the two strap buttons on the bass guitar. One is typically on the lower bout (bottom edge) and the other on the upper horn. Securely attach each end of the adjustable strap to these buttons. Ensure the strap is firmly attached before letting go of the instrument.

3. Connecting to the Amplifier

1. Ensure the amplifier is turned off and its volume is set to minimum.
2. Insert one end of the 10 ft instrument cable into the output jack on the bass guitar (usually on the front edge of the body).
3. Insert the other end of the instrument cable into the input jack on the amplifier.
4. Turn on the amplifier.

4. Tuning the Bass Guitar

Use the included electronic tuner to accurately tune your bass guitar. The standard tuning for a 4-string bass is E-A-D-G (from thickest to thinnest string).

1. Attach the tuner to the headstock of the bass guitar.
2. Pluck each string individually. The tuner display will show the note being played.
3. Adjust the corresponding tuning peg on the headstock until the tuner indicates the correct note (E, A, D, or G) and shows it is in tune (e.g., a green light or centered needle).
4. Repeat for all four strings.

STRICH RIGHT-HAND-PLAYED ELECTRIC GUITAR

Suitable for guitar lovers of all stages



Image: Diagram illustrating the key components of the STRICH SPB-S10 electric bass guitar, including the headstock with tuning pins, maple neck, basswood fretboard, poplar body, and double pickup.

OPERATING

1. Bass Guitar Controls

The STRICH SPB-S10 P-Style bass guitar features two metal control knobs:

- **Volume Knob:** Controls the overall output level of the bass guitar. Turn clockwise to increase volume, counter-clockwise to decrease.
- **Tone Knob:** Adjusts the tonal characteristics, typically from a brighter sound (clockwise) to a warmer, mellower sound (counter-clockwise).

RICH FUNCTION DISPLAY

Two-coil pickups with multi-knob adjustments for richer, fuller sound and enhanced versatility.



Double pickup



VOLUME: Volume adjustment
TONE: Timbre regulation



Durable and stable bridge



Image: Close-up of the STRICH SPB-S10 P-Style bass guitar body, highlighting the double pickup, volume and tone control knobs, and the durable bridge for string stability.

2. Portable Amplifier Controls

The included 20W portable amplifier provides several controls for sound shaping and connectivity:

- **Volume:** Controls the amplifier's output volume.
- **Tone:** Adjusts the amplifier's tonal balance.
- **Gain:** Controls the input sensitivity and can add overdrive/distortion.
- **Bluetooth:** Activates Bluetooth pairing for playing along with external audio sources.
- **Headphone Jack (30 Ohm):** For silent practice using headphones.
- **Aux Input:** For wired connection to external audio sources.

To use the Bluetooth function, turn on the amplifier and activate Bluetooth. Search for the amplifier on your device and pair. You can then play audio from your device through the amplifier while playing your bass.

3. Basic Playing Posture

When playing, hold the bass comfortably against your body. The neck should be at an angle that allows easy access to all frets. Use your fretting hand to press down strings firmly just behind the frets and your picking hand to pluck or strum the strings.

MAINTENANCE

1. Cleaning the Instrument

- After each use, wipe down the strings, fretboard, and body of the bass with the included cleaning cloth to remove sweat, oils, and dust.
- For a deeper clean, use a guitar-specific polish on the body and a fretboard conditioner on the wooden fingerboard (avoiding painted areas).
- Do not use harsh chemicals or abrasive materials, as these can damage the finish.

2. String Care and Replacement

- Strings should be replaced periodically, as they lose their tone and can become corroded over time. The frequency depends on playing habits.
- When replacing strings, change them one at a time to maintain neck tension. Use nickel bass strings of appropriate gauge.
- Ensure strings are properly wound around the tuning pegs and seated in the bridge saddles.

3. Amplifier Care

- Keep the amplifier in a dry, cool place away from direct sunlight and extreme temperatures.
- Wipe the exterior with a soft, dry cloth. Do not spray liquids directly onto the amplifier.
- Ensure proper ventilation and avoid blocking air vents.
- Charge the amplifier's battery as needed.

4. Storage

When not in use, store the bass guitar in its gig bag to protect it from dust, humidity changes, and physical damage. Store the amplifier and accessories in a safe, dry location.

TROUBLESHOOTING

1. No Sound from Amplifier

- Check if the amplifier is turned on and charged.
- Ensure the instrument cable is securely connected to both the bass and the amplifier.
- Verify that the volume knobs on both the bass and the amplifier are turned up.
- Test with a different instrument cable if available.
- Ensure no headphones are plugged into the amplifier's headphone jack if you expect sound from the speaker.

2. Fret Buzz

- Fret buzz can occur if the string action (height) is too low or if the neck relief is incorrect.
- Ensure you are pressing the strings firmly just behind the fret.
- Minor adjustments to string height at the bridge can sometimes resolve this. For significant or persistent fret buzz, professional setup may be required.

3. Tuning Instability

- Ensure strings are properly stretched when new. Gently pull each string away from the fretboard a few times after initial tuning.
- Check that strings are correctly seated in the nut and bridge saddles.
- Verify that tuning pegs are not loose.
- Temperature and humidity changes can affect tuning; re-tune regularly.

SPECIFICATIONS

PRODUCT DIMENSION



Image: Diagram showing the dimensions of the STRICH SPB-S10 electric bass guitar: 116cm (45.7 inches) length, 32cm (12.6 inches) width, and 4.5cm (1.8 inches) thickness.

Feature	Detail
Model	SPB-S10
Type	Electric Bass Guitar, 4-String, Full-Size, P-Style

Feature	Detail
Body Material	Solid Wood (Poplar)
Top Material	Maple
Back Material	Maple
Neck Material	AAA-grade Canadian Maple
Fretboard Material	Basswood
String Material	Nickel
Pickup Configuration	Magnetic-combination (Double pickup)
Controls	Volume, Tone
Finish Type	Polished
Color	Sunburst
Product Dimensions (L x W x H)	121.01 x 18.01 x 51 cm (47.6 x 7.1 x 20.1 inches)
Item Weight	7.17 kg (15.8 lbs)
Amplifier Power Output	10W Rated Power (up to 20W peak)
Amplifier Battery	3.7V/3000mAh
Amplifier Connectivity	Bluetooth 5.1, 6.35mm Jack Input, Aux Input, 30 Ohm Headphone Output

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact STRICH customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6G5C1T5>

More documents and user manuals: <https://manuals.plus/>