



[Manuals.plus](#) /

> [Novasafe](#) /

> Novasafe 2.0 Cu ft Biometric Fingerprint Home Safe Box Instruction Manual

Novasafe NS-B-45F

Novasafe 2.0 Cu ft Biometric Fingerprint Home Safe Box Instruction Manual

Model: NS-B-45F

1. INTRODUCTION

Thank you for choosing the Novasafe 2.0 Cu ft Biometric Fingerprint Home Safe Box. This manual provides essential information for the proper setup, operation, and maintenance of your new safe. Please read these instructions carefully before use to ensure optimal security and functionality.

2. PACKAGE CONTENTS & SETUP

2.1 Package Contents

Verify that all items listed below are included in your package:

- Safe Box (x1)
- Quick Start Guide / Product Manual (x1)
- Emergency Key (x2)
- Emergency Battery Box (x1)
- Foot Pads (x4)
- Expansion Screws (x4)
- Fireproof & Waterproof Bag (x1)

REMOVABLE SHELF



Cash



Handguns



Jewellery



Passports



Medicines

With Shelf



Without Shelf



Image: All components included with the Novasafe 2.0 Cu ft Biometric Safe, including the safe, manual, keys, emergency battery box, foot pads, expansion screws, and fireproof bag.

2.2 Battery Installation

The safe requires 4 AA 1.5 Volt alkaline batteries (not included) for the electronic keypad and biometric scanner. Rechargeable batteries are not recommended as they may damage internal electronic components.

1. Open the safe door using the emergency key for the first time.
2. Locate the internal battery case cover on the inside of the door.
3. Remove the cover and install 4 AA batteries, ensuring correct polarity (+/-).
4. Replace the battery case cover.

Image: Step-by-step diagram illustrating the correct way to insert 4 AA batteries into the safe's internal battery

compartment.

2.3 Mounting the Safe

For added security, the safe can be fixed to a wall or floor using the provided expansion screws.

1. Place the safe in the desired installation location.
2. Mark the drilling spots on the wall or floor through the pre-drilled holes inside the safe.
3. Remove the safe and drill two holes at the marked spots.
4. Position the safe back in place and install the expansion screws through the safe into the drilled holes. Tighten screws securely.



Image: Visual guide demonstrating the process of marking, drilling, and securing the safe to a wall.

3. OPERATING INSTRUCTIONS

3.1 First Time Opening

To open the safe for the first time, slide down the emergency keyhole cover, insert the emergency key, and turn it 30° counter-clockwise. Then turn the handle clockwise to open the door successfully.

3.2 Setting the Digital Password

The initial password is "123456" and needs to be modified. The password must consist of a minimum of 3 numbers and a maximum of 8 numbers.

1. With the door open, press the Setting button (located on the inner side of the door). The buzzer will sound, and a yellow light will display.
2. Enter your desired password (3-8 digits) and press the "#" key. A green light indicates success.



Image: Diagram illustrating how to locate the setting button and the sequence for programming a new digital password.

3.3 Setting Fingerprints

The safe supports the storage of up to 25 fingerprints.

1. With the door open, press the green Setting button (located on the inner side of the door).

2. Place your finger on the biometric scanner. The safe will prompt you to lift and place your finger 5 times.
3. A green light indicates successful fingerprint registration.



Image: Visual guide for registering a new fingerprint on the safe's biometric scanner.

3.4 Unlocking Methods

Your Novasafe offers four convenient ways to unlock:

- **Fingerprint + Knob:** Place registered finger on scanner, then turn knob.
- **Password + Knob:** Enter your digital password, press "#", then turn knob.
- **Emergency Key + Knob:** Use the emergency key (as described in "First Time Opening"), then turn knob.
- **Emergency Battery Box + Password / Fingerprint + Knob:** If internal batteries are depleted, plug the emergency battery box into the port below the keypad. Then use either your password or fingerprint, followed by turning the knob.

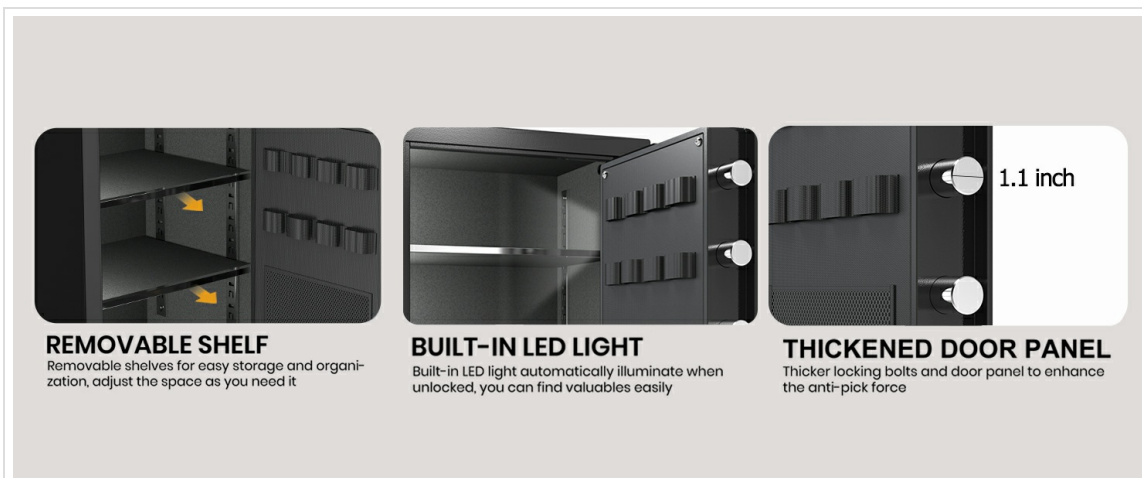


Image: Comprehensive diagram detailing the four distinct methods to unlock the safe.

3.5 Mute Mode

To turn on/off the key tone, press the "1" button for 3 seconds.

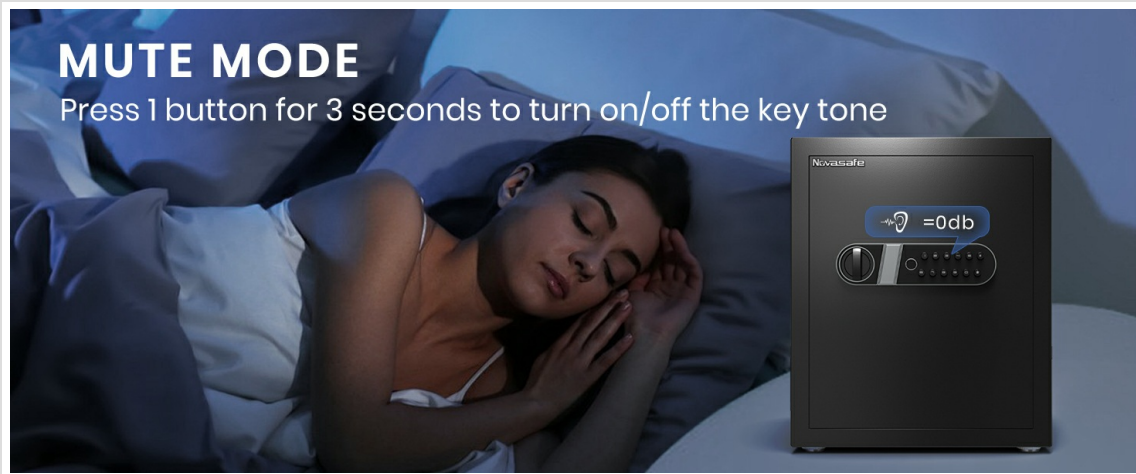


Image: A visual representation of activating the mute mode on the safe's keypad for silent operation.

4. FEATURES

- **Biometric Quick Access:** High-resolution biometric scanner with < 0.3 seconds response time, storing up to 25 fingerprints.
- **Secure and Sturdy Construction:** Crafted with advanced one-piece bending and precision laser cutting technology. Features a thickened pry-resistant door and 4 x 1.1 inch diameter live locking bolts.
- **Ultra Fireproof & Waterproof Bag:** A high-quality bag is included for ultimate protection of cash, documents, jewelry, and other valuables.
- **Dual Alarm System:** Activates a loud 70dB alarm after three wrong password attempts or violent vibrations. The alarm stops upon entering the correct password.
- **Versatile Interior:** Includes a removable shelf for easy organization and a sensor LED light that automatically illuminates when unlocked.



Image: Detailed view of the safe's interior features, including the removable shelf, built-in LED light, and the robust 1.1-inch thickened steel locking bolts.

5. SPECIFICATIONS

Specification	Detail
---------------	--------

Brand	Novasafe
Model Number	NS-B-45F
Product Dimensions	11.85"D x 14.95"W x 17.75"H
Item Weight	33 Pounds
Lock Type	Biometric, Digital Electronic Keypad, Key
Color	Black
Capacity	2 Cubic Feet
Material	Alloy Steel
Special Feature	Dual Alarm System, Removable Shelf, Sensor LED Light
Mounting Type	Wall Mount (hardware included)
Batteries Required	Yes (4 AA batteries, not included)

6. TROUBLESHOOTING

6.1 Alarm Activation

The dual alarm system will activate a loud 70dB alarm if:

- Three incorrect password attempts are made.
- The safe experiences violent vibrations.

To stop the alarm, enter the correct password or use the emergency key.



Image: The safe's keypad displaying a red alarm light, indicating activation of the dual alarm system.

6.2 Depleted Batteries

If the internal batteries are depleted and the safe cannot be opened electronically, use the emergency battery box:

1. Plug the emergency battery box into the external power port located below the keypad.
2. Enter your digital password or use your registered fingerprint.

3. Turn the knob clockwise to open the safe.

6.3 Forgotten Password / Fingerprint Issues

If you forget your password or encounter issues with fingerprint recognition, use the emergency key to open the safe. Once open, you can reset the password or re-register fingerprints using the internal Setting button.

7. MAINTENANCE

- Regularly check battery levels and replace them as needed to avoid being locked out.
- If the safe is not used for an extended period, remove the batteries to prevent leakage and damage to the electronic system.
- Keep the emergency keys in a secure location outside the safe.
- Clean the exterior of the safe with a soft, dry cloth. Avoid abrasive cleaners.

8. WARRANTY AND SUPPORT

Specific warranty information for the Novasafe 2.0 Cu ft Biometric Fingerprint Home Safe Box is not provided in this manual. Please refer to the product packaging, the manufacturer's official website, or contact Novasafe customer support for detailed warranty terms and conditions.

For technical support or inquiries, please visit the [Novasafe Store on Amazon](#) or consult the contact information provided in your product packaging.

9. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product overview of the Novasafe Biometric Safe 2.0 Cuft, demonstrating its features and functionality.