

Manuals.plus /

- › Acoyer /
- › Acoyer Universal TV Remote Control User Manual

Acoyer SRP9232D

Acoyer Universal TV Remote Control User Manual

Model: SRP9232D

INTRODUCTION

This manual provides detailed instructions for setting up and operating your new Acoyer Universal TV Remote Control. This remote is designed to simplify your home entertainment experience by controlling multiple devices with a single unit. Please read this manual carefully before use to ensure proper functionality and to maximize your remote's capabilities.





Image: Front and back view of the Acoyer Universal TV Remote Control.

COMPATIBLE DEVICES

Your Acoyer Universal Remote Control is compatible with a wide range of audio and video devices, including:

- TV brands: Samsung, LG, Vizio, Sony, Hisense, Onn, Sharp, RCA, Element, Westinghouse, Sanyo, Emerson, Philips, JVC, Sceptre, Sansui, Panasonic, Magnavox, Skyworth, and more.
- DVD/Blu-ray players
- Media Streaming Players
- Sound Bars

Universal Remote Compatible Devices

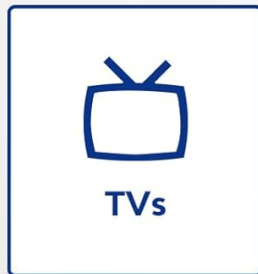


Image: Visual representation of compatible device types.

Universal Replacement Remote Control for Thousands of **Audio** and **Video** Devices



Compatible with Most Brands:

For **Samsung** / For **LG**

For **Philips** / For **Hisense**

For **Emerson** / For **Insignia**

For **Sharp** / For **JVC**

For **Vizio** / For **Sony**

For **TCL** / For **Roku**

For **RCA** / For **Onn**

For **Toshiba**, Etc.

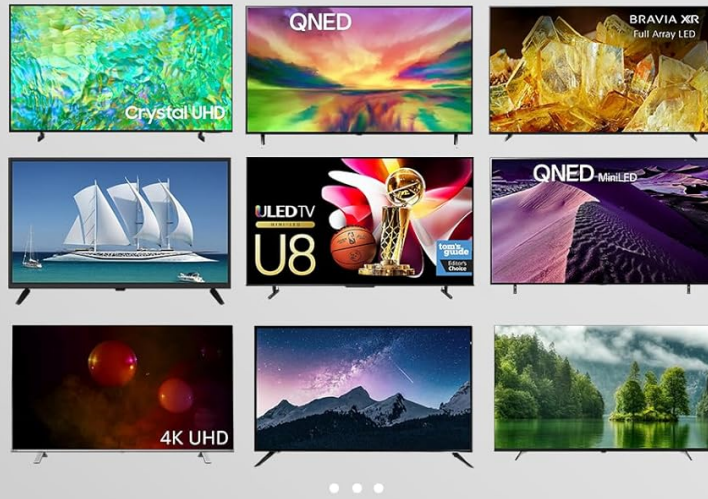


Image: List of compatible brands including Samsung, LG, Vizio, Sony, Hisense, Philips, and more.

NOT COMPATIBLE DEVICES

Please note that this universal remote is **NOT** compatible with the following devices:

- Roku Streaming Sticks
- Roku Sound Bar
- Amazon Sound Bar
- TCL Sound Bar
- Hisense Sound Bar
- Anker Sound Bar
- Klipsch Sound Bar
- Fire TV Sticks
- TCL Fire TV
- Insignia Fire TV
- Toshiba Fire TV

- Amazon Fire Stick
- Fire TV Cube

This product connects and pairs via infrared only. If you are unsure about compatibility, please refer to the product's code list or contact customer support.

Replacement Remote NOT Compatible Devices



- Not for **Fir TV Sticks**
- Not for **Fir TV Cube**
- Not for **Amz Fir Stick**
- Not for **TCL Fir TVs**
- Not for **Insignia Fir TVs**
- Not for **Toshiba Fir TVs**
- Not for **Roku Sound Bar**
- Not for **Roku Streaming Sticks**



Image: Visual representation of devices not compatible with the remote.

SETUP

Direct Code Entry Pairing

Follow these steps to program your universal remote using direct code entry:

1. **Step 1:** Find the device type you need in the provided code list (included in the package). Then, locate and circle all the codes for your specific brand.
2. **Step 2:** Press and hold down the **SETUP** button for 3 seconds until the red light on the remote turns on.
3. **Step 3:** Press and release the **TV/STR/AUD** button on the remote. The red light will blink once and then remain

on.

- Step 4:** Enter the first 4-digit code from your code list.
- Step 5:** Point the remote at your TV (or other device) and test the buttons to see if the device responds as expected. If the buttons do not control the device, repeat steps 2-4 and enter a different code from your list to test.

Note: If all codes in the program fail, please refer to the instructions on page 7 of your physical user manual for "Automatic Code Search" (including code table and usage instructions).

Direct Code Entry Pairing



Step 1

Press and hold down the **SETUP** button for 3 seconds until the red light on the remote turns on.



Step 2

Press and release the **TV / STR / AUD** button on the remote, the red light will blink once and remain on.



Step 3

Enter the 4-digit code from code list.

Image: Visual guide for the direct code entry pairing process.

OPERATING INSTRUCTIONS

Button Functions

Familiarize yourself with the functions of each button on your universal remote control:

Including code table and usage instructions

Power - Turns devices ON / OFF

Setup - Used to program the remote

Last channel - Returns to the previously selected channel

DVD / Blu-ray open/close - open/close a player, or List features on cable / satellite receivers

Menu - Displays the on-screen menu

OK - Selects menu items for the controlled device

Info / Options - Displays on-screen show/content information

Home / Guide - Easily access features on today's streaming devices, or Guide on cable / satellite receivers

Volume up / down

Numbers - Enter numbers for direct channel selection

Enter key (Some devices require enter to be pressed after channel selection)

Input - selects video inputs

TV / STR / AUD - selects the device to control

Record / stop / fast forward pauseplay / rewind

ABCD - Access additional features for DVRs, cable and satellite receivers

App Hotkey - Access top apps like Netflix, Amazon Prime, Hulu and more

Up / Down / Left / Right menu navigation

Exit - Exit on-screen menus

Channel up / down

Mute - Mutes sound

(-) Dash - Use to select digital channels, e.g., 4.1



Image: Detailed layout of remote buttons and their corresponding functions.

Button	Function
Power	Turns devices ON / OFF
Setup	Used to program the remote
Input	Selects video inputs
TV / STR / AUD	Selects the device to control (TV, Streaming Device, Audio Device)
Last Channel	Returns to the previously selected channel
Record / Stop / Fast Forward / Pause / Rewind	Controls media playback
ABCD Buttons	Access additional features for DVRs, cable, and satellite receivers
Menu	Displays the on-screen menu
App Hotkey	Access top apps like Netflix, Amazon Prime, Hulu, and more
OK	Selects menu items for the controlled device
Up / Down / Left / Right Navigation	Navigates through menus and options
Info / Options	Displays on-screen show/content information
Exit	Exits on-screen menus
Home / Guide	Easily access features on today's streaming devices, or Guide on cable/satellite receivers
Volume Up / Down	Adjusts volume
Channel Up / Down	Changes channels
Mute	Mutes sound
Numbers (0-9)	Enter numbers for direct channel selection
Enter Key	Confirms selection (some devices require Enter to be pressed after channel selection)
(-) Dash	Used to select digital channels (e.g., 4.1)

The universal remote control utilizes infrared technology, providing a rapid response time of 0.2 seconds and an effective range of up to 30 feet.

Universal remote control adopts infrared technology, the response time is 0.2 seconds, and the longest distance is 30 feet.



Image: Features of the remote's infrared technology.

MAINTENANCE

Battery Installation

The universal remote control requires **two (2) AAA alkaline batteries** for operation. Batteries are not included in the package.

- Open the battery compartment cover on the back of the remote.
- Insert the two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
- Close the battery compartment cover securely.

Warning: Do not mix old and new batteries, or mix different types of batteries together. This can lead to battery leakage or damage to the remote.

Requires 2*AAA alkaline batteries (Batteries are not included)



Image: Battery compartment and remote dimensions.

TROUBLESHOOTING

If you encounter issues with your universal remote, try the following troubleshooting steps:

- **Remote not responding:** Ensure fresh AAA batteries are correctly installed. Check if the red light on the remote illuminates when a button is pressed.
- **Device not responding:** Verify that the remote is pointed directly at the device's infrared sensor. Ensure there are no obstructions between the remote and the device.
- **Incorrect device control:** Re-attempt the programming steps (Direct Code Entry) using a different code from the provided code list for your device brand.
- **Limited functionality:** Some advanced functions may not be supported by all universal remotes or specific device models. Refer to your device's original manual for specific feature compatibility.
- **Red light blinks continuously:** This may indicate a programming error or low battery. Re-program the remote or replace the batteries.

SPECIFICATIONS

Feature	Detail
Model Number	SRP9232D
Package Dimensions	6.89 x 3.27 x 0.75 inches
Item Weight	2.05 ounces
Power Source	2 * AAA alkaline batteries (not included)
Color	Black
Special Feature	Universal
Max Number of Supported Devices	3
Compatible Devices	Sound Bar, Television, VCR, Streaming Device, DVD/Blu-ray Player
Manufacturer	Acoyer
Country of Origin	China

WARRANTY AND SUPPORT

Acoyer is committed to providing safe, durable, and user-friendly remote control products. We value your experience with our products.

For any questions regarding your order or product, please do not hesitate to contact us. Our customer service team aims to respond to inquiries within 24 hours on working days.

Please refer to your purchase documentation for specific warranty details and terms.