

[Manuals.plus](#) /

› [TRIUMPHKEY](#) /

› TRIUMPHKEY Reversible Computer Desk (100cm) Instruction Manual

TRIUMPHKEY TRIUMPHKEY-Scrivania100cm

TRIUMPHKEY Reversible Computer Desk (100cm) Instruction Manual

Model: TRIUMPHKEY-Scrivania100cm

1. INTRODUCTION

Thank you for choosing the TRIUMPHKEY Reversible Computer Desk. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your product. Please read this manual thoroughly before assembly and retain it for future reference.

This desk is designed for versatility and functionality, featuring a robust structure, ample storage with a drawer, and a convenient headphone hook. Its reversible design allows for flexible placement in various home or office environments.

2. SAFETY INSTRUCTIONS

- Always assemble the desk on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and retighten if necessary.
- Do not overload the desk or drawer beyond its recommended weight capacity.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Avoid placing hot items directly on the desk surface without protection.
- Do not stand or sit on the desk.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desk Top Panels
- Metal Frame Components
- Fabric Drawer
- Headphone Hook
- Assembly Hardware (screws, bolts, Allen wrench)
- Instruction Manual

Product Size



Image 3.1: Product Dimensions and Key Components. This image illustrates the overall dimensions of the desk (100cm length, 50cm width, 75cm height) and the dimensions of the fabric drawer (45.5cm x 24cm x 14cm). It also shows the various parts of the desk, including the tabletop, metal frame, and the under-desk shelf.

4. ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 20 minutes. A detailed instruction manual and all necessary tools are provided. No additional tools are required.

4.1. Step-by-Step Assembly

- 1. Unpack and Identify:** Carefully unpack all components and lay them out on a clean, soft surface. Refer to the parts list to identify each piece.
- 2. Assemble the Metal Frame:** Connect the metal frame components using the provided screws and Allen wrench. Ensure all connections are snug but do not overtighten initially.
- 3. Attach the Desk Top:** Secure the desk top panels to the assembled metal frame.

4. **Install the Under-Desk Shelf:** Attach the wooden shelf to the designated area on the metal frame.
5. **Insert the Fabric Drawer:** Place the fabric drawer into its designated slot under the desk.
6. **Attach the Headphone Hook:** Secure the headphone hook to the side of the desk frame as desired.
7. **Final Tightening:** Once all components are in place, go back and securely tighten all screws and bolts.



Image 4.1: Fully Assembled Desk. This image displays the TRIUMPHKEY computer desk fully assembled, showcasing its spacious tabletop, integrated fabric drawer, and under-desk shelf for a computer tower. A monitor, laptop, keyboard, mouse, and headphones are shown in use, demonstrating its functionality.

4.2. Reversible Design

The TRIUMPHKEY desk features a reversible design, allowing you to install the storage unit (drawer and shelf) on either the left or right side to suit your preference and room layout.

Reversible Desk

Right or Left for Your Needs



Image 4.2: Reversible Desk Configuration. This image illustrates the reversible nature of the desk, showing two identical desks. One desk has the storage unit (drawer and shelf) configured on the left side, while the other has it configured on the right side, demonstrating the flexibility of assembly.

5. OPERATING INSTRUCTIONS

5.1. Utilizing Storage Features

- **Fabric Drawer:** The integrated fabric drawer provides convenient storage for office supplies, documents, or personal items, helping to keep your desktop clutter-free.
- **Under-Desk Shelf:** The lower shelf is ideal for housing a computer tower, books, or other larger items, maximizing your workspace.
- **Headphone Hook:** Use the side hook to hang headphones, bags, or other accessories, keeping them easily accessible and off the desk surface.



Image 5.1: Drawer Design. A close-up view of the fabric drawer, showing its dimensions (14cm height, 24cm width, 45.5cm depth) and its capacity to store items like headphones, contributing to a tidy workspace.



Support Rods can Strengthen the Stability



Image 5.2: Support Rods. This image highlights the support rods integrated into the metal frame, which are designed to strengthen the desk's stability and durability.

6. MAINTENANCE

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood particle board.
- **Inspection:** Periodically inspect all fasteners and connections to ensure they remain tight. Retighten as needed.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or warping of the desk materials.

7. TROUBLESHOOTING

7.1. Common Issues and Solutions

- **Desk is wobbly:**
Solution: Ensure all screws and bolts are fully tightened. Check that the desk is on a level surface. Adjust leg levelers if present.
- **Parts do not fit during assembly:**
Solution: Double-check the instruction manual to ensure you are using the correct parts for each step. Some parts may appear similar but are designed for specific orientations. Do not force parts together.
- **Scratches on the surface:**
Solution: While the desk is designed to be anti-scratch, minor scratches can occur. Use furniture polish or a wood repair kit for minor blemishes. For deeper scratches, contact customer support for advice.

8. SPECIFICATIONS

Feature	Detail
Brand	TRIUMPHKEY
Model Number	TRIUMPHKEY-Scrivania100cm
Color	Brown
Dimensions (L x W x H)	100 x 50 x 75 cm (39.4 x 19.7 x 29.5 inches)
Item Weight	12.8 Kilograms (28.2 lbs)
Material	Wood Particle Board, Metal
Special Features	Reversible Design, Integrated Fabric Drawer, Headphone Hook
Assembly Time	Approx. 20 minutes

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact TRIUMPHKEY customer service directly. Please have your model number (TRIUMPHKEY-Scrivania100cm) and purchase details ready when contacting support. We are committed to providing high-quality products and excellent customer service. Your satisfaction is our priority.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6GFWF2J>

More documents and user manuals: <https://manuals.plus/>