

Fiety DSV103

Fiety Cordless Vacuum Cleaner DSV103 Instruction Manual

INTRODUCTION

Thank you for choosing the Fiety DSV103 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.

- Only use the charger supplied by the manufacturer.
- Store the appliance indoors after use to prevent damage.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Cordless Vacuum Cleaner Main Unit
- 2-in-1 Brush
- Long Crevice Nozzle
- Cleaning Brush Tool
- Wall Mount Plate
- Charger
- Replaceable HEPA Filter
- Hardware Bag
- Instruction Manual

SMART TOUCH CONTRAL



Image: All included components of the Fiety DSV103 Cordless Vacuum Cleaner.

SETUP

Follow these steps to assemble your vacuum cleaner:

1. **Attach the Extension Tube:** Insert the metal extension tube into the main unit until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension tube, ensuring it clicks firmly.

3. **Install the Battery:** Slide the battery pack into the designated slot on the main unit until it locks.
4. **Initial Charge:** Before first use, fully charge the vacuum cleaner for approximately 4 hours. Connect the charger to the charging port on the main unit or the wall mount.
5. **Wall Mount Installation (Optional):** Use the provided hardware to secure the wall mount plate to a suitable wall. This allows for convenient storage and charging.



Image: Fully assembled Fieety DSV103 Cordless Vacuum Cleaner.

OPERATING INSTRUCTIONS

Your Fiety DSV103 offers versatile cleaning for various surfaces.

Powering On/Off and Suction Modes

- **Power On:** Press the power button on the handle to start the vacuum.
- **Adjust Suction:** Use the touch control panel to cycle through the 3 available suction modes: Eco, Standard, and Max. The LED display will indicate the current mode and remaining battery life.
- **Power Off:** Press the power button again to turn off the vacuum.

Using Attachments

The vacuum can be used as a stick vacuum or a handheld unit by detaching the extension tube. Attachments can be connected directly to the main unit or the extension tube.

- **Motorized Floor Brush:** Ideal for both hard floors and carpets. The 2-in-1 anti-tangle brush roller effectively cleans without scratching wood floors. LED lights on the brush head illuminate dark areas.
- **2-in-1 Brush:** Use the brush for dusting surfaces or retract the bristles for a wider nozzle to clean upholstery and fabrics.
- **Long Crevice Nozzle:** Perfect for reaching tight spaces, corners, and edges.



55 MINS LONG RUNTIME

Image: Fleety DSV103 Cordless Vacuum Cleaner in use on a hard floor.

7-STAGE FILTER SYSTEM



Image: Fiety DSV103 Cordless Vacuum Cleaner reaching under furniture.

 


Image: Fiety DSV103 Cordless Vacuum Cleaner used in handheld mode with an attachment.

Official Product Video

Your browser does not support the video tag.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup

The 1.5L dust cup should be emptied regularly, especially when the MAX line is reached.

1. Hold the main unit over a trash bin.
2. Press the dust cup release button to open the bottom flap and empty the contents.
3. Close the dust cup flap securely until it clicks.

1.5 L CAPACITY



Image: Demonstrating how to empty the dust cup of the Fiety DSV103.

Cleaning Filters

The vacuum features a 7-stage filtration system, including HEPA and foam filters. Clean filters regularly to maintain suction power.

1. Twist and pull to remove the dust cup and filter assembly from the main unit.
2. Separate the HEPA filter and foam filter.

3. Tap off loose dirt. If heavily soiled, rinse with cold water. Ensure filters are completely dry before reassembling and using the vacuum.
4. Replace filters as needed. A replaceable HEPA filter is included.

Cleaning the Brush Roller

Periodically check the brush roller for tangled hair or debris.

1. Turn off the vacuum and detach the floor brush.
2. Locate the release tab on the side of the brush head and open it to remove the brush roller.
3. Use the provided cleaning brush tool or scissors to cut and remove any tangled hair or fibers.
4. Reinsert the brush roller and secure the release tab.

TROUBLESHOOTING

If you encounter issues with your Fiety DSV103, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged; Battery not properly installed; Power button not pressed.	Charge the battery; Ensure battery is securely clicked into place; Press the power button firmly.
Weak suction power	Dust cup full; Filters clogged; Blockage in nozzle, tube, or brush head.	Empty dust cup; Clean or replace filters; Check for and remove any blockages.
Brush roller not spinning	Brush roller jammed by debris; Brush head not properly attached.	Clean brush roller of tangled hair/debris; Ensure brush head is securely attached to the tube.
Battery not charging	Charger not connected; Charger faulty; Battery faulty.	Ensure charger is properly connected to vacuum and power outlet; Contact customer support for charger or battery replacement.

If the problem persists after trying these solutions, please contact Fiety customer support.

SPECIFICATIONS

Key technical specifications for the Fiety DSV103 Cordless Vacuum Cleaner:

- **Model Name:** DSV103
- **Power:** 450W
- **Suction Power:** Up to 40KPa
- **Battery:** 7x2500 mAh Lithium-Ion (Removable)
- **Runtime:** 20-55 minutes (depending on mode)
- **Charge Time:** Approximately 4 hours
- **Dust Cup Capacity:** 1.5 Liters
- **Filtration System:** 7-stage, including HEPA and Foam filters
- **Special Features:** LED Touch Display, 3 Suction Levels, 270° Swivel Floor Brush with Front Light, Anti-Tangle Brush Roller

- **Noise Level:** ≤ 68dB
- **Item Weight:** 5 Pounds
- **Dimensions (L x W x H):** 48" x 10" x 8"
- **Recommended Use:** All floors (Carpet, Hardwood)

WARRANTY AND SUPPORT

Fiety is committed to providing quality products and customer satisfaction.

- **Warranty:** We offer a 24-month customer service warranty from the date of purchase.
- **Accessories Replacement:** A service for accessories replacement is also available.
- **Contact Support:** If you have any questions, concerns, or require assistance with your Fiety DSV103 Cordless Vacuum Cleaner, please contact our customer service team. Refer to your purchase documentation for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question