

[Manuals.plus](#) /

› [DELTA](#) /

› DELTA 40'x20' ClearPVC Marquee Tents User Manual

DELTA B0D6JBV3XX

DELTA 40'x20' ClearPVC Marquee Tent User Manual

Model: B0D6JBV3XX

1. INTRODUCTION

Thank you for choosing the DELTA 40'x20' ClearPVC Marquee Tent. This heavy-duty, fire-retardant, and waterproof canopy is designed to provide a reliable and elegant shelter for a variety of outdoor events, including weddings, parties, exhibitions, and corporate functions. Its robust construction and unique clear end panel design ensure both durability and an inviting atmosphere.

Key features of your DELTA Marquee Tent include:

- **Unique Design:** Exclusive end panel design with a transparent upper triangle section for enhanced natural light and visual appeal.
- **Fire Retardant PVC Material:** Crafted with top-grade, waterproof, UV-resistant, and fire-retardant PVC for the top cover, window walls, and end panels.
- **Durable Construction:** Features a galvanized steel frame, heavy-duty corner stakes, ratchet tie-down tension cords, roof bar support, and roof tension wires for superior stability.
- **Customizable Utilization:** Removable window walls allow for flexible airflow and layout adjustments.
- **Storage and Portability:** Includes 7 free black storage bags for convenient transport and organized storage of all components.

2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- **Site Selection:** Choose a level, clear area free from overhead obstructions (e.g., power lines, tree branches) and sharp objects on the ground. Ensure adequate space for the tent's dimensions (40'x20') plus additional clearance for guy ropes and stakes.
- **Weather Conditions:** This tent is designed for temporary use. Do not use in extreme weather conditions such as heavy winds, snow, or severe thunderstorms. Disassemble and store the tent if adverse weather is expected.
- **Anchoring:** Always secure the tent firmly to the ground using all provided stakes and tie-down cords. Proper anchoring is crucial for stability.
- **Fire Safety:** Although the PVC material is fire-retardant, keep all heat sources, open flames, and flammable

materials away from the tent fabric. Do not use barbecues, heaters, or cooking equipment inside the tent.

- **Assembly:** Assembly requires multiple people. Do not attempt to assemble or disassemble the tent alone. Wear appropriate safety gear, such as gloves, during assembly.
- **Ventilation:** Ensure adequate ventilation, especially if using the tent in warm weather or with many occupants. The removable window walls can assist with airflow.
- **Children and Pets:** Keep children and pets away from the assembly area. Do not allow them to play unsupervised around or inside the tent.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. Refer to the packing list included with your tent for exact quantities.

- Galvanized Steel Frame Poles (various lengths and types)
- Galvanized Steel Connectors/Joints
- PVC Top Cover (Fire Retardant, Waterproof, UV-resistant)
- PVC Window Walls (Removable)
- PVC End Panels (with clear triangular section)
- Heavy Duty Corner Stakes
- Ratchet Tie-Down Tension Cords
- Roof Bar Supports
- Roof Tension Wires
- 7 x Black Storage Bags



Image: Close-up of the robust galvanized steel frame connection points and tension wires, essential for the tent's structural integrity.



Image: The seven included black storage bags, designed to neatly store the tent's top cover, walls, poles, and accessories for easy transport and organization.

4. SETUP INSTRUCTIONS

Assembly of the DELTA Marquee Tent requires a minimum of 4-6 people. Follow these steps carefully for proper and safe installation.

4.1. Prepare the Site

1. Select a flat, dry, and clear area for the tent. Ensure there are no sharp objects, rocks, or debris that could damage the tent fabric.
2. Clear an area larger than 40'x20' to allow for staking and maneuvering during assembly.

4.2. Assemble the Frame

1. Unpack all frame poles and connectors. Lay them out according to the included frame diagram.
2. Begin by assembling the base frame, connecting the horizontal and vertical poles using the appropriate joints. Ensure all connections are secure.
3. Gradually build up the side and roof frame sections, following the numerical or alphabetical labels on the poles and connectors if provided.
4. Install the roof bar supports and tension wires as the roof frame takes shape. These add significant structural integrity.



Image: The robust galvanized steel frame structure of the DELTA Marquee Tent, showing the internal supports and connections before the cover is applied.

4.3. Install the Top Cover

1. Carefully unfold the PVC top cover and drape it over the assembled frame. Ensure the cover is centered and aligned correctly with the frame.
2. Secure the top cover to the frame using the integrated straps, bungee cords, or ties, starting from the corners and working towards the center. Ensure a snug fit to prevent water pooling.

4.4. Attach Walls and End Panels

1. Attach the end panels first, ensuring the clear triangular sections are positioned correctly. Secure them to the frame using the provided fasteners (e.g., Velcro, zippers, ties).
2. Next, attach the removable window walls along the sides of the tent. These can be rolled up or removed entirely for ventilation or open-air events.



Image: The DELTA Marquee Tent fully assembled, showcasing its unique clear PVC triangular end panel design and arched window walls, providing ample natural light.

4.5. Anchor the Tent

1. Drive the heavy-duty corner stakes into the ground at each corner of the tent, ensuring they are firmly embedded.
2. Attach the ratchet tie-down tension cords to the tent frame and the ground stakes. Tighten the ratchets to create tension and securely anchor the tent.
3. Ensure all guy ropes are taut and properly secured to prevent movement in windy conditions.



Image: A side view of the DELTA 40'x20' Marquee Tent, fully set up on a grassy area, demonstrating its large footprint and elegant appearance.

5. OPERATING THE TENT

The DELTA Marquee Tent is designed for versatility and ease of use once assembled.

- **Ventilation:** Utilize the removable window walls to control airflow and temperature inside the tent. They can be rolled up and secured to allow for an open-air feel or zipped down for full enclosure.
- **Lighting:** The clear PVC end panels allow for significant natural light during the day. For evening events, consider external or internal lighting solutions, ensuring they do not generate excessive heat or pose a fire hazard.
- **Entry/Exit:** Designate clear entry and exit points. Ensure pathways are unobstructed for guests and emergency personnel.

6. MAINTENANCE

Proper maintenance will extend the lifespan of your DELTA Marquee Tent.

- **Cleaning:** Clean the PVC fabric with mild soap and water. Do not use harsh chemicals, abrasive cleaners, or pressure washers, as these can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Inspection:** Regularly inspect the galvanized steel frame for any signs of rust, bending, or damage. Replace any compromised parts immediately.
- **Fabric Inspection:** Check the PVC fabric for tears, punctures, or excessive wear. Small repairs can often be made with a PVC repair kit.

- **Storage:** Before storing, ensure all tent components are clean and completely dry to prevent mold, mildew, and rust. Store the tent in its provided storage bags in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Tent is unstable or sways in light wind.	Insufficient anchoring; loose tie-downs; uneven ground.	Ensure all stakes are fully driven into the ground. Tighten all ratchet tie-down cords. Verify the ground is level.
Water pooling on the roof.	Top cover not taut enough; improper frame assembly.	Re-tension the top cover to remove slack. Check that roof bar supports and tension wires are correctly installed.
Difficulty zipping/unzipping walls.	Fabric caught in zipper; zipper misalignment; dirt in zipper.	Carefully free any caught fabric. Ensure walls are properly aligned. Clean zipper teeth with a brush.
Mold or mildew on fabric after storage.	Tent stored while damp.	Clean affected areas with a mild bleach solution (1 part bleach to 10 parts water) or specialized mold remover. Rinse thoroughly and ensure completely dry before re-storing.

8. SPECIFICATIONS

Feature	Detail
Brand	DELTA
Model	B0D6JBV3XX
Dimensions	40 feet (length) x 20 feet (width)
Material (Cover/Walls)	Polyvinyl Chloride (PVC)
Material (Frame)	Galvanized Steel
Color	White
Water Resistance Level	Waterproof
Fire Retardancy	Yes
UV Protection	Yes
Assembly Required	Yes
Item Weight	558 Pounds

9. WARRANTY AND SUPPORT

Your DELTA 40'x20' ClearPVC Marquee Tent is manufactured by WPIC and sold by WPIC-Store. For any questions regarding your product, including warranty claims or technical support, please contact the seller directly through your purchase platform.

Please retain your proof of purchase for any warranty inquiries. Protection plans may be available for extended coverage; refer to your purchase details for more information.

For additional resources and product information, you may visit the [DELTA Store on Amazon](#).

© 2024 DELTA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0D6JBV3XX>

More documents and user manuals: <https://manuals.plus/>