

[Manuals.plus](#) /

› [Gogloo](#) /

› Gogloo E11 Wearable Camera Sunglasses Instruction Manual

Gogloo E11

Gogloo E11 Wearable Camera Sunglasses User Manual

Model: E11

1. INTRODUCTION

Thank you for choosing the Gogloo E11 Wearable Camera Sunglasses. This manual provides essential information for the safe and effective use of your device. Please read it thoroughly before operation and retain it for future reference.

1.1 Product Overview

The Gogloo E11 combines stylish sunglasses with a high-definition action camera, allowing for hands-free video and photo capture from a first-person perspective. It features a Sony CMOS sensor, 2K video resolution, a 135-degree wide-angle lens, and Wi-Fi connectivity for seamless integration with your smartphone.



Image 1.1: Gogloo E11 in use, capturing various activities.

1.2 Package Contents

- Gogloo E11 Main Unit
- Portable Hard Case
- Portable Bag
- Retention Strap
- Cleaning Cloth
- USB 2.0 Cable
- USB 2.0 Card Reader
- Type-A to Type-C Conversion Adapter
- User Manual

2. SAFETY INFORMATION

Always handle the device with care. Avoid dropping or subjecting it to strong impacts. Do not attempt to disassemble or modify the device, as this will void the warranty and may cause damage or injury. Keep the device away from extreme temperatures and direct sunlight. Ensure the charging port is dry before connecting the charging cable.

3. PRODUCT COMPONENTS

3.1 Device Diagram

GOGLOO

見たままの景色を捉える—
ウェアラブルカメラの新常識



3.2 Buttons and Ports

- **Power/Record Button:** Press and hold to power on/off. Short press to start/stop recording or take a photo.
- **Wi-Fi Button:** Press to activate/deactivate Wi-Fi connectivity.
- **Reset (RST) Pinhole:** Use a thin object to press for device reset.
- **TF-Card Slot:** Insert MicroSD card for storage.
- **USB Charging Port:** Connect USB cable for charging and data transfer.
- **Camera Lens:** Integrated into the frame, 135-degree wide-angle.
- **LED Indicator:** Provides status feedback (power, recording, Wi-Fi).

4. SETUP

4.1 Charging the Device

Before first use, fully charge the Gogloo E11. Connect the provided USB cable to the charging port on the sunglasses and the other end to a USB power adapter (not included) or a computer USB port. The LED indicator will show charging status and turn off when fully charged.

4.2 Inserting a MicroSD Card

The device supports MicroSD cards up to 128GB (Class 10 or higher recommended, not included). Gently insert the MicroSD card into the TF-Card slot until it clicks into place. Ensure the device is powered off before inserting or removing the card.

4.3 App Installation and Initial Pairing

Download the dedicated Gogloo app from your smartphone's app store (available for iOS and Android). Once installed, power on the Gogloo E11 and activate its Wi-Fi. On your smartphone, connect to the Gogloo E11's Wi-Fi network (SSID and password can be found in the device settings or manual). Open the app to complete the pairing process and access live view, settings, and recorded files.

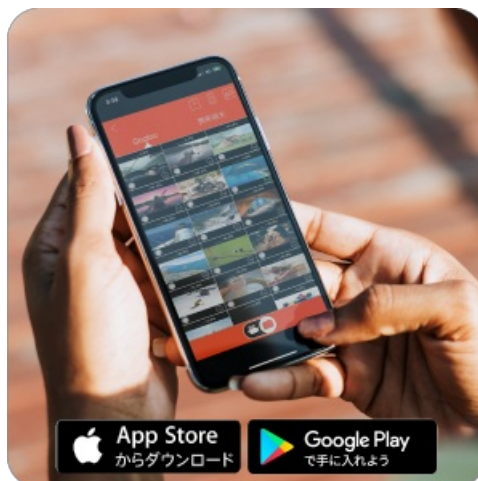


Image 4.3: Gogloo smartphone application interface.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the Power/Record button for approximately 3 seconds until the LED indicator lights up.

- **Power Off:** Press and hold the Power/Record button for approximately 3 seconds until the LED indicator turns off.

5.2 Video Recording

With the device powered on, short press the Power/Record button to start video recording. The LED indicator will change to indicate recording is in progress. Short press the button again to stop recording. Videos are saved to the MicroSD card in MP4 format.

5.3 Photo Capture

While in standby mode (not recording video), short press the Power/Record button twice quickly to capture a still photo. The LED indicator will flash briefly. Photos are saved to the MicroSD card.

5.4 Wi-Fi Connection and App Usage

Press the Wi-Fi button to enable Wi-Fi. Connect your smartphone to the device's Wi-Fi network. Open the Gogloo app to:

- View a live feed from the camera.
- Start/stop video recording or capture photos remotely.
- Adjust camera settings (resolution, loop recording, etc.).
- Browse, download, or delete recorded videos and photos.

			
WEBカメラ UVC規格	WEBカメラ UVC規格	—	—
			
静止画解像度 12M	静止画解像度 12M	静止画解像度 8M	静止画解像度 8M
			
重量 55g	重量 58g	重量 72g	重量 66g
			
駆動時間 最大90分 (720pモードにて)	駆動時間 最大90分 (720pモードにて)	駆動時間 最大95分 (1080pモードにて)	駆動時間 最大95分 (1080pモードにて)

Image 5.4: Gogloo app interface for live view, file management, and settings.

6. MAINTENANCE

6.1 Cleaning

Use the provided cleaning cloth to gently wipe the lenses and frame. Do not use abrasive cleaners or solvents. For stubborn dirt, slightly dampen the cloth with water.

6.2 Storage

When not in use, store the Gogloo E11 in its portable hard case to protect it from dust and scratches. Store in a cool, dry place away from direct sunlight and high humidity. For long-term storage, ensure the battery is partially charged (around 50%) to prolong its lifespan.

7. TROUBLESHOOTING

- **Device not powering on:** Ensure the battery is charged. If the issue persists, try resetting the device using the RST pinhole.
- **Cannot connect to Wi-Fi:** Ensure Wi-Fi is enabled on the device and your smartphone. Check that you are connecting to the correct network and entering the correct password. Restart both devices and try again.
- **Recording issues:** Check if the MicroSD card is inserted correctly and has sufficient free space. Ensure the card is formatted to FAT32. If the card is full, transfer files to a computer or delete unnecessary files.
- **Poor video quality:** Ensure the lens is clean. Check the resolution settings in the app. Recording in low light conditions may result in reduced quality.
- **Device becomes warm during use:** It is normal for the device to generate some heat during operation, especially during extended recording or charging. If it becomes excessively hot, power it off and allow it to cool down.

8. SPECIFICATIONS

Feature	Specification
Brand	Gogloo
Model	E11
Photo Sensor Technology	CMOS
Video Capture Resolution	2K (30fps), 1080p (60fps), 720p (60fps)
Still Image Resolution	Up to 12 Megapixels
Lens Angle	135 degrees (Wide-angle)
Connectivity Technology	Wi-Fi
Storage	Micro SD card (up to 128GB, not included)
Video Capture Format	MP4
Supported Audio Format	PCM (Mono)
Battery Life	Up to 95 minutes (in 720p mode)
Operating Temperature	-10°C to 55°C
Dust and Water Resistance	IP55
Product Dimensions	17 x 16.5 x 4.8 cm
Weight	72 g

9. WARRANTY AND SUPPORT

Gogloo products are designed for reliability and performance. For warranty information, please refer to the warranty card

included with your purchase or visit the official Gogloo website. If you encounter any issues or require technical assistance, please contact Gogloo customer support through the contact information provided on the official website or your purchase platform.

Please retain your proof of purchase for warranty claims.

