

[Manuals.plus](#) /

› [Zerodeko](#) /

› Zerodeko Aroma Clip Fan LED Desk Lamp User Manual

Zerodeko RF1209QOH7C0Z8ESF058

Zerodeko Aroma Clip Fan LED Desk Lamp User Manual

Model: RF1209QOH7C0Z8ESF058

INTRODUCTION

Thank you for choosing the Zerodeko Aroma Clip Fan LED Desk Lamp. This multifunctional device combines a portable fan, an LED desk lamp, and an aroma diffuser, designed for versatile use in various settings such as dorms, offices, or homes. This manual provides detailed instructions for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your product.

SAFETY INSTRUCTIONS

Please read all safety instructions carefully before use and retain this manual for future reference.

- Ensure the power supply voltage matches the product's requirements (USB 5V).
- Do not immerse the product in water or other liquids.
- Keep out of reach of children and pets.
- Do not block the fan blades or air inlet/outlet during operation.
- Avoid disassembling or modifying the product. Repairs should only be performed by qualified personnel.
- Unplug the USB cable when not in use or before cleaning.
- Use only the provided USB cable or a compatible one.
- Do not use in high temperature or high humidity environments.

PRODUCT OVERVIEW

The Zerodeko Aroma Clip Fan LED Desk Lamp features a compact design with a flexible gooseneck, a sturdy clip base, a fan head with integrated LED lighting, and a compartment for aroma diffusion.



Figure 1: Front view of the Zerodeko Aroma Clip Fan LED Desk Lamp. This image displays the main components including the fan head, the adjustable gooseneck, and the versatile clip base, all in a soft pink color.

Components:

- **Fan Head:** Contains fan blades and LED light ring.

- **Flexible Gooseneck:** Allows for adjustable positioning of the fan head.
- **Clip Base:** Provides stable placement on flat surfaces or can be clipped onto edges.
- **Control Buttons:** Located on the clip base for fan speed and LED light control.
- **USB Power Port:** For connecting the power cable.
- **Aroma Compartment:** Located near the fan blades for aroma pads.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts are present.
2. **Placement:**
 - **Desk Placement:** Place the clip base on a stable, flat surface.
 - **Clip Attachment:** Open the clip and securely attach it to a desk edge, shelf, or headboard. Ensure it is firmly attached to prevent tipping.
3. **Connect Power:** Insert the small end of the provided USB cable into the USB power port on the clip base. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, USB wall adapter, power bank).



Figure 2: USB power cable and aroma pad. This image illustrates the USB cable used for powering the device and an example aroma pad, which can be inserted into the fan for fragrance diffusion.

4. **Adjust Position:** Bend the flexible gooseneck to position the fan head as desired for optimal airflow or lighting.

OPERATING INSTRUCTIONS

Fan Operation:

1. **Power On/Off:** Press the fan button (usually marked with a fan icon) once to turn on the fan at its lowest speed. Press again to cycle through fan speeds (Low, Medium, High). Press a fourth time to turn the fan off.
2. **Adjust Speed:** Continue pressing the fan button to select your desired fan speed.

LED Lamp Operation:

1. **Power On/Off:** Press the light button (usually marked with a light bulb icon) once to turn on the LED lamp. Press again to cycle through light modes or turn off the light.
2. **Light Modes:** The LED lamp may have multiple lighting modes (e.g., warm white, cool white, color-changing). Refer to the product packaging or specific model details for available modes.



Figure 3: Fan with LED lights active. This image demonstrates the fan's integrated LED lighting feature, showcasing its ability to provide ambient illumination in a low-light environment.

Aroma Function:

1. **Insert Aroma Pad:** Locate the aroma compartment, typically a small tray or slot near the center of the fan blades or on the back of the fan head. Insert a few drops of essential oil onto the provided aroma pad (or a cotton pad) and place it into the compartment.
2. **Activate Aroma:** Turn on the fan. The airflow will gently diffuse the aroma into the surrounding area.

MAINTENANCE

Regular cleaning will help maintain the performance and appearance of your fan and lamp.

- **Cleaning:**

- Before cleaning, ensure the device is turned off and unplugged from the power source.
- Use a soft, dry cloth to wipe down the exterior of the fan and lamp.
- For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the electrical components.

- Carefully clean dust from the fan blades using a soft brush or compressed air. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Zerodeko Aroma Clip Fan LED Desk Lamp, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Fan/Lamp does not turn on.	No power supply; loose USB connection; faulty USB cable/adapter.	Check USB connection; try a different USB port or power adapter; ensure power source is active.
Fan is weak or noisy.	Dust accumulation on blades; obstruction; low power.	Clean fan blades; remove any obstructions; ensure adequate power supply.
LED light is dim or flickering.	Low power supply; internal issue.	Ensure stable power supply; if problem persists, contact customer support.
Aroma diffusion is weak.	Aroma pad dry; incorrect placement of pad.	Add more essential oil to the pad; ensure pad is correctly placed in the compartment.
Clip is not holding securely.	Surface too thin/thick; unstable surface.	Ensure the surface is within the clip's capacity and stable. Use on a flat surface if clipping is not secure.
Gooseneck does not hold position.	Excessive weight on fan head; worn gooseneck.	Ensure no additional weight is placed on the fan head. If worn, contact customer support.
Product gets hot.	Prolonged use; poor ventilation.	Turn off and allow to cool. Ensure adequate ventilation around the device. If overheating persists, discontinue use and contact support.
Unusual smell.	Dust burning; internal fault.	Unplug immediately. Do not use. Contact customer support.
Buttons are unresponsive.	Power issue; internal malfunction.	Check power connection. If still unresponsive, contact customer support.

SPECIFICATIONS

The following are the technical specifications for the Zerodeko Aroma Clip Fan LED Desk Lamp (Model: RF1209QOH7C0Z8ESF058).

Feature	Detail
Brand	Zerodeko
Model Name	Personal Fans
Model Number	RF1209QOH7C0Z8ESF058

Feature	Detail
Color	Pink
Product Dimensions (L x W x H)	29.00X8.00X8.00CM (1.24"D x 1.24"W x 1.24"H)
Item Weight	4.2 ounces (0.26 Pounds)
Power Source	USB Powered
Features	Portable, Clip-on, Desk Lamp, Aroma Diffuser, LED Lighting



Figure 4: Product dimensions. This image provides a visual representation of the fan's approximate height and base width, indicating its compact and portable size.

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Zerodeko Aroma Clip Fan LED Desk Lamp, please refer to the contact information provided with your purchase or visit the official Zerodeko website. Please have your model number (RF1209QOH7C0Z8ESF058) ready when contacting support.

Zerodeko Store: [Visit Zerodeko Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question