



[Manuals.plus](#) /

> [Silva Homeline](#) /

> [Silva Homeline Immersion Blender Set SMS 6502 User Manual](#)

Silva Homeline SMS 6502

Silva Homeline Immersion Blender Set SMS 6502 User Manual

Model: SMS 6502

[Safety](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain them for future reference. Incorrect operation can cause damage to the appliance and injury to the user.

- **Electrical Safety:** Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting. Do not immerse the motor unit in water or any other liquid. Do not operate with a damaged cord or plug.
- **Blade Safety:** The blades are very sharp. Handle with extreme care, especially when assembling, disassembling, emptying the bowl, and cleaning.
- **Children and Vulnerable Persons:** This appliance should not be used by children. Keep the appliance and its cord out of reach of children. Close supervision is necessary when any appliance is used near children.
- **Usage Environment:** Use the appliance only for its intended household purpose. Do not use outdoors. Do not place on or near a hot gas or electric burner, or in a heated oven.
- **Operation:** Never touch moving parts. Always switch off the appliance and unplug it from the power supply before changing accessories or approaching parts that move in use.
- **Cleaning:** Refer to the "Maintenance and Cleaning" section for detailed instructions.
- **Repairs:** Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.

2. PRODUCT OVERVIEW

The Silva Homeline Immersion Blender Set SMS 6502 is a versatile kitchen appliance designed for blending, chopping, and whisking. It features a powerful 700W motor and two speed settings for optimal control.

2.1 Components

- **Motor Unit:** The main body containing the 700W motor and speed controls.
- **Immersion Blender Shaft:** Stainless steel blending shaft for pureeing and mixing.
- **Chopper Attachment (500 ml):** For chopping nuts, herbs, vegetables, and more. Includes a chopping blade and lid.
- **Whisk Attachment:** For whipping cream, beating eggs, and making light batters.
- **Measuring Cup (700 ml):** For blending and measuring ingredients.



Figure 1: Complete Silva Homeline Immersion Blender Set. This image displays the main motor unit, the stainless steel blending shaft, the whisk attachment, and the 500 ml chopper attachment with its lid.



Figure 2: Whisk attachment and 700 ml measuring cup. This image shows the wire whisk attachment and the clear plastic measuring cup, which can also be used for blending.



Figure 3: Close-up view of the chopper attachment lid. This image highlights the design of the lid for the 500 ml chopper, showing the connection point for the motor unit.

3. SETUP AND ASSEMBLY

Before first use, clean all parts that will come into contact with food as described in the "Maintenance and Cleaning" section.

3.1 Assembling the Immersion Blender

1. Align the motor unit with the immersion blender shaft.
2. Twist the motor unit clockwise until it locks securely into place.
3. To disassemble, twist counter-clockwise and pull apart.

3.2 Assembling the Whisk Attachment

1. Insert the whisk into the whisk gear box.
2. Align the whisk gear box with the motor unit.
3. Twist the motor unit clockwise until it locks securely into place.
4. To disassemble, twist counter-clockwise and pull apart.

3.3 Assembling the Chopper Attachment

1. Carefully place the chopping blade onto the central pin inside the chopper bowl.
2. Add ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is properly seated.
4. Align the motor unit with the chopper lid.
5. Twist the motor unit clockwise until it locks securely into place.
6. To disassemble, twist counter-clockwise and pull apart.

4. OPERATING INSTRUCTIONS

Always ensure the appliance is correctly assembled and plugged into a suitable power outlet before operation.

4.1 Using the Immersion Blender

1. Assemble the immersion blender shaft to the motor unit.
2. Immerse the blending shaft into the ingredients in a deep pot or the 700 ml measuring cup. Ensure the liquid level is below the maximum fill line.
3. Plug in the appliance.
4. Press and hold the desired speed button (Speed 1 or Speed 2) to start blending. The appliance has 2 speeds.
5. Move the blender up and down gently to ensure even blending.
6. Release the button to stop.
7. Unplug the appliance before removing the blending shaft.

Tip: For best results, do not operate continuously for more than 1 minute. Allow the motor to cool down between uses.

4.2 Using the Whisk Attachment

1. Assemble the whisk attachment to the motor unit.
2. Place ingredients in a suitable bowl.
3. Plug in the appliance.
4. Immerse the whisk into the ingredients.
5. Press and hold the desired speed button to start whisking.
6. Move the whisk gently to incorporate air.
7. Release the button to stop.
8. Unplug the appliance before removing the whisk attachment.

4.3 Using the Chopper Attachment

1. Assemble the chopper attachment with the blade and ingredients.
2. Ensure the motor unit is securely locked onto the chopper lid.
3. Plug in the appliance.
4. Press and hold the desired speed button to start chopping. Use short pulses for coarse chopping, or hold longer for finer results.

5. Release the button to stop.
6. Unplug the appliance before disassembling the chopper.
7. Carefully remove the chopping blade before emptying the bowl.

Caution: Do not overfill the chopper bowl. Ensure ingredients are cut into small pieces before chopping hard items.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your appliance. Always unplug the appliance before cleaning.

5.1 Motor Unit

- Wipe the motor unit with a damp cloth.
- Never immerse the motor unit in water or any other liquid.
- Do not use abrasive cleaners or scouring pads.

5.2 Immersion Blender Shaft, Whisk, and Measuring Cup

- These parts can be washed in warm soapy water.
- Rinse thoroughly and dry immediately.
- The stainless steel blending shaft is generally dishwasher safe, but hand washing is recommended for longevity.

5.3 Chopper Bowl, Lid, and Blade

- **Caution:** Handle the chopping blade with extreme care as it is very sharp.
- Wash the chopper bowl, lid, and blade in warm soapy water.
- Rinse thoroughly and dry immediately.
- These parts are generally dishwasher safe (top rack only), but hand washing is recommended for the blade.

5.4 Storage

Store the appliance and its accessories in a dry place, out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your appliance, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; motor unit not properly attached.	Check power connection; try a different outlet; ensure motor unit is securely locked to the attachment.
Motor stops during operation.	Overheating due to continuous use or too much load; ingredients too hard.	Unplug and let cool for 15-20 minutes; reduce ingredient quantity; cut hard ingredients into smaller pieces.

Problem	Possible Cause	Solution
Poor blending/chopping results.	Too many ingredients; not enough liquid (for blending); dull blade (unlikely for new product).	Reduce ingredient quantity; add more liquid; ensure blade is clean and free of debris.
Loud noise or vibration.	Attachment not properly secured; foreign object in blade area.	Ensure all attachments are locked correctly; unplug and check for obstructions.

If the problem persists after trying these solutions, please contact customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Silva Schneider
Model Number	SMS 6502
Power	700 Watts
Voltage	220 Volts
Speeds	2
Motor Type	DC (extra quiet)
RPM	18,000 rpm
Chopper Capacity	500 Milliliters
Measuring Cup Capacity	700 Milliliters
Material	Plastic, Stainless Steel
Color	Black, Stainless Steel
Product Dimensions (L x W x H)	8 x 6.5 x 36.5 cm
Item Weight	1.2 Kilograms
Cable Length	1 meter
Country of Origin	China

8. WARRANTY AND CUSTOMER SUPPORT

Silva Homeline products are manufactured to high-quality standards. In the unlikely event of a defect in material or workmanship, please refer to your purchase documentation for warranty details.

For technical assistance, spare parts, or any questions regarding your product, please contact your retailer or the Silva Homeline customer service department. Please have your model number (SMS 6502) and proof of purchase ready when contacting support.

Online Support: Visit the official Silva Homeline website for FAQs and further assistance.

