

Fujifilm Instax Square SQ6

Fujifilm Instax Square SQ6 Instant Film Camera User Manual

Model: Instax Square SQ6

1. INTRODUCTION

The Fujifilm Instax Square SQ6 is an instant film camera designed to capture and print square format photos. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and enjoyment.

The Instax Square SQ6 features a 1:1 square format, producing prints 1.3 times larger than Instax Mini prints. It includes a Fujinon 65.75mm f/12.6 lens for clear images and offers various shooting modes to enhance your photography experience.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Fujifilm Instax Square SQ6 Instant Film Camera (Ruby Red)
- 3x Fujifilm Instax Square Instant Film (60 Exposures total)
- Xpix Polyester Camera Strap
- Cleaning Kit (includes lens cleaner, microfiber cloth, air blower brush)
- Creative Wall Decor Hanging Frame
- 2 CR2 batteries (pre-installed or separate)



Image 2.1: The Fujifilm Instax Square SQ6 camera shown with its included accessories, such as film packs, batteries, strap, and cleaning kit.

3. CAMERA PARTS AND CONTROLS

Familiarize yourself with the main components of your Instax Square SQ6 camera:



Image 3.1: Front view of the Instax Square SQ6, showing the lens, flash, and selfie mirror.

- **Lens:** Fujinon 65.75mm f/12.6 lens.
- **Flash:** Built-in flash for illumination.
- **Selfie Mirror:** Located next to the lens for framing self-portraits.
- **Optical Viewfinder:** For composing your shots.
- **Shutter Button:** To capture photos.
- **Power Button:** To turn the camera on/off.
- **Mode Button:** To cycle through shooting modes.
- **Light/Dark Button:** To adjust exposure compensation.
- **Film Ejection Slot:** Where printed photos emerge.
- **Battery Compartment:** For CR2 batteries.



Image 3.2: Rear view of the Instax Square SQ6, highlighting the mode buttons and film counter.

4. SETUP

4.1. Installing Batteries

1. Locate the battery compartment cover on the side or bottom of the camera.
2. Open the cover and insert two CR2 lithium batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

4.2. Loading Instax Square Film

1. Press the film compartment latch to open the film cover on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark inside the camera's film compartment.

3. Insert the film pack straight into the compartment. Do not press down on the film pack.
4. Close the film compartment cover firmly until it clicks. The camera will automatically eject the black film cover sheet.
5. The film counter on the back of the camera will display the number of remaining exposures.



Image 4.1: The Instax Square SQ6 with its film compartment open, ready for film loading.

5. OPERATING THE CAMERA

5.1. Powering On/Off

Press the **ON/OFF** button to turn the camera on or off. When powered on, the lens will extend.

5.2. Basic Shooting

1. Turn on the camera.
2. Look through the optical viewfinder to compose your shot.
3. Press the shutter button to take a picture. The photo will be ejected from the film slot.

5.3. Shooting Modes

Press the **MODE** button to cycle through the available shooting modes:

- **Auto Mode:** Standard mode for general photography. The camera automatically adjusts exposure.
- **Selfie Mode:** Optimizes brightness and focal length for self-portraits. Use the selfie mirror for framing.
- **Macro Mode:** For close-up shots from 11.8 to 19.7 inches (30cm-50cm).
- **Landscape Mode:** For distant subjects (2m to infinity).
- **Double Exposure Mode:** Allows you to superimpose two images onto a single film frame. Press the shutter button twice.
- **Light/Dark Mode:** Adjusts exposure compensation by +/- 2/3-stop. Press the **Light/Dark** button to select.

5.4. Using Flash Gels

The camera includes orange, purple, and green flash gels. These can be attached to the built-in flash to add a color tint to your photos.

6. MAINTENANCE

6.1. Cleaning the Camera

- Use the provided microfiber cloth to gently wipe the camera body.
- For the lens, use the air blower brush to remove dust, then gently clean with the lens cleaner and microfiber cloth. Avoid touching the lens directly with your fingers.
- Do not use organic solvents or harsh chemicals to clean the camera.

6.2. Film Storage

Store unused Instax Square film packs in a cool, dry place, away from direct sunlight and high temperatures. Once opened, use the film within the recommended timeframe for best results.

7. TROUBLESHOOTING

- **Camera does not power on:** Check if the batteries are correctly inserted and fully charged. Replace if necessary.
- **Film does not eject:** Ensure a film pack is loaded correctly and that the film counter is not showing '0'.
- **Photos are too dark/light:** Adjust using the Light/Dark mode or ensure the flash is enabled in low-light conditions.
- **Blurred images:** Ensure the correct shooting mode (e.g., Macro for close-ups, Landscape for distant) is selected and hold the camera steady when pressing the shutter.
- **Film counter shows 'S' or 'E':** 'S' indicates no film is loaded or the black cover sheet has not been ejected. 'E' indicates an error or end of film.

8. SPECIFICATIONS

Feature	Detail
Film	Fujifilm Instax Square Instant Film
Picture Size	62 mm x 62 mm

Lens	Retractable lens, 2 components, 2 elements, f = 65.75 mm, 1:12.6
Viewfinder	Inverted Galileo finder, 0.4 x, with target spot
Focusing	Motor-driven 3-range switching (0.3 m - 0.5 m / 0.5 m - 2 m / 2 m - infinity), Macro Mode (0.3 m - 0.5 m), Normal Mode (0.5 m - 2 m), Landscape Mode (2 m - infinity)
Shutter Release	Programmed electronic shutter release, 1.6 sec - 1/400 sec.
Exposure Control	Automatic, Interlocking range (ISO 800): LV 5 - LV 15.5, Exposure compensation: ±2/3 EV
Film Ejection	Automatic
Flash	Built-in, automatic electronic flash (with brightness adjustment function), Forced flash mode (with brightness adjustment function), Flash off mode, Red eye reduction mode
Power Supply	Two CR2/DL CR2 lithium batteries
Dimensions	118.7 mm x 128.1 mm x 58.1 mm (excluding protrusions)
Weight	395 g (without batteries, strap, and film pack)
Color	Ruby Red

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Fujifilm website. Keep your proof of purchase for warranty claims.
For further assistance, you may contact Fujifilm customer service directly.

© 2024 Fujifilm. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question