

## Zebra PL-220

# Zebra PL-220 Thermal Laminator User Manual

Model: PL-220

## 1. INTRODUCTION

Thank you for choosing the Zebra PL-220 Thermal Laminator. This manual provides essential information for the safe and efficient operation of your laminator. Please read it thoroughly before use and keep it for future reference. The PL-220 is designed for laminating documents up to letter/legal size, offering robust performance for various office and personal needs.

## 2. SAFETY INSTRUCTIONS

- Always connect the laminator to a grounded power outlet.
- Do not operate the laminator with wet hands or near water.
- Keep children and pets away from the laminator during operation.
- The laminator generates heat. Avoid touching the lamination slot or rollers during and immediately after use to prevent burns.
- Never insert objects other than laminating pouches into the machine.
- Unplug the laminator when not in use or before cleaning.
- Ensure proper ventilation around the machine. Do not block air vents.
- If the machine jams or malfunctions, turn it off, unplug it, and refer to the troubleshooting section.

## 3. PRODUCT OVERVIEW

The Zebra PL-220 is a durable, all-metal thermal laminator featuring a 23 cm (9 inch) entry width, suitable for letter and legal size documents. It utilizes a 4-roller system for smooth, bubble-free lamination.



Figure 3.1: Angled view of the Zebra PL-220 Thermal Laminator, showing the document entry slot and overall design.

## Control Panel Features



Figure 3.2: Close-up of the control panel, showing the power and ready indicators, temperature dial, and function switches.

- **POWER Indicator (Red):** Illuminates when the machine is powered on.
- **READY Indicator (Green):** Illuminates when the machine has reached the selected operating temperature.
- **TEMP °C Dial:** Used to select the desired lamination temperature (80°C to 180°C).
- **HOT/COLD Switch:** Selects between thermal (hot) and pressure-sensitive (cold) lamination modes.
- **FORWARD/REVERSE Switch:** Controls the direction of the rollers. Use REVERSE to clear jams.
- **ON/OFF Switch:** Powers the laminator on or off.

## 4. SETUP

1. **Unpack:** Carefully remove the laminator from its packaging.
2. **Placement:** Place the laminator on a stable, flat surface with adequate space around it for proper ventilation and document feeding/exiting.
3. **Power Connection:** Plug the power cord into a standard electrical outlet.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Thermal Lamination (Hot)

1. **Power On:** Flip the ON/OFF switch to 'ON'. The red POWER indicator will light up.
2. **Select Mode:** Set the HOT/COLD switch to 'HOT'.
3. **Set Temperature:** Rotate the TEMP °C dial to the appropriate temperature for your laminating pouch thickness. Refer to the table below for recommended settings.
4. **Preheat:** Allow 2 to 3 minutes for the machine to preheat. The green READY indicator will light up when the selected temperature is reached.
5. **Prepare Document:** Place your document inside a laminating pouch, ensuring it is centered and there is an even border around the document.
6. **Laminate:** Insert the sealed edge of the laminating pouch squarely into the entry slot. The machine will automatically feed the pouch through. Do not pull or push the pouch.
7. **Cool Down:** Once the pouch exits the machine, place it on a flat surface to cool and harden.
8. **Power Off:** After use, turn the ON/OFF switch to 'OFF' and unplug the machine.

### 5.2 Recommended Temperature Settings

The optimal temperature depends on the thickness of your laminating pouch. Using a carrier is recommended for thinner pouches or delicate documents to prevent adhesive bleed and ensure smooth feeding.

# TABLA DE MEDIDAS MICA TERMICA

## TARJETA DE CREDITO (TDC)

5.4 CM X 8.6 CM

### IBM

5.9 CM X 8.6 CM

### -CLUB

6.5 CM X 9.5 CM

### ETIQUETA

6.5 CM X 10.8 CM

### ESPECIAL

8.0 CM X 11.5 CM

### POSTAL

9.0 CM X 13.5 CM

### CLUB

6.5 CM X 9.5 CM

### ETIQUETA

6.5 CM X 10.8CM

## CIRCULACION

10.0 CM X 14.5 CM

## CIRCULACION JALISCO

11.0 CM X 15.5 CM

## CIRCULACION MORELOS

12 CM X 18.0 CM

## CARTA

22.9CM X 29.2CM

## OFICIO

22.9 CM X 36.8 CM

**\*\*\*ESPESOR 8 MILÉSIMAS\*\*\***



Figure 5.1: Guide for selecting appropriate laminating pouch sizes and thicknesses.

### Thermal Lamination Temperature Guide

Pouch Thickness	Carrier Use	Recommended Temperature
8 mil	Without Carrier	130°C
8 mil	With Carrier	150°C
10 mil	Without Carrier	150°C

Pouch Thickness	Carrier Use	Recommended Temperature
10 mil	With Carrier	170°C

### 5.3 Cold Lamination

For heat-sensitive documents or self-adhesive pouches, use the cold lamination setting.

1. **Power On:** Flip the ON/OFF switch to 'ON'.
2. **Select Mode:** Set the HOT/COLD switch to 'COLD'.
3. **Prepare Document:** Place your document inside a cold laminating pouch.
4. **Laminate:** Insert the sealed edge of the pouch squarely into the entry slot. The machine will feed it through using pressure.
5. **Power Off:** After use, turn the ON/OFF switch to 'OFF' and unplug the machine.

### 5.4 Reverse Function

If a laminating pouch is misfed or begins to jam, immediately flip the FORWARD/REVERSE switch to 'REVERSE' to eject the pouch. Once the pouch is clear, return the switch to 'FORWARD' or 'OFF'.

## 6. MAINTENANCE

- **Cleaning:** Ensure the laminator is unplugged and completely cool before cleaning. Use a soft, dry cloth to wipe the exterior. For stubborn marks, a slightly damp cloth can be used, followed by drying.
- **Roller Cleaning:** Periodically run a laminator cleaning sheet (available separately) through the machine to remove any adhesive residue from the rollers.
- **Storage:** Store the laminator in a clean, dry place away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

### Common Issues and Solutions

Problem	Possible Cause	Solution
Laminator not turning on	No power, faulty switch	Check power cord connection and outlet. Ensure ON/OFF switch is engaged.
Pouch jams in machine	Misfed pouch, incorrect temperature, wrinkled pouch	Immediately use the REVERSE function. Ensure pouch is inserted straight. Check temperature setting.
Lamination is cloudy or bubbly	Temperature too low, old pouches, moisture	Increase temperature slightly. Use fresh pouches. Ensure documents are dry.
Lamination is wavy or warped	Temperature too high, pouch too thin	Decrease temperature slightly. Use appropriate pouch thickness.
Machine not heating up	Faulty heating element, incorrect mode	Ensure HOT mode is selected. If problem persists, contact technical support.

## 8. SPECIFICATIONS

---

- **Model:** PL-220
- **Entry Width:** 23 cm (9 inches)
- **Roller System:** 4 Rollers
- **Heating Time:** 2-3 minutes
- **Lamination Speed:** Not specified (automatic feed)
- **Max Pouch Thickness:** Up to 10 mil
- **Lamination Modes:** Hot and Cold
- **Reverse Function:** Yes
- **Supported Paper Sizes:** Letter, Legal, and smaller formats
- **Construction:** All-metal body
- **Dimensions:** Approximately 23 cm (L) x 23 cm (W) x 23 cm (H)

## 9. WARRANTY AND SUPPORT

---

The Zebra PL-220 Thermal Laminator comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact our technical service department.



USO RUDO



SERVICIO TECNICO



BOTON DE REVERSA



CALENTAMIENTO 3-5 MIN



REGULADOR DE TEMPERATURA



MICA TERMICA HASTA CALIBRE 10



4 RODILLOS



KIT DE REGALO



Figure 9.1: Key features including 1-year warranty and technical service availability.

Please have your model number (PL-220) and proof of purchase ready when contacting support.