

[Manuals.plus](#) /

> [HADEN](#) /

> Haden Dual Brew 10 Cup Hot and Iced Coffee Maker with 120 Minute Keep Warm, Delay Brew, Adjustable Strength, Programmable Clock, and Anti Drip, Ivory Ivory / Chrome

HADEN 75141

Haden Dual Brew Coffee Maker Instruction Manual

Model: 75141 | Brand: HADEN

1. INTRODUCTION

Thank you for choosing the Haden Dual Brew Coffee Maker. This appliance is designed to provide you with both hot and iced coffee options, featuring a generous 10-cup capacity, programmable settings, and a sleek design. To ensure safe and optimal performance, please read this instruction manual thoroughly before first use and retain it for future reference.





Figure 1: Haden Dual Brew Coffee Maker (Ivory/Chrome)

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric

shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot liquids.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Haden Dual Brew Coffee Maker for optimal use.

DUAL BREW HOT & ICE COFFEE MAKER



Figure 2: Product Dimensions and Key Features

- **Water Reservoir:** Located at the top, for filling with water.
- **Control Panel:** Digital display with touch buttons for various settings.
- **Filter Basket:** Holds the reusable mesh filter for coffee grounds.
- **Glass Carafe:** 10-cup capacity with ergonomic handle and measurement markings.
- **Warming Plate:** Keeps brewed coffee hot.
- **Anti-Drip Function:** Prevents drips when carafe is removed during brewing.



Figure 3: View of the removable filter basket.



Figure 4: Water level markings on the side of the coffee maker.

4. SETUP AND FIRST USE

Before using your coffee maker for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and dispose of them responsibly.
2. **Clean Components:** Wash the glass carafe, lid, and reusable filter basket in warm, soapy water. Rinse thoroughly and dry.
3. **Wipe Exterior:** Wipe the exterior of the coffee maker with a damp cloth.

4. First Brew Cycle (Cleaning):

- Fill the water reservoir to the MAX line with fresh, cold water.
- Place the empty filter basket and carafe in their positions.
- Press the **CLEAN** button on the control panel to run a full brewing cycle without coffee grounds.
- Discard the water from the carafe once the cycle is complete.
- Repeat this process 2-3 times to ensure the appliance is thoroughly cleaned.

5. OPERATING INSTRUCTIONS

Your Haden Dual Brew Coffee Maker offers versatile brewing options.

5.1. Brewing Hot Coffee

1. Open the top lid and fill the water reservoir with fresh, cold water up to your desired cup marking (up to 10 cups).
2. Place the reusable filter into the filter basket. Add your desired amount of ground coffee to the filter. A general guideline is 1 tablespoon of coffee per cup.
3. Close the top lid securely and place the empty glass carafe on the warming plate.
4. Press the **POWER** button to begin brewing. The display will show the brewing progress.
5. Once brewing is complete, the coffee maker will automatically switch to the Keep Warm function.

5.2. Brewing Iced Coffee

1. Fill the glass carafe with ice cubes up to the "MAX ICE CUBE" line.
2. Add fresh, cold water to the water reservoir up to the desired cup marking (e.g., for 6 cups of iced coffee, fill to the 6-cup line).
3. Place the reusable filter into the filter basket. Add your desired amount of ground coffee. For iced coffee, you may prefer a slightly stronger brew.
4. Close the top lid securely and place the carafe with ice on the warming plate.
5. Press the **ICE** button on the control panel, then press the **POWER** button to begin brewing.
6. The coffee will brew directly over the ice, chilling it instantly.

Your browser does not support the video tag.

Video 1: Official demonstration of the Haden Dual Brew Coffee Maker, showcasing both hot and iced coffee brewing processes and key features.

5.3. Programmable Features

• Setting the Clock:

- Press the **TIME** button.
- Use the **HOUR** and **MIN** buttons to set the current time.
- Press **TIME** again to confirm.

• Delay Brew:

- Set the current time first.
- Prepare the coffee maker with water and grounds as usual.
- Press the **PROG** button. The display will flash.
- Use the **HOUR** and **MIN** buttons to set the desired brew time.
- Press **PROG** again to activate the delay brew. The indicator light will illuminate.

- **Keep Warm Function:** The coffee maker automatically keeps coffee warm for 120 minutes after brewing. You can

adjust the warm time using the **WARM TIME** button.

- **Adjustable Strength (Bold Brew):** For a stronger coffee, press the **BOLD** button before starting the brew cycle. This will slow down the brewing process to extract more flavor.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your coffee maker.

- **Daily Cleaning:**
 - After each use, unplug the coffee maker and allow it to cool.
 - Remove the carafe, lid, and reusable filter basket. Wash them in warm, soapy water or place them on the top rack of your dishwasher.
 - Wipe the warming plate with a damp cloth to remove any coffee spills.
 - Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling (Monthly or Bi-Monthly):**
 - Mineral deposits from water can affect performance. To descale, fill the water reservoir with a mixture of white vinegar and water (1:2 ratio).
 - Place the empty carafe on the warming plate.
 - Press the **CLEAN** button to run a full cycle.
 - After the cycle, discard the vinegar solution.
 - Run 2-3 cycles with fresh, cold water to rinse thoroughly and remove any residual vinegar taste.

7. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	Not plugged in; power not on; delay brew set.	Ensure unit is plugged in and powered on. Check if delay brew is active.
Weak coffee.	Insufficient coffee grounds; too much water; filter clogged.	Add more coffee grounds. Use correct water-to-coffee ratio. Clean filter. Consider using Bold Brew setting.
Coffee overflows from filter basket.	Too many coffee grounds; carafe not placed correctly; filter clogged.	Reduce coffee grounds. Ensure carafe is fully seated. Clean filter.
Carafe leaks when pouring.	Lid not properly secured.	Ensure the carafe lid is securely attached and aligned before pouring.

8. SPECIFICATIONS

Feature	Detail
Brand	HADEN
Model Name	Dual Brew 12 Cup Hot & Iced Digital Drip Coffee Maker
Item Model Number	75141

Feature	Detail
Color	Ivory / Chrome
Product Dimensions	10"D x 7.25"W x 14"H
Item Weight	5.85 pounds
Capacity	10-Cup (2.1L)
Special Features	Auto Shut-Off, Programmable, Keep Warm, Delay Brew, Adjustable Strength
Filter Type	Washable Filter
Voltage	120 Volts
Human Interface Input	Touchscreen
UPC	017342751415

9. WARRANTY AND SUPPORT

The Haden Dual Brew Coffee Maker comes with a 1-year guarantee from the date of purchase. For warranty claims, technical support, or any product-related inquiries, please contact HADEN customer service. You can find more information and contact details on the official HADEN website www.hadenusa.com.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question