

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Gueray](#) /
- > [Gueray 64GB Bluetooth 5.0 HiFi MP3 Player User Manual](#)

Gueray P5

Gueray 64GB Bluetooth 5.0 HiFi MP3 Player User Manual

Model: P5

INTRODUCTION

Thank you for choosing the Gueray P5 64GB Bluetooth 5.0 HiFi MP3 Player. This device is designed to provide a versatile and high-quality audio experience, combining a music player, voice recorder, FM radio, and e-book reader in one compact unit. With its 64GB internal storage, expandable memory, Bluetooth 5.0 connectivity, and built-in speaker, it's your ideal companion for music on the go. Please read this manual carefully to understand how to operate your new device and enjoy its full range of features.

GUERAY BLUETOOTH 5.0 MP3 PLAYER WITH 64GB LARGE MEMORY

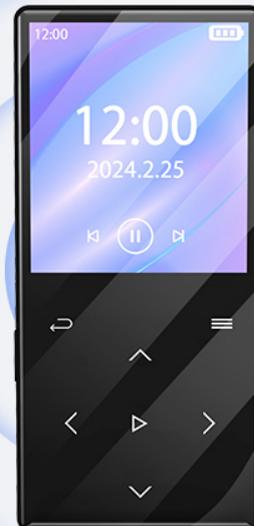
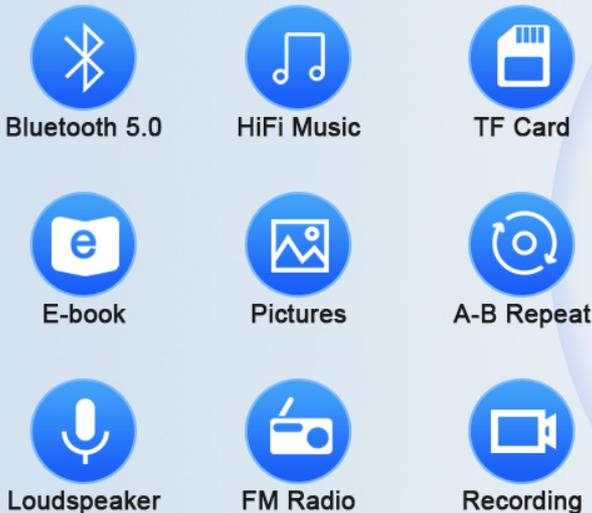


Image: Multifunctional MP3 Player with various feature icons.

PRODUCT OVERVIEW

Package Contents

- Gueray P5 MP3 Player
- USB Charging Cable
- User Manual
- (Note: Headphones may or may not be included depending on the specific package.)

Device Layout and Controls

Familiarize yourself with the buttons and ports on your Gueray MP3 player for easy operation.



Image: Gueray MP3 Player with labeled controls and ports.

1. **Speaker Grilles:** Built-in speaker for audio playback without headphones.
2. **USB Jack:** For charging and data transfer.
3. **TF Card Slot:** Insert a microSD card for expanded storage (up to 128GB).
4. **Headphone Jack / Reset Button:** Connect wired headphones. A small pin can be used to press the reset button inside this port if the device freezes.
5. **Volume Up:** Increase volume.
6. **Volume Down:** Decrease volume.
7. **Return:** Go back to the previous menu or screen.
8. **Power ON/OFF:** Long press to power on/off the device. Short press to turn the screen on/off.
9. **Confirm/Play/Pause:** Confirm selection or play/pause music/video.
10. **Last:** Navigate to the previous item or track.
11. **Menu:** Access menu options.
12. **(+) Up Selection Button:** Move selection up or increase value.
13. **Next:** Navigate to the next item or track.
14. **(-) Down Selection Button:** Move selection down or decrease value.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player.

- Connect the included USB cable to the MP3 player's USB Jack.
- Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.

- The battery icon on the screen will indicate charging status. A full charge typically takes about 2 hours.

2. Inserting a TF Card (MicroSD Card)

The device comes with 64GB of internal storage. You can expand this by inserting a TF (microSD) card up to 128GB.

- Locate the TF Card Slot on the side of the device.
- Gently insert the microSD card into the slot until it clicks into place. Ensure the card is oriented correctly.
- To remove, push the card in slightly until it springs out.



Image: MP3 Player demonstrating 64GB large storage and TF card insertion.

3. Transferring Music and Files

You can transfer audio files, e-books, and other supported media from your computer to the MP3 player.

- Connect the MP3 player to your computer using the USB cable.
- The device will appear as a removable disk drive on your computer.
- Drag and drop your desired files into the appropriate folders on the MP3 player (e.g., "Music" for audio files).
- Once files are transferred, safely eject the device from your computer before disconnecting the USB cable.

OPERATING INSTRUCTIONS

Power On/Off and Basic Navigation

- **Power On:** Long press the **Power ON/OFF** button.
- **Power Off:** Long press the **Power ON/OFF** button until the device shuts down.
- **Screen On/Off:** Short press the **Power ON/OFF** button.

- **Navigation:** Use the **Up/Down Selection Buttons** to scroll through menus.
- **Select:** Press the **Confirm/Play/Pause** button to select an option.
- **Return:** Press the **Return** button to go back.

Music Playback

The Gueray MP3 player supports various audio formats for high-fidelity lossless sound.

- From the main menu, select "Music".
- Browse your music by Artist, Album, Songs, Playlists, etc.
- Select a song and press **Confirm/Play/Pause** to start playback.
- Use **Last** and **Next** buttons to skip tracks.
- Adjust volume using the **Volume Up/Down** buttons.
- Supported audio formats include: MP3, FLAC, WMA, AAC-LC, WAV, M4A, APE, OGG.



Image: Supported music file formats for HiFi lossless sound.

Bluetooth Connection

Connect your MP3 player to Bluetooth headphones, speakers, or car audio systems.

- From the main menu, select "Bluetooth".
- Ensure your Bluetooth device (headphones, speaker) is in pairing mode.
- The MP3 player will scan for available devices. Select your device from the list.
- Once connected, the Bluetooth icon will appear on the screen.
- Enjoy wireless audio playback.

MUSIC PLAYER WITH WIDER COMPATIBILITY



Image: Bluetooth 5.0 connectivity with various devices.

FM Radio

Listen to your favorite FM radio stations. **Note: Wired headphones must be connected to act as an antenna for FM radio functionality.**

- Connect wired headphones to the Headphone Jack.
- From the main menu, select "FM Radio".
- Use the navigation buttons to scan for stations or manually tune to a frequency.
- Save your favorite stations for quick access.

Voice Recorder

Record lectures, meetings, or personal notes with the built-in voice recorder.

- From the main menu, select "Recorder".
- Choose "Start Voice Recording" to begin.
- Press **Confirm/Play/Pause** to pause/resume recording.
- Press **Return** to stop and save the recording.
- Recordings are saved in the "Record" folder.



Image: Simple recorder function for various scenarios.

E-book Reader

Read text files (.TXT format) on your MP3 player.

- Transfer .TXT files to the "Ebook" folder on your device.
- From the main menu, select "Ebook".
- Choose a file to open and read.
- Use the navigation buttons to scroll through pages.

Built-in Speaker

Enjoy music aloud without headphones using the integrated HD speaker.

- When playing music, simply disconnect any wired headphones or Bluetooth devices.
- The audio will automatically switch to the built-in speaker.
- Adjust volume using the **Volume Up/Down** buttons.

BUILT-IN SPEAKERS

Free your hands and relax your ears, say goodbye to wired headphones, enjoy your music more convenient.



Image: Enjoying music with built-in speakers.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly.
- **Avoid Impact:** Protect the device from drops and impacts, which can damage internal components.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Device does not power on.	<ul style="list-style-type: none"> ◦ Ensure the device is fully charged. Connect it to a power source for at least 10 minutes. ◦ If the device is frozen, try resetting it by inserting a thin pin into the reset hole (located within the headphone jack).
No sound from headphones/speaker.	<ul style="list-style-type: none"> ◦ Check the volume level. ◦ Ensure headphones are properly plugged in or Bluetooth device is correctly paired. ◦ Test with different headphones or a different audio file.
Cannot connect to Bluetooth device.	<ul style="list-style-type: none"> ◦ Ensure both the MP3 player and the Bluetooth device are in pairing mode. ◦ Make sure the devices are within range (typically 10 meters). ◦ Turn off and on Bluetooth on both devices and try again. ◦ Clear previous Bluetooth connections on both devices if necessary.
FM Radio not working.	<ul style="list-style-type: none"> ◦ Ensure wired headphones are connected, as they serve as the antenna. ◦ Try scanning for stations again in a different location.
Files not appearing after transfer.	<ul style="list-style-type: none"> ◦ Ensure files are in supported formats (e.g., MP3, FLAC for music, TXT for e-books). ◦ Verify files were transferred to the correct folders on the device. ◦ Safely eject the device from your computer before disconnecting.

SPECIFICATIONS

Feature	Detail
Brand	Gueray
Model Number	P5
Color	Black
Storage Capacity	64 GB (expandable up to 128 GB via Micro SD/TF card)
Connectivity Technology	Bluetooth 5.0
Screen Size	2 inches
Special Features	Bluetooth, Digital Radio (FM), Voice Recorder, E-book Reader, Built-in Speaker
Compatible Devices	Smartphone, Personal Computer, Speaker, Headset
Supported Audio Formats	MP3, FLAC, WMA, AAC-LC, WAV, M4A, APE, OGG
Battery Life	Up to 40 hours of music playback
Charging Time	Approximately 2 hours
Weight	85 grams

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Gueray website.

© 2025 Gueray. All rights reserved.