

BLACK+DECKER CM0122

BLACK+DECKER 12-Cup Digital Coffee Maker and Coffee Grinder Bundle

Model: CM0122

Brand: BLACK+DECKER



1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your BLACK+DECKER 12-Cup Digital Coffee Maker (CM0122) and Coffee Grinder (CBG110S) Bundle. Please read this manual thoroughly before first use and retain it for future reference.

Important Safety Information

- Always unplug the appliance from the outlet before cleaning or when not in use.
- Do not immerse the coffee maker or grinder in water or other liquids.
- Ensure the appliance is placed on a stable, level surface away from the edge of the countertop.
- Keep hands and utensils away from moving blades during operation of the coffee grinder.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only.

2. PRODUCT COMPONENTS

Your BLACK+DECKER Coffee Maker and Grinder Bundle includes the following main components:

- 12-Cup Digital Coffee Maker (CM0122)
- Glass Carafe with ergonomic handle

- Removable Filter Basket
- Coffee Grinder (CBG110S) with stainless steel blades and bowl
- Grinder Lid



Figure 2.1: Overview of the BLACK+DECKER Coffee Maker and Grinder Bundle.



Figure 2.2: Detailed view of the 12-Cup Digital Coffee Maker, highlighting the water reservoir and control panel.





Figure 2.3: Detailed view of the Coffee Grinder, showing its stainless steel finish and compact design.

3. INITIAL SETUP

3.1 Coffee Maker Setup

1. Unpack all components and remove any packaging materials.
2. Wash the carafe, filter basket, and carafe lid in warm, soapy water. Rinse thoroughly and dry.
3. Place the coffee maker on a flat, stable surface.
4. Plug the power cord into a standard electrical outlet.
5. Before first use, run a full cycle with only water to clean the internal components. Fill the water reservoir to the 12-cup mark, place an empty filter basket, and brew. Discard the water.

3.2 Coffee Grinder Setup

1. Unpack the grinder and remove any packaging.
2. Wipe the exterior with a damp cloth. The stainless steel bowl and blades are not removable for washing, so avoid immersing the unit in water.
3. Ensure the lid fits securely on the grinding bowl.

4. OPERATING INSTRUCTIONS

4.1 Using the Coffee Grinder (CBG110S)

1. Ensure the grinder is unplugged before adding ingredients.
2. Add whole coffee beans, spices, herbs, or grains to the stainless steel grinding bowl. Do not overfill; ensure the lid can close securely.
3. Place the lid firmly on the grinder.
4. Plug the grinder into an electrical outlet.
5. Press and hold the lid down to activate the grinding action. Grind in short bursts (5-10 seconds) to achieve desired consistency. For fine grounds, continue grinding for longer periods.
6. Once desired consistency is reached, release the lid and unplug the grinder.
7. Carefully remove the lid and pour out the ground contents.



Figure 4.1: Visual representation of whole coffee beans versus 30% better ground coffee, illustrating the grinder's effectiveness.



Figure 4.2: The coffee grinder shown with various ingredients, demonstrating its versatility beyond just coffee beans.

4.2 Using the 12-Cup Digital Coffee Maker (CM0122)

4.2.1 Brewing Hot Coffee

1. Open the top lid and fill the water reservoir with fresh, cold water to the desired cup marking. Do not exceed the 12-cup MAX fill line.
2. Place a standard basket-style paper filter into the removable filter basket.
3. Add the desired amount of ground coffee to the filter. A general guideline is 1 tablespoon of coffee per cup. Adjust to taste.
4. Close the top lid securely.
5. Place the empty glass carafe on the warming plate.
6. Plug the coffee maker into an electrical outlet.
7. Press the **BREW** button to start the brewing cycle. The indicator light will illuminate.
8. The coffee maker will automatically keep coffee warm for up to 4 hours after brewing.



**Large
Capacity**

Brews up to 12 Cups**

** Cup equals approximately 5 oz. (varies by brewing technique).

Figure 4.3: The coffee maker shown brewing hot coffee into the glass carafe, demonstrating its large capacity.

4.2.2 Brewing Iced Coffee

1. Fill the glass carafe with ice cubes up to the indicated "ICED" line.
2. Fill the water reservoir with fresh, cold water to the desired cup marking, ensuring it does not exceed the 12-cup MAX fill line.
3. Place a standard basket-style paper filter into the removable filter basket.
4. Add the desired amount of ground coffee to the filter. For iced coffee, a stronger ratio is recommended to prevent dilution.
5. Close the top lid securely.
6. Place the carafe filled with ice on the warming plate.
7. Press the **ICED COFFEE** button to start the brewing cycle. The indicator light will illuminate.
8. The coffee maker uses exclusive brewing technology to prevent dilution, ensuring a full-bodied iced coffee.



Iced Coffee Function

High-Quality Iced Brews,
75% Stronger^{*}

^{*}12 cups iced coffee brewed with BLACK+DECKER CM0122-1BP vs. 12 cups hot coffee brewed with the BLACK+DECKER CM0915 and poured over ice.

Figure 4.4: The coffee maker preparing iced coffee, showing ice in the carafe and the "Iced Coffee Function" highlighted.

4.2.3 Quick Touch Programming

- To set the clock: Press the **HR** button to set the hour and **MIN** button to set the minute.
- To program auto-brew: After setting the clock, press the **BREW LATER** button. The indicator light will flash. Use the **HR** and **MIN** buttons to set the desired brew time. Press **BREW LATER** again to confirm. The light will remain illuminated, indicating programmed brew.
- The **SNEAK-A-CUP™** feature allows you to temporarily stop the flow of coffee to pour a cup before the brewing cycle is complete. Replace the carafe within 20 seconds to prevent overflow.

5. CARE AND MAINTENANCE

5.1 Daily Cleaning

- Always unplug both appliances before cleaning.
- **Coffee Maker:** Wash the carafe, carafe lid, and filter basket in warm, soapy water after each use. These parts are top-rack dishwasher safe. Wipe the exterior of the coffee maker with a damp cloth. Do not use abrasive

cleaners.

- **Coffee Grinder:** Unplug the grinder. Wipe the grinding bowl and blades with a dry brush or cloth to remove residual grounds. Wipe the exterior with a damp cloth. Do not immerse the grinder in water.

5.2 Descaling the Coffee Maker

Mineral deposits (calcium) can build up in your coffee maker over time, affecting performance. Descale your coffee maker every 60-80 uses, or more frequently in hard water areas.

1. Pour 4 cups of white vinegar into the water reservoir.
2. Place an empty paper filter in the filter basket.
3. Place the empty carafe on the warming plate.
4. Brew the vinegar solution through the coffee maker as if brewing coffee.
5. After the cycle is complete, turn off the coffee maker and let it sit for 30 minutes.
6. Discard the vinegar solution.
7. Fill the reservoir with fresh, cold water and run several full brewing cycles with water only to rinse thoroughly. Repeat until the vinegar odor is gone.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	Appliance not plugged in; power outage; brew cycle not initiated; water reservoir empty.	Ensure plug is securely in outlet; check circuit breaker; press BREW button; fill water reservoir.
Coffee overflows from filter basket.	Too much coffee grounds; filter basket not seated correctly; carafe not on warming plate; clogged filter.	Reduce coffee amount; ensure filter basket is properly inserted; ensure carafe is fully on warming plate; use a new filter.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; coffee grounds too coarse/fine.	Adjust coffee amount; adjust grind consistency with the grinder.
Grinder does not operate.	Lid not securely in place; not plugged in.	Ensure lid is pressed down firmly; check power connection.
Iced coffee is diluted.	Not enough ice; incorrect coffee-to-water ratio for iced brew.	Ensure carafe is filled with ice to the "ICED" line; use more coffee grounds for iced brew.

7. SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER

Feature	Detail
Model Name (Coffee Maker)	CM0122
Model Name (Coffee Grinder)	CBG110S
Coffee Maker Type	Drip Coffee Machine
Capacity	12 Cups
Color	Black with Stainless Steel finish
Special Features	Integrated Coffee Grinder, Versatile Brewing (Hot/Iced), Quick Touch Programming, Sneak-a-Cup, 4-hour Keep Warm Plate, Vortex Technology (Coffee Maker), Stainless Steel Blades (Grinder)
Filter Type	Paper (Basket-style)
Operation Mode	Semi-Automatic
Included Components	Coffee Grinder, Carafe
Coffee Input Type	BEANS (for grinder)
Manufacture Year	2022
Date First Available	June 11, 2024

8. WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official BLACK+DECKER website. Keep your purchase receipt as proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

If you have any questions or require assistance with your BLACK+DECKER Coffee Maker and Grinder Bundle, please contact BLACK+DECKER customer support. Contact details can typically be found on the manufacturer's website or on the product packaging.

You can also visit the official BLACK+DECKER store on Amazon for more information:[BLACK+DECKER Amazon Store](#)



© 2024 BLACK+DECKER. All rights reserved.