

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER 2.5 Cu Ft Mini Fridge and Farberware 0.7 Cu Ft Countertop Microwave Instruction Manual

BLACK+DECKER a7e8b647-a4be-46b0-8413-3e56a2828f65

BLACK+DECKER 2.5 Cu Ft Mini Fridge and Farberware 0.7 Cu Ft Countertop Microwave Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your BLACK+DECKER 2.5 Cu Ft Mini Fridge and Farberware 0.7 Cu Ft Countertop Microwave bundle. Please read this manual thoroughly before use and retain it for future reference.



Image: The BLACK+DECKER 2.5 Cu Ft Mini Fridge and Farberware 0.7 Cu Ft Countertop Microwave, presented as a bundle.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

General Safety

- Read all instructions before using the appliances.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Unplug from outlet when not in use and before cleaning.
- Do not allow cord to hang over edge of table or counter, or touch hot surfaces.

Mini Fridge Specific Safety

- Ensure proper ventilation around the unit.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is intended to be used in household and similar applications.

Microwave Specific Safety

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- Regularly clean the oven cavity, door, and door seals.

SETUP AND INSTALLATION

Mini Fridge Setup

1. **Unpacking:** Carefully remove all packaging materials. Ensure all components are present.
2. **Placement:** Place the mini fridge on a flat, stable surface away from direct sunlight and heat sources. Allow at least 4 inches of space around the back and sides for proper ventilation.
3. **Leveling:** Adjust the leveling feet to ensure the unit is stable and level.
4. **Power Connection:** Plug the refrigerator into a dedicated grounded electrical outlet. Allow the unit to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

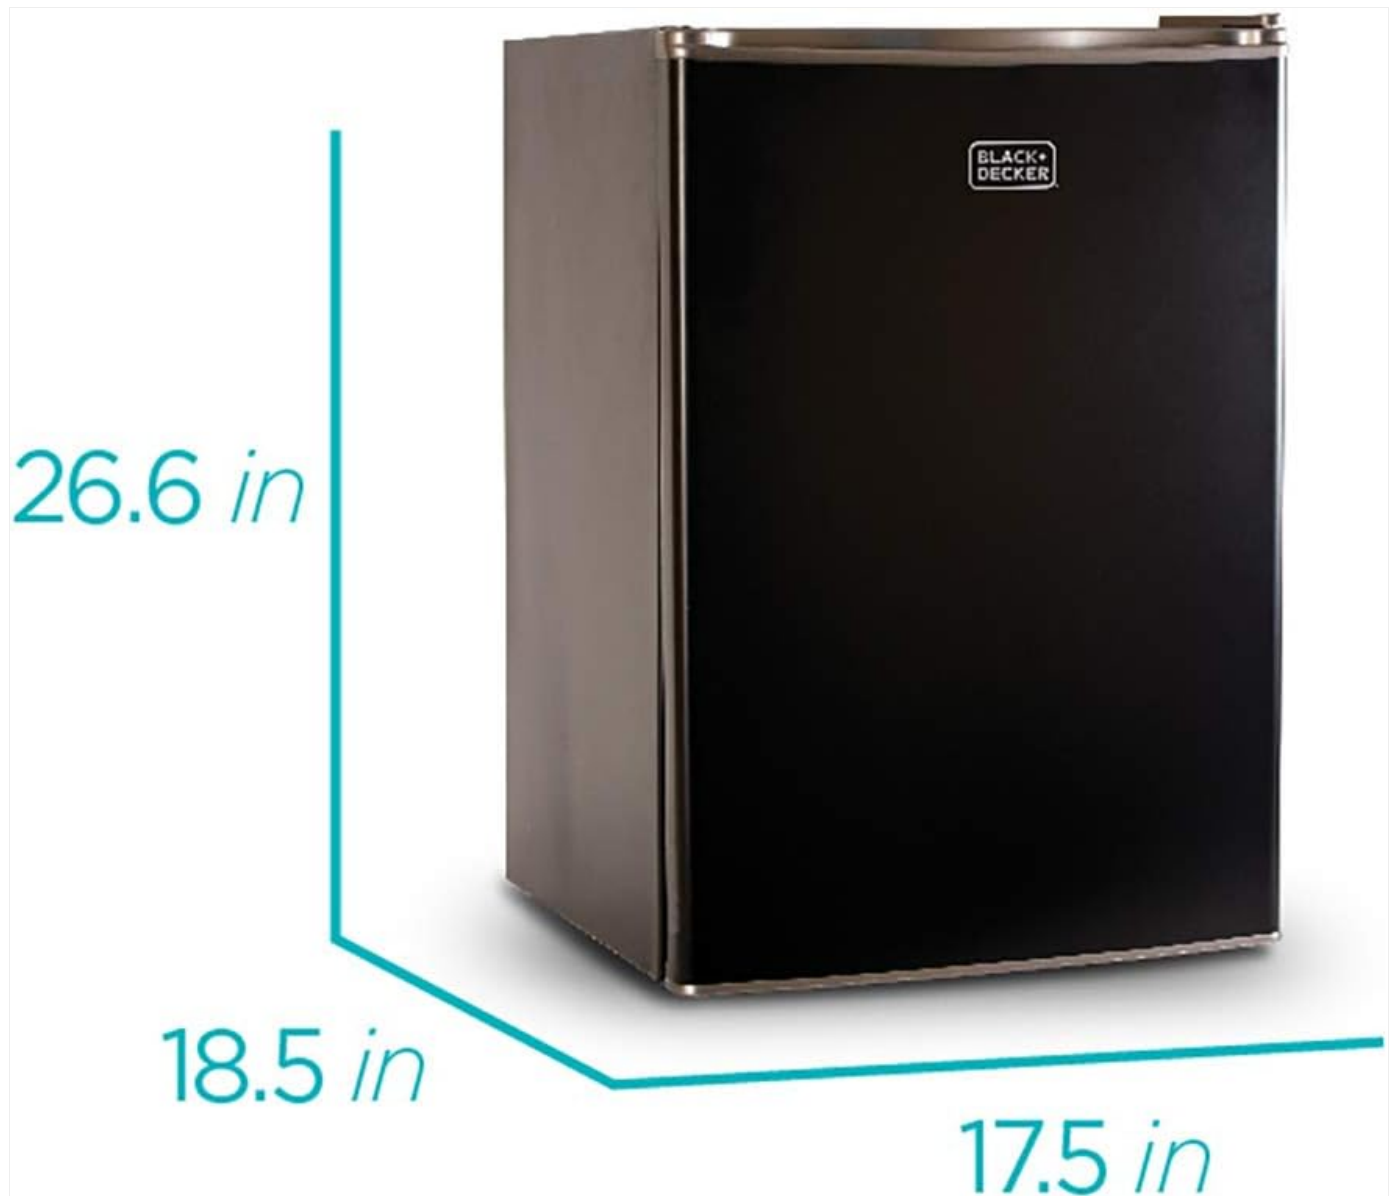


Image: The BLACK+DECKER 2.5 Cu Ft Mini Fridge with its dimensions (17.5 in W, 18.5 in D, 26.6 in H) indicated, illustrating its compact size for placement considerations.

Microwave Setup

1. **Unpacking:** Remove the microwave oven and all materials from the carton and oven cavity.
2. **Placement:** Place the microwave on a flat, stable surface. Ensure there is adequate ventilation space (at least 3 inches on top, sides, and back). Do not block air vents.
3. **Power Connection:** Plug the microwave into a dedicated grounded electrical outlet.

OPERATING INSTRUCTIONS

Mini Fridge Operation

- **Temperature Control:** The refrigerator has an adjustable thermostat. Turn the dial to the desired setting. Higher numbers typically indicate colder temperatures.
- **Initial Cooling:** Allow the refrigerator to cool for several hours before placing food inside.
- **Storage:** Utilize the glass shelves and door storage for organized food and beverage placement. The small freezer compartment is suitable for ice trays or small frozen items.



Image: Front view of the BLACK+DECKER 2.5 Cu Ft Mini Fridge, showcasing its compact design and recessed door handle.

Microwave Operation

- **Setting the Clock:** Plug in the microwave. Press the "Clock" button, enter the current time using the number pad, then press "Clock" again to confirm.
- **Cooking Food:**
 - a. Place food in a microwave-safe container.
 - b. Enter desired cooking time using the number pad.
 - c. Press "Start".
- **Power Levels:** To adjust power, press "Power", then enter a number from 1-10 (10 being 100% power).
- **One-Touch Cooking:** Use preset buttons like "Popcorn", "Potato", "Pizza", "Frozen Vegetable", "Beverage", or "Dinner Plate" for quick cooking of common items.
- **Defrosting:** Use the "Time Defrost" or "Weight Defrost" functions as appropriate.

- **Child Safety Lock:** To activate, press and hold the "Stop/Cancel" button for 3 seconds. The lock indicator will appear. Repeat to deactivate.



Image: Close-up of the Farberware 0.7 Cu Ft Countertop Microwave control panel, highlighting features such as defrost options, auto-cook presets, intuitive control panel, one-touch start, and child safety lock.

MAINTENANCE AND CLEANING

Mini Fridge Maintenance

- **Cleaning:** Unplug the unit. Clean interior and exterior surfaces with a soft cloth and mild detergent. Do not use abrasive cleaners.
- **Defrosting:** The unit features frost-free defrost. However, if ice builds up in the freezer compartment, manually defrost by unplugging the unit and allowing ice to melt.
- **Door Seal:** Regularly check and clean the door gasket to ensure a tight seal.

Microwave Maintenance

- **Cleaning:** Unplug the microwave. Wipe the interior and exterior with a damp cloth and mild soap. Remove and wash the glass turntable and support ring in warm, soapy water.
- **Door Seals:** Keep the door seals clean to ensure proper operation and prevent microwave energy leakage.
- **Odor Removal:** To remove odors, combine a cup of water with several lemon slices or a tablespoon of vinegar in a microwave-safe bowl. Microwave on high for 2-3 minutes, then let stand for 5 minutes before removing.

TROUBLESHOOTING

Mini Fridge Troubleshooting

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; temperature control set to "OFF".	Ensure plug is secure; reset circuit breaker; adjust temperature control.
Temperature is too warm.	Door opened too frequently; warm food placed inside; poor ventilation; thermostat setting too high.	Minimize door openings; allow food to cool before storing; ensure adequate clearance; adjust thermostat to a colder setting.
Unusual noises.	Unit not level; objects vibrating against the unit.	Level the unit using adjustable feet; ensure nothing is touching the back or sides.

Microwave Troubleshooting

Problem	Possible Cause	Solution
Oven will not start.	Door not closed properly; plug not inserted firmly; child safety lock activated.	Close door securely; check plug connection; deactivate child safety lock.
Food not heating.	Incorrect cooking time/power level; food not microwave-safe.	Adjust settings; ensure appropriate cookware is used.
Sparkling inside oven.	Metal or foil in oven; food residue.	Remove metal objects; clean oven interior thoroughly.

SPECIFICATIONS

BLACK+DECKER 2.5 Cu Ft Mini Fridge

- Brand:** BLACK+DECKER
- Model Number:** a7e8b647-a4be-46b0-8413-3e56a2828f65 (Bundle Model)
- Capacity:** 2.5 Cubic Feet
- Installation Type:** Freestanding
- Defrost System:** Frost Free
- Shelf Type:** Glass
- Number of Shelves:** 2
- Number of Doors:** 1
- Form Factor:** Compact
- Approximate Dimensions (W x D x H):** 17.5 in x 18.5 in x 26.6 in

Farberware 0.7 Cu Ft Countertop Microwave

- Brand:** Farberware
- Capacity:** 0.7 Cubic Feet
- Power Output:** 700 Watts
- Power Levels:** 10
- Cooking Functions:** 6 one-touch presets
- Special Features:** Child safety lock, easy-to-clean interior, LED display, kitchen timer, clock.

WARRANTY AND SUPPORT

Warranty information for the BLACK+DECKER Mini Fridge and Farberware Microwave is typically provided in a separate warranty card or can be found on the respective manufacturer's official websites. Please refer to these resources for details regarding warranty coverage, terms, and conditions.

For technical support or service inquiries, please contact the customer service department of BLACK+DECKER for the mini fridge and Farberware for the microwave. Contact information is usually available in the product packaging or on their official websites.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question