

[Manuals.plus](#) /

> [MIUZZY](#) /

> MIUZZY M244 Cordless Vacuum Battery Instruction Manual

## MIUZZY M244-B

# MIUZZY M244 Cordless Vacuum Battery Instruction Manual

Model: M244-B

## 1. PRODUCT OVERVIEW

This manual provides instructions for the MIUZZY 29.6V Lithium-Ion replacement battery, designed for the M244 cordless vacuum cleaner. This high-capacity battery offers extended runtime for efficient cleaning.

- **Voltage:** 29.6V
- **Battery Type:** Lithium-Ion
- **Compatibility:** Specifically engineered for the MIUZZY M244 cordless vacuum model.
- **Runtime:** Up to 60 minutes on a single charge (in Min mode, based on MIUZZY lab testing).
- **Rechargeable:** Designed for repeated use.



Figure 1: MIUZZY 29.6V Lithium-Ion Battery for M244 Cordless Vacuum. This image shows the battery unit itself, highlighting its compact design.

## 2. SAFETY INFORMATION

Please read and understand all safety instructions before using the battery. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Charging:** Only use the original charger provided with your MIUZZY M244 vacuum cleaner to charge this battery. Using an incompatible charger may damage the battery or cause fire.

- **Storage:** Store the battery in a cool, dry place, away from direct sunlight, heat sources, and flammable materials.
- **Handling:** Do not short-circuit the battery terminals. Do not disassemble, puncture, or modify the battery. Avoid dropping or subjecting the battery to strong impacts.
- **Disposal:** Dispose of the battery according to local regulations. Do not dispose of batteries in household waste or by incineration.
- **Temperature:** Do not expose the battery to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F).
- **Water:** Keep the battery away from water and other liquids.
- **Children:** Keep the battery out of reach of children and pets.

### 3. PACKAGE CONTENTS

---

The package contains the following item:

- 1 x MIUZZY 29.6V Lithium-Ion Replacement Battery for M244 Cordless Vacuum

*Note: The charger for the battery is typically included with the MIUZZY M244 cordless vacuum cleaner and is not part of this replacement battery package.*

### 4. SETUP AND INSTALLATION

---

Follow these steps to install the replacement battery into your MIUZZY M244 cordless vacuum cleaner.

1. **Ensure Power Off:** Before installation, ensure the vacuum cleaner is turned off and disconnected from any power source.
2. **Locate Battery Compartment:** Identify the battery compartment on your MIUZZY M244 cordless vacuum. This is typically located on the main body of the vacuum.
3. **Remove Old Battery (if applicable):** If replacing an existing battery, press the battery release button (if present) and slide the old battery out of its slot.
4. **Insert New Battery:** Align the new MIUZZY 29.6V replacement battery with the battery slot. Gently slide the battery into place until it clicks securely. Ensure it is fully seated.
5. **Verify Installation:** Once installed, gently tug on the battery to confirm it is locked in position and will not accidentally detach during use.



Figure 2: Illustration of the MIUZZY M244 Cordless Vacuum. The battery typically slides into the main body of the vacuum, as indicated by the design.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Charging the Battery

For optimal performance and longevity, fully charge the battery before first use and after each cleaning session.

1. **Connect Charger:** Plug the original MIUZZY M244 vacuum charger into a power outlet.
2. **Attach to Vacuum:** Connect the charger to the charging port on the vacuum cleaner (with the battery installed). Some models may allow direct battery charging.
3. **Monitor Indicator:** Observe the charging indicator lights on the vacuum or battery. These lights typically show the charging status and when the battery is fully charged.
4. **Full Charge:** Allow the battery to charge completely. A full charge can provide up to 60 minutes of runtime in Min mode.

### 5.2 Using the Vacuum with the New Battery

Once the battery is installed and charged, operate your MIUZZY M244 cordless vacuum as usual. The new battery provides extended runtime for your cleaning tasks.



Figure 3: A person demonstrating the use of the MIUZZY M244 Cordless Vacuum. The battery powers the vacuum for effective cleaning.

## 6. MAINTENANCE AND STORAGE

---

Proper maintenance ensures the longevity and performance of your MIUZZY battery.

- **Regular Charging:** Recharge the battery after each use to maintain its health. Avoid completely draining the battery frequently.
- **Long-Term Storage:** If storing the battery for an extended period, charge it to approximately 50-60% capacity. Recharge it every 3-6 months to prevent deep discharge.
- **Cleaning:** Keep the battery terminals clean and free from dust or debris. Use a dry cloth to wipe the battery if needed.
- **Temperature Control:** Store the battery in a moderate temperature environment, ideally between 10°C and 25°C (50°F and 77°F).

## 7. TROUBLESHOOTING

---

If you encounter issues with your MIUZZY replacement battery, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Battery does not charge.	<ul style="list-style-type: none"><li>• Charger not properly connected.</li><li>• Charger is faulty or incompatible.</li><li>• Battery not fully inserted into vacuum/charger.</li><li>• Battery or vacuum fault.</li></ul>	<ul style="list-style-type: none"><li>• Ensure charger is securely plugged into outlet and vacuum.</li><li>• Verify you are using the original MIUZZY M244 charger.</li><li>• Re-insert the battery firmly until it clicks.</li><li>• Contact MIUZZY customer support if the issue persists.</li></ul>
Short runtime after full charge.	<ul style="list-style-type: none"><li>• Battery not fully charged.</li><li>• Vacuum operating in high power mode.</li><li>• Battery degradation over time.</li></ul>	<ul style="list-style-type: none"><li>• Ensure battery is charged until indicator shows full.</li><li>• Runtime is shorter in higher power modes. Use Min mode for maximum runtime.</li><li>• If battery is old, consider replacement.</li></ul>
Battery gets hot during charging/use.	<ul style="list-style-type: none"><li>• Normal operation (slight warmth).</li><li>• Overcharging or faulty charger.</li><li>• Internal battery issue.</li></ul>	<ul style="list-style-type: none"><li>• Slight warmth is normal.</li><li>• If excessively hot, disconnect immediately and contact support.</li><li>• Ensure proper ventilation during charging.</li></ul>

## 8. SPECIFICATIONS

Feature	Detail
Brand	MIUZZY
Model Number	M244-B
Model Name	M244 Battery
Voltage	29.6 Volts
Battery Cell Composition	Lithium Ion
Reusability	Rechargeable
Number of Batteries	1 (included)
Recommended Uses	Vacuum Cleaner (MIUZZY M244)
Item Weight	1 Pounds (approx. 450 Grams)

## 9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your MIUZZY M244 replacement battery, please contact MIUZZY customer service directly.

Refer to the original MIUZZY M244 vacuum cleaner manual or the MIUZZY official website for contact details.

**Online Support:** [Visit the MIUZZY Store on Amazon](#)



© 2026 MIUZZY. All rights reserved.