

LELO 9486

LELO Enigma Double Sonic Massager (Model 9486) - Instruction Manual

1. PRODUCT OVERVIEW

The LELO Enigma Double Sonic Massager is designed to provide triple stimulation, combining DeepSonic Technology for internal sensation, SenSonic Technology for external clitoral stimulation, and an ergonomic internal stimulator. It features Bluetooth app connectivity for enhanced control and additional modes, is crafted from extra-soft body-safe silicone, and boasts a waterproof, rechargeable design.

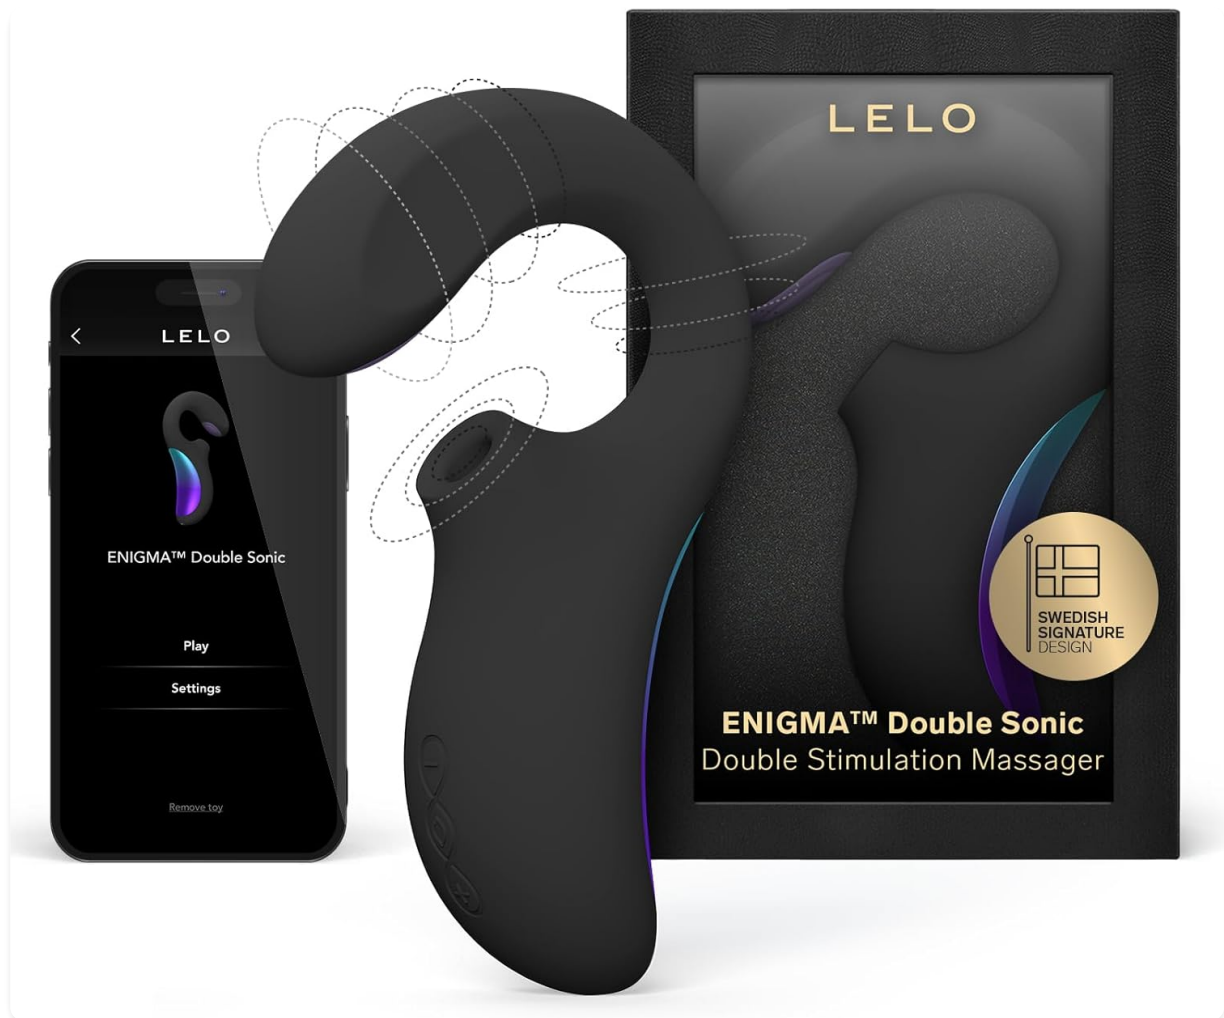 


Image: LELO Enigma Double Sonic Massager, showcasing its design, accompanying smartphone app, and elegant packaging.

2. WHAT'S IN THE BOX

Your LELO Enigma Double Sonic package includes the following items:

- LELO Enigma Double Sonic Massager
- USB Charging Cable
- Satin Storage Pouch
- Warranty Registration Card
- Detailed Instruction Manual
- Water-based Lubricant Sachet (5 ml / 0.17 fl. oz.)

ENIGMA™ Double Sonic
triple stimulation massager



MANUAL
how to use guide



MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.



WARRANTY CARD
verifies product authenticity



CHARGING CORD
USB cable

SATIN POUCH
for storage

Image: All components included with the LELO Enigma Double Sonic, neatly arranged.

3. CHARGING INSTRUCTIONS

Before first use, fully charge your LELO Enigma Double Sonic for approximately 2 hours. A full charge provides up to 2 hours of use.

1. Insert the DC plug of the USB charging cable into the charging port at the base of your device.
2. Insert the USB plug into any standard USB port (e.g., computer, wall adapter).
3. The LED light will pulsate while charging and switch to a steady glow when fully charged.
4. Always use the LELO charging cable to avoid damaging the battery. Do not leave the device charging overnight.
5. Ensure the charging port is completely dry before plugging in the cable, as the port is vacuum-sealed for waterproofing.

Useful information



CHARGING TIME / USE TIME

up to 2 h both



TRAVEL LOCK

to unlock, hold + and – for 3 seconds



USB RECHARGEABLE & WATERPROOF

enjoy unlimited climaxes anytime, anyplace



STAND BY

up to 90 days



Image: Useful information regarding the LELO Enigma Double Sonic, including charging details.

Official LELO Instructional Video - Charging

Your browser does not support the video tag.

Video: A detailed instructional video from LELO demonstrating how to charge the Enigma device.

4. OPERATING INSTRUCTIONS

The LELO Enigma Double Sonic offers triple stimulation with 8 pleasure settings and 2 exclusive app-controlled modes. It combines DeepSonic Technology for deep internal waves and SenSonic Technology for gentle external clitoral stimulation.

Basic Operation

1. **Unlock:** If the travel lock is activated, press and hold the '+' and '-' buttons simultaneously for 3 seconds until the lights turn on.
2. **Turn On:** Press and hold the power button (circle icon) for 3 seconds. The LED light will illuminate.
3. **Adjust Intensity:** Use the '+' and '-' buttons to increase or decrease the intensity of the vibrations.
4. **Switch Modes:** Press the power button briefly to cycle through the 8 built-in pleasure settings.
5. **Turn Off:** Press and hold the power button for 3 seconds.

App Connectivity

Connect your LELO Enigma Double Sonic to the LELO app via Bluetooth to unlock 2 exclusive modes and gain more control over your experience. Download the LELO app from your smartphone's app store.

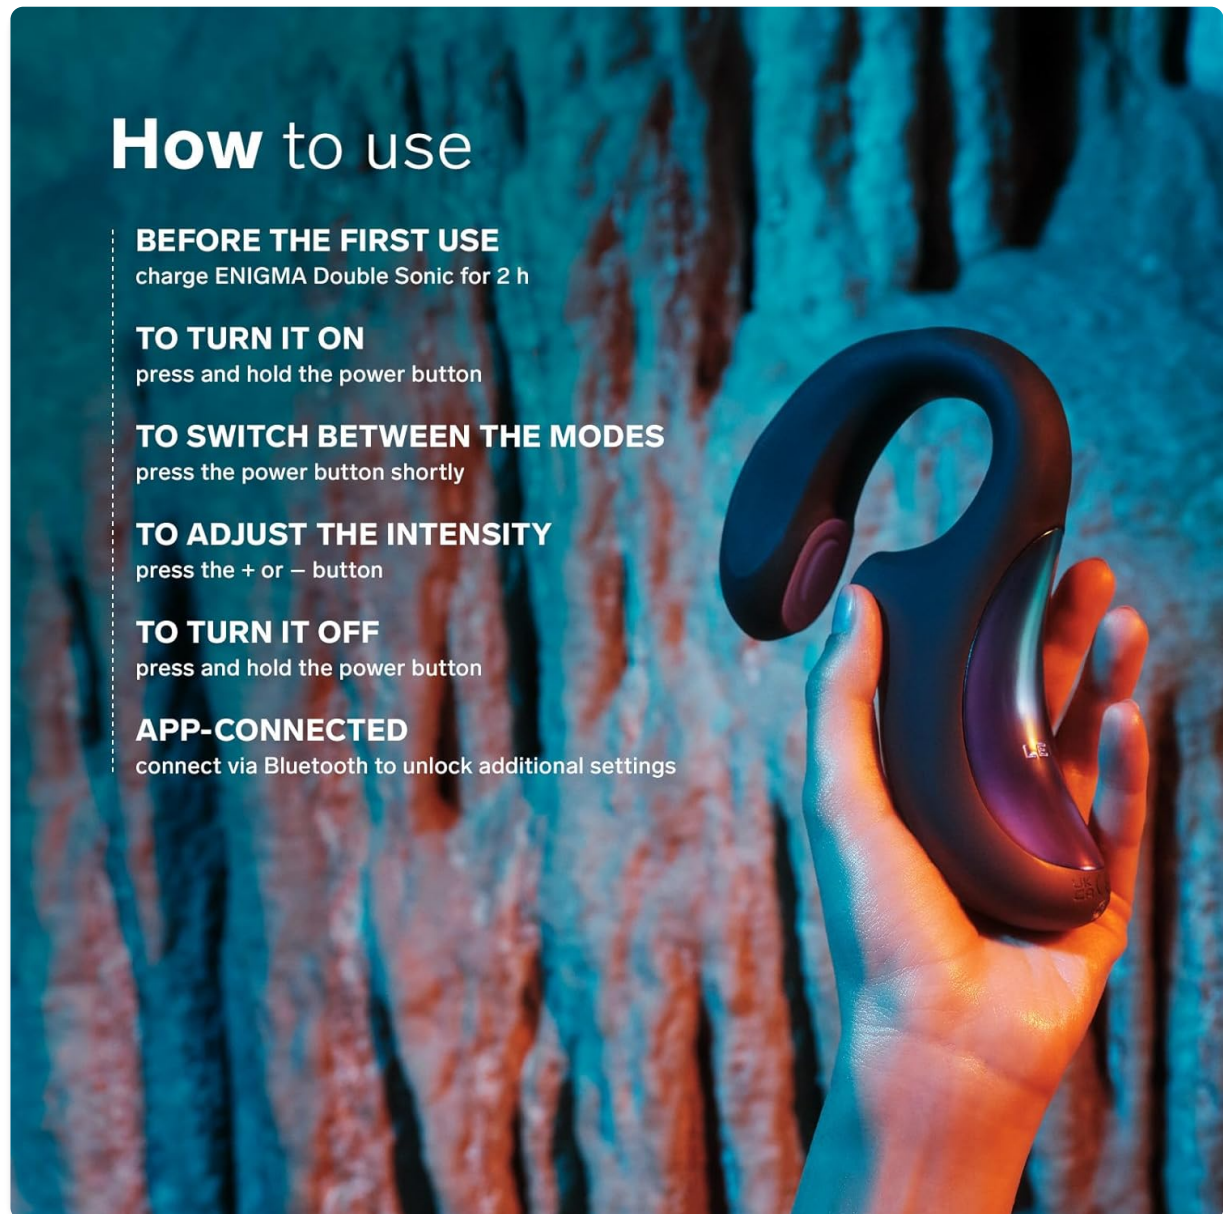 


Image: Step-by-step guide on operating the LELO Enigma Double Sonic.

Usage Guide

- **Step 1: Prep** - Download the LELO app. Apply LELO Personal Moisturizer to both your body and the device for enhanced pleasure.
- **Step 2: Engage** - Adjust the insertable end in place, ensuring it's not too deep. Then, adjust the outer sonic part before turning on the power.
- **Step 3: Indulge** - Press the '+' or power button to turn it on. Start at the lowest speed and gradually increase vibration modes as you wish.



Image: Illustration of the preparation step for using the massager.

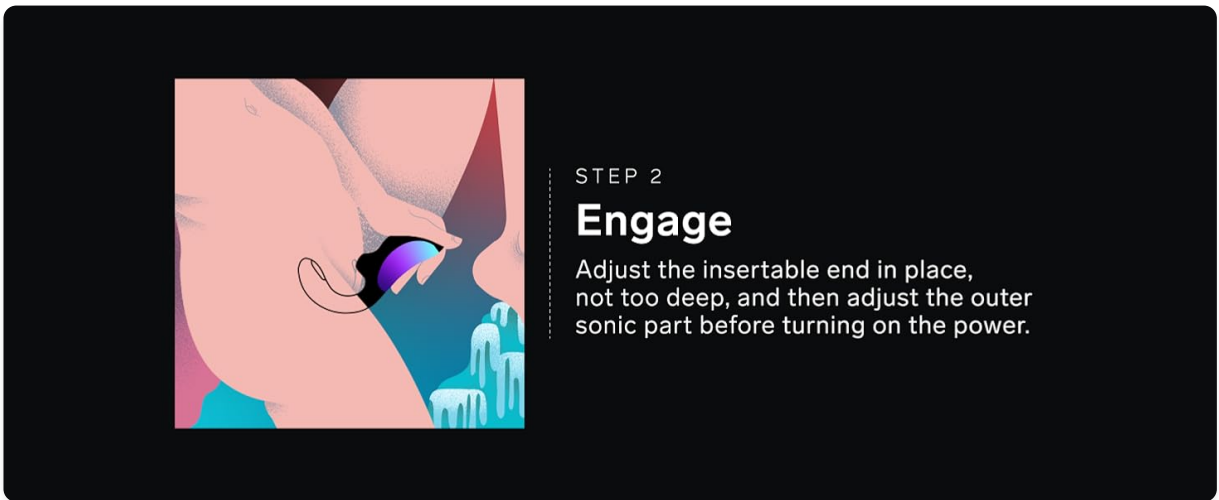 


Image: Illustration of the engagement step for using the massager.

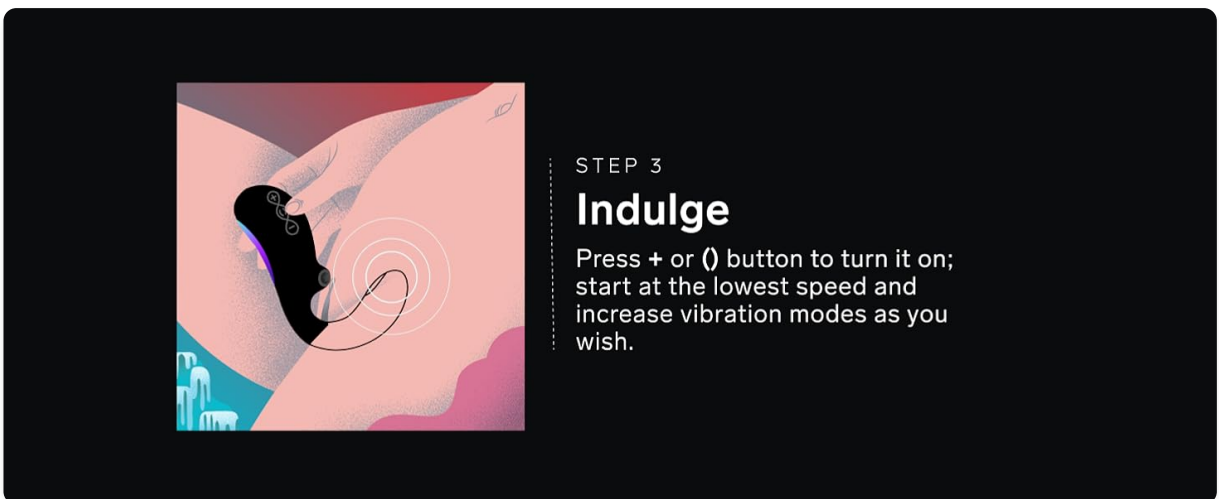 


Image: Illustration of the indulgence step for using the massager.

5. MAINTENANCE & CLEANING

Proper cleaning and storage ensure the longevity and hygiene of your LELO Enigma Double Sonic.

Cleaning

- Always clean your device thoroughly before and after each use.

- The device is 100% waterproof, making it safe for cleaning under running water or in the bath/shower.
- The safest way to clean is by using LELO Premium Cleaning Spray. Spray it on, leave for 5 seconds, then gently wipe away.
- Alternatively, wash the device with lukewarm water and a gentle soap.
- Avoid applying any force when cleaning the mouth of the device, as it can easily damage the opening.
- Do not use cleaners containing silicone, alcohol, petrol, or acetone, as they may damage the silicone material.

Storage

- Store your LELO Enigma Double Sonic in the provided satin pouch.
- Keep it in a dry and safe place, away from direct heat or sunlight.

Official LELO Instructional Video - Cleaning & Storage

Your browser does not support the video tag.

Video: A detailed instructional video from LELO demonstrating how to clean and store the Enigma device.

6. SPECIFICATIONS

Product Dimensions	6.69 x 1.97 x 4.21 inches; 12.31 ounces
Item Model Number	9486
Batteries	1 Lithium Ion batteries required. (included)
Material	Silicone
Color	Black
Waterproof	Yes
App Connected	Yes (Bluetooth)

7. WARRANTY & SUPPORT

LELO products are designed with quality and durability in mind. Your LELO Enigma Double Sonic comes with:

- **1-Year Warranty:** Covers manufacturing defects from the date of purchase.
- **10-Year Quality Guarantee:** Ensures product quality and performance for an extended period.

For warranty claims, troubleshooting, or additional support, please refer to the contact information on your Warranty Registration Card or visit the official LELO website.

8. IMPORTANT SAFETY INFORMATION

Please read and understand all safety information before using your LELO Enigma Double Sonic Massager.

- This device is intended for adult use only.
- Discontinue use immediately if you experience any discomfort or pain.
- Consult a healthcare professional if you have any medical concerns or conditions before using this product.
- Keep out of reach of children.

- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.