



[Manuals.plus](#) /

> [Netzu](#) /

> Netzu Alarm Clocks User Manual

Netzu 6210TB

Netzu Digital Alarm Clock User Manual

Model: 6210TB | Brand: Netzu

1. INTRODUCTION

Thank you for choosing the Netzu Digital Alarm Clock. This versatile 4-in-1 display clock is designed to provide clear time, temperature, date, and day of the week information at a glance. With dual alarms, adjustable brightness, and multiple sound choices, it's perfect for any room in your home. This manual will guide you through the setup, operation, and maintenance of your new alarm clock.



Figure 1: Netzu Digital Alarm Clock with its multi-function display and USB charging capability.

2. WHAT'S IN THE BOX

- Netzu Digital Alarm Clock (Model: 6210TB)
- Power Adapter
- USB-C Charging Cable
- User Manual

Plug-in Clock

USB Charging Port



Figure 2: The alarm clock connected to its power source, demonstrating the plug-in functionality and USB charging port.

3. SETUP

3.1 Power Connection

1. Connect the provided USB-C charging cable to the "Type-C" port on the back of the alarm clock.
2. Plug the USB-A end of the cable into the power adapter.
3. Insert the power adapter into a standard wall outlet. The clock display will illuminate.

3.2 Battery Backup (Optional)

For memory function during power outages, install 2 AAA batteries (not provided) into the battery compartment on the back of the clock. This ensures your settings are saved even if the power is disconnected.

Battery Backup

Only for memorizing the time setting
in case of power outage



Figure 3: Battery compartment for AAA batteries, providing backup for settings.

4. OPERATING INSTRUCTIONS

4.1 Setting Time and Date

Follow these steps to set the correct time and date:

1. Long press the **SET** button on the back of the clock to enter time setting mode.
2. Use the **[+]** or **[-]** buttons (12/24Hr and °C/°F buttons) to adjust the hour.
3. Press the **SET** button again to save the hour and move to minute setting.
4. Use the **[+]** or **[-]** buttons to adjust the minute.
5. Press the **SET** button again to save the minute and move to year setting.
6. Use the **[+]** or **[-]** buttons to adjust the year (2024 to 2025).
7. Press the **SET** button again to save the year and move to month setting.
8. Use the **[+]** or **[-]** buttons to adjust the month.
9. Press the **SET** button again to save the month and move to day setting.
10. Use the **[+]** or **[-]** buttons to adjust the day.
11. Press the **SET** button one last time to save all settings and exit.

Tip: If you set the correct year and date, the day of the week will be accurate automatically.

Your browser does not support the video tag.

Video 1: Official guide on how to set the date and time of the Netzu Alarm Clock.

4.2 12/24 Hour Format

Short press the **12/24Hr** button (which is also the **[+]** button) to switch between 12-hour and 24-hour time formats.

Multiple Display Styles



12h

24h



50°F ↔ 10°C
Switchable °F / °C

Figure 4: Demonstrating the 12-hour and 24-hour display options.

4.3 Temperature Unit (°C/°F)

Short press the °C/°F button (which is also the [-] button) to switch between Celsius and Fahrenheit temperature units.

4.4 Setting Alarms

The clock features two independent alarms. Short press the **Alarm 1** or **Alarm 2** button on the top to enable or disable the respective alarm. Long press the button to set the alarm time.

You can set different wake-up alarms for weekdays and weekends, or use one alarm for waking up on weekdays and another for your daily workout. The versatile combinations allow you to tailor the alarms to meet your diverse needs.

4.5 Snooze Function

When an alarm sounds, press the large **SNOOZE** button on top to activate the 9-minute snooze function. The alarm will sound again after 9 minutes.

4.6 Brightness Adjustment

The **SNOOZE** button also controls the display brightness. Short press the **SNOOZE** button to cycle through 5 levels of brightness (L4, L3, L2, L1, OFF). This allows you to customize the display to suit any lighting condition, from bright daylight to dim night settings.

5 Levels Brightness



Figure 5: Visual representation of the 5 brightness levels.

4.7 Alarm Volume and Tones

The alarm clock offers 10 delightful alarm tones to choose from. Short press the **Music Note** button on the back to cycle through the tones. Additionally, it offers four adjustable volume levels. Short press the **Speaker** button to adjust the volume.

10 Optional Alarm Tones



Chime



7 Soft Music



Ring



Beep

4 Adjustable Volume Levels



90db



100db



105db



110db



Figure 6: Options for alarm tones and volume levels.

4.8 Manual DST Adjustment

Long press the **DST** button on the back to move the alarm time forward by an hour when Daylight Saving Time starts, and backward by an hour when it ends. This convenient feature keeps your clock in sync effortlessly.

Manual DST

Long Press to turn "DST" on/off



DST on

DST



DST off

Figure 7: Demonstrating the manual Daylight Saving Time adjustment.

5. FEATURES OVERVIEW

- **4-in-1 Display:** Shows time, temperature, date, and day of the week with a unique color scheme for clarity.
- **Dual Alarms with Three Modes:** Set two independent alarms with daily, weekday, or weekend modes.

- **5 Brightness Levels:** Adjustable display brightness for optimal visibility day or night.
- **Adjustable Volume and Sound Choices:** 10 alarm tones and 4 volume levels for a personalized wake-up experience.
- **Mains Powered with Battery Memory:** Operates via power supply; 2 AAA batteries (not included) provide backup for settings.
- **Manual DST Adjustment:** Easily adjust for Daylight Saving Time with a dedicated button.
- **Accurate Day of the Week Display:** Automatically shows the correct day of the week based on year and date settings.

6. MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Placement:** Avoid placing the clock in direct sunlight, extreme temperatures, or high humidity.
- **Battery Replacement:** Replace AAA backup batteries annually or when the display shows signs of memory loss during power outages.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank.	No power connected or power outage.	Ensure the power adapter is securely plugged in. Check if backup batteries are installed and functional during an outage.
Alarm not sounding.	Alarm is disabled or volume is too low.	Short press Alarm 1/2 button to enable. Adjust volume using the Speaker button.
Incorrect time/date.	Time/date not set correctly or backup batteries are dead.	Follow "Setting Time and Date" instructions. Replace AAA backup batteries.
Display too bright/dim.	Brightness level needs adjustment.	Short press the SNOOZE button to cycle through brightness levels.

8. SPECIFICATIONS

Feature	Detail
Brand	Netzu
Model Number	6210TB
Color	Black
Display Type	Digital
Special Features	Loud Alarm, Large Display, Temperature Display, Adjustable Brightness, Adjustable Volume
Product Dimensions	6.89"W x 3.1"H
Power Source	Corded Electric
Battery Backup	Requires 2 AAA batteries (not provided) for memory function

Feature	Detail
Material	Plastic
Mounting Type	Tabletop
Item Weight	11.3 ounces
Country of Origin	China

9. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact information provided on the product packaging or visit the official Netzu store on Amazon.

Seller: Jiaxan US

Contact Information: netzuser@outlook.com