

[manuals.plus](#) /

› [Midea](#) /

› [MIDEA MIH720T239K0 3-Zone 60cm 7200W Induction Cooktop User Manual](#)

Midea MIH720T239K0

MIDEA MIH720T239K0 3-Zone 60cm 7200W Induction Cooktop User Manual

Model: MIH720T239K0

1. INTRODUCTION

Thank you for choosing the MIDEA MIH720T239K0 Induction Cooktop. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before installation and operation, and keep them for future reference.

2. SAFETY INSTRUCTIONS

Your safety and the safety of others are paramount. Please observe all safety warnings and precautions outlined in this section.

- **Electrical Safety:** Ensure the cooktop is correctly installed by a qualified technician and connected to an appropriate power supply (220V, 7200W). Do not use adapters or extension cords.
- **General Use:** This appliance is for household use only. Do not use it for purposes other than cooking.
- **Hot Surfaces:** Although induction surfaces do not heat directly, residual heat from cookware can make the surface hot. Exercise caution and avoid touching the cooktop immediately after use.
- **Cookware:** Only use induction-compatible cookware with a flat base. Non-magnetic cookware will not heat.
- **Overheating:** Do not leave cooking unattended. Overheated fats and oils can ignite.
- **Foreign Objects:** Do not place metallic objects such as knives, forks, spoons, or lids on the cooktop surface as they can become hot.
- **Child Safety:** Keep children away from the appliance during operation and when it is cooling down. This cooktop features a child lock function to prevent accidental activation.

Función de bloqueo de seguridad

Mantén a salvo a los más pequeños de la casa



Figure 2.1: Child Safety Lock Function. This feature helps keep children safe by preventing accidental operation of the cooktop.

3. PRODUCT OVERVIEW

The MIDEA MIH720T239K0 is a 60cm integrated induction cooktop featuring three powerful cooking zones and a sleek touch control panel.

3.1 Components

- Ceramic Glass Surface
- Three Induction Cooking Zones
- Touch Control Panel
- Power Cable (for installation)

3.2 Dimensions and Power Zones

PLACA DE INDUCCIÓN INTEGRABLE 7200 W



Figure 3.1: Cooktop Dimensions and Zone Specifications. The cooktop measures 590mm x 520mm with a depth of 60mm. It features three zones: Zone 1 (210mm, 2400W/2600W Boost), Zone 2 (160mm, 1400W/1500W Boost), and Zone 3 (280mm, 3000W/3600W Boost).

4. INSTALLATION

Installation of the MIDEA MIH720T239K0 induction cooktop must be performed by a qualified electrician or service technician in accordance with local regulations and wiring rules.

- Ensure the countertop cutout dimensions match the cooktop's specifications (refer to Figure 3.1).
- Provide adequate ventilation space beneath the cooktop.
- Connect the appliance to a suitable electrical supply, ensuring proper grounding.
- After installation, check that the cooktop is level and securely fitted.

5. OPERATING INSTRUCTIONS

The MIDEA MIH720T239K0 induction cooktop offers intuitive touch controls for precise cooking.

5.1 Touch Control Panel

The control panel is located at the front of the cooktop. It includes power on/off, zone selection, power level adjustment, booster function, timer, and child lock controls.

5.2 Turning On/Off

- To turn on: Touch the Power button. The indicators will light up.
- To turn off: Touch and hold the Power button for a few seconds.

5.3 Selecting a Cooking Zone and Adjusting Power

- Place induction-compatible cookware on the desired cooking zone.
- Touch the corresponding zone selection button.
- Use the '+' and '-' buttons to adjust the power level from 1 to 9.

5.4 Booster Function

The Booster function provides an extra surge of power to a selected zone for rapid heating, reducing cooking time significantly.

- Select the desired cooking zone.
- Touch the Booster button (often indicated by a 'B' or similar icon). The zone will operate at maximum power for a set period or until manually deactivated.

AHORRA MUCHO TIEMPO

Cocina hasta 3 comidas diferentes al instante



FUNCTION BOOST

Aporta una energía extra para un calentamiento 5 veces más rápido

Figure 5.1: Multiple Cooking Zones and Boost Function. The cooktop allows for simultaneous cooking on three zones, with the boost function providing rapid heating.

5.5 Timer Function

The timer can be set to automatically turn off a cooking zone after a specified duration.

- Select the cooking zone you wish to set the timer for.
- Touch the Timer button.
- Use the '+' and '-' buttons to set the desired cooking time.
- The zone will automatically switch off when the timer expires.

5.6 Pan Detection

The cooktop automatically detects if suitable cookware is placed on the zone. If no pan is detected or an incompatible pan is used, the zone will not activate or will switch off after a short period.

5.7 Child Lock

To activate the child lock, touch and hold the Child Lock button (often indicated by a lock icon) for a few seconds. This will disable the control panel. Repeat the process to deactivate it.



Figure 5.2: MIDEA Induction Cooktop in Use. Demonstrates the ability to cook multiple dishes concurrently on the three zones.

6. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your induction cooktop.

- **Daily Cleaning:** Wipe the ceramic glass surface with a soft, damp cloth and mild detergent after each use, once the cooktop has cooled down.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a specialized ceramic hob scraper or cleaner. Follow the product instructions carefully.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Spills:** Clean up spills immediately to prevent them from drying and becoming harder to remove.



Figure 6.1: Easy Cleaning of the Cooktop. The smooth ceramic glass surface is designed for easy cleaning with a soft cloth, resisting scratches.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on	No power supply; Child lock activated	Check power connection; Deactivate child lock.
Cooking zone not heating	Incompatible cookware; No cookware detected; Zone not selected	Use induction-compatible pan; Place pan centrally; Select the correct zone.
Display shows 'E' error code	Internal fault; Overheating	Turn off and restart; Allow cooktop to cool. If error persists, contact service.

Problem	Possible Cause	Solution
Unusual noise during operation	Normal operation sound of induction technology or fan	This is usually normal. If excessively loud or unusual, contact service.

8. SPECIFICATIONS

Key technical specifications for the MIDEA MIH720T239K0 Induction Cooktop:

- **Brand:** Midea
- **Model Number:** MIH720T239K0
- **Color:** Black
- **Product Dimensions:** 59 x 52 x 6.2 cm (Length x Width x Height)
- **Weight:** 8.3 kg
- **Power/Wattage:** 7200 Watts
- **Voltage:** 220 Volts
- **Material:** Ceramic Glass
- **Heating Elements:** 3 Induction Zones
- **Special Features:** Booster Function, Touch Control Panel, Pan Detection, Timer, Child Lock

9. WARRANTY AND SUPPORT

Midea is committed to providing reliable products and excellent customer service.


9.1 Warranty

This product comes with a **2-year warranty** covering manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

9.2 Technical Support

Midea offers uninterrupted technical service with 170 technical support points across the peninsula, Canary Islands, and Portugal. For assistance, spare parts, or service inquiries, please contact your local Midea service center or visit the official Midea website for contact information.

Related Documents - MIH720T239K0

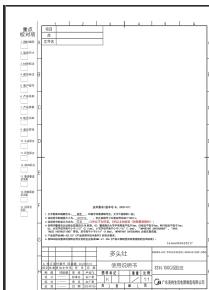

[Руководство по эксплуатации индукционной варочной панели Midea MIH43103F](#)

Подробное руководство пользователя для индукционной варочной панели Midea MIH43103F, охватывающее установку, безопасную эксплуатацию, обслуживание и устранение неисправностей.



[Midea MC-IF7251J1-A Induction Hob: Instruction and Installation Manual](#)

Comprehensive instruction and installation manual for the Midea MC-IF7251J1-A induction hob, covering safety warnings, product features, operation, technical specifications, installation guidelines, and troubleshooting.



[Midea MC-ID351 Induction Hob: Instruction and Installation Manual](#)

Comprehensive guide for the Midea MC-ID351 Induction Hob, covering installation, operation, safety, and maintenance. Learn how to use touch controls, cooking guidelines, heat settings, and troubleshooting.




[Midea MC-IF7455J1CC-A Induction Hob User Manual](#)

Comprehensive user manual for the Midea MC-IF7455J1CC-A induction hob, covering safety instructions, specifications, operation, installation, and troubleshooting for optimal and safe use.



[Midea TrendLine Keramikkochfeld MCH731F218KO – Eigenschaften und Spezifikationen](#)

Entdecken Sie das Midea TrendLine Keramikkochfeld MCH731F218KO. Erfahren Sie mehr über seine smarten Technologien, Funktionen wie Booster und FlexZone, Sicherheitsmerkmale und detaillierte technische Spezifikationen für Ihre Küche.

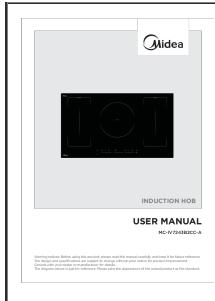

[Midea MC-IV7243B2CC-A Induction Hob User Manual](#)

Get the most out of your Midea MC-IV7243B2CC-A induction hob with this comprehensive user manual. It provides essential safety guidelines, detailed operation instructions, installation procedures, and maintenance tips for efficient and safe cooking.