

[Manuals.plus](#) /

› [STF](#) /

› STF Hype Travel Wireless Speaker Instruction Manual ST-S77224

STF ST-S77224

STF Hype Travel Wireless Speaker Instruction Manual

Model: ST-S77224

INTRODUCTION

Welcome to your new STF Hype Travel Wireless Speaker. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully before use and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x STF Hype Travel Wireless Speaker
- 1 x Type-C Charging Cable
- 1 x User Manual



Image showing the retail packaging of the STF Hype Travel Wireless Speaker, indicating included accessories.

PRODUCT OVERVIEW

Familiarize yourself with the speaker's controls and ports for optimal use.



Top view of the STF Hype Travel speaker, highlighting the control panel with power, light, and volume buttons.



Front view of the STF Hype Travel speaker, showcasing the RGB LED light panel.



Angled view of the STF Hype Travel speaker, showing the integrated handle and side control buttons.



Rear view of the STF Hype Travel speaker, showing the 'OPEN' flap covering the input ports.

Control Panel Functions

- **Power Button:** Press and hold for 3 seconds to power the speaker on or off.
- **Light Button:** Press to cycle through RGB light modes or turn the lights off.
- **Volume Up (+):** Short press to increase volume. Long press for next track (in music playback modes).
- **Volume Down (-):** Short press to decrease volume. Long press for previous track (in music playback modes).
- **Play/Pause/Mode (M):** Short press to play/pause music or answer/end calls. Long press to switch between input modes (Bluetooth, FM Radio, USB, Micro SD, AUX).

Input Ports

- **Type-C Charging Port:** For connecting the charging cable.
- **3.5mm AUX Input:** For wired audio connection from external devices.
- **USB Port:** For playing audio files from a USB flash drive.
- **Micro SD Card Slot:** For playing audio files from a Micro SD memory card.

SETUP

Charging the Speaker

Before initial use, fully charge the speaker's battery.

1. Connect the provided Type-C charging cable to the speaker's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate (e.g., red) to show charging status. It will turn off or change color when fully charged.
4. Charging time is approximately 3-4 hours for a full charge.

Powering On/Off

To turn the speaker on or off, press and hold the Power button for approximately 3 seconds.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED. If not, press the 'M' button to switch to Bluetooth mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "STF Hype Travel" from the list of found devices.
4. Once successfully paired, the LED indicator will stop flashing, and you will hear a confirmation tone.
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

True Wireless Stereo (TWS) Function

The TWS function allows you to connect two STF Hype Travel speakers for a synchronized stereo sound experience.

1. Ensure both STF Hype Travel speakers are powered off.
2. Power on both speakers. They will automatically enter Bluetooth pairing mode.
3. On **one** of the speakers, double-press the 'M' button. This speaker will now search for the other TWS-compatible speaker.
4. Once connected, you will hear a confirmation tone. The LED on the primary speaker will flash, and the secondary

speaker's LED will remain solid.

5. Now, connect your mobile device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.



Image illustrating the True Wireless Stereo (TWS) function and RGB LED lights of the STF Hype Travel speaker.

USB/Micro SD Playback

1. Insert a USB flash drive or a Micro SD card (containing MP3 audio files) into the respective port on the speaker.
2. The speaker will automatically switch to USB or Micro SD mode and begin playing music. If it does not, press the 'M' button to cycle through modes until the correct mode is selected.
3. Use the Play/Pause, Volume Up (+), and Volume Down (-) buttons to control playback (play, pause, next track, previous track).

AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the speaker's AUX input port.
2. Connect the other end to the audio output of your external device.
3. The speaker will automatically switch to AUX mode. If not, press the 'M' button to cycle modes.
4. Control the volume via the speaker's controls or your connected device.

FM Radio

1. Press the 'M' button repeatedly until the speaker enters FM Radio mode.
2. Press and hold the Play/Pause button for 2 seconds to automatically scan and save available FM stations.
3. Use the Volume Up (+) and Volume Down (-) buttons to navigate between the saved stations.

RGB LED Lights

Press the Light button to cycle through different RGB lighting modes. Press it again to turn the lights off.



Image showing a hand interacting with the control buttons on the STF Hype Travel speaker.

Handling Calls

When connected via Bluetooth to a smartphone, the speaker can be used for hands-free calls:

- **Answer Call:** Press the Play/Pause button once when an incoming call rings.
- **End Call:** Press the Play/Pause button once during an active call.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds when an incoming call rings.

MAINTENANCE

Care and Cleaning

- Keep the speaker away from water, moisture, and extreme temperatures to prevent damage.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.
- Ensure all ports are dry before connecting cables.

Storage

- Store the speaker in a cool, dry place when not in use for extended periods.
- To prolong battery lifespan, fully charge the battery at least once every three months, even if not in regular use.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Solution
Speaker does not turn on.	Ensure the battery is charged. Connect to a power source using the Type-C cable and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in Bluetooth pairing mode (flashing blue LED). Disable and re-enable Bluetooth on your device. Move closer to the speaker. Clear previous Bluetooth connections on your device.

Problem	Solution
No sound.	Check volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, USB, Micro SD, FM) is selected.
Poor FM radio reception.	Reposition the speaker to improve signal reception. Ensure you have performed an auto-scan for stations.
TWS pairing fails.	Ensure both speakers are STF Hype Travel models and are not connected to any other Bluetooth devices. Try restarting both speakers and repeat the TWS pairing steps.

SPECIFICATIONS

- **Model:** ST-S77224
- **Brand:** STF
- **Speaker Type:** Monitor
- **Connectivity:** Bluetooth, USB, Micro SD, 3.5mm AUX
- **Special Features:** RGB Light, True Wireless Stereo (TWS), Hands-free calling, FM Radio
- **Battery Life:** Up to 5 hours
- **Speaker Size:** 3 inches (x2)
- **Dimensions:** 29 cm (Depth) x 20 cm (Width) x 15 cm (Height)
- **Power Source:** Rechargeable Battery
- **Control Method:** Tactile buttons
- **Amplification Type:** Active



Image highlighting key features of the STF Hype Travel speaker, including RGB lighting, hands-free calling, and True Wireless Stereo (TWS) functionality.

WARRANTY INFORMATION

This product comes with a limited warranty. Please refer to the warranty card included in your package for specific details regarding coverage, terms, and conditions.

For warranty claims or service, please retain your proof of purchase and contact STF customer support.

For further assistance, technical support, or any inquiries not covered in this manual, please visit the official STF website or contact their customer service department.

STF Official Store: <https://www.amazon.com.mx/stores/STF/page/5AF8707B-14C9-4C12-9D93-3C67C0678069>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question