

Manuals.plus /
› WLIVE /
› WLIVE TV Stand User Manual

WLIVE ASNG109DHS2

WLIVE TV Stand User Manual

Model: ASNG109DHS2 | Brand: WLIVE

1. INTRODUCTION

Thank you for choosing the WLIVE TV Stand with LED Lights & Charging Station. This entertainment center is designed to enhance your living space with its versatile features, including ample storage, integrated LED lighting, and a convenient power outlet. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your new TV stand.




Figure 1: WLIVE TV Stand with LED lights and charging station, rustic brown finish, displaying a TV with a dog image. This image shows the WLIVE TV Stand in a rustic brown finish, featuring its integrated LED lighting and a convenient charging station. A television is placed on top, and the open shelves below are illuminated by the LED lights, showcasing decorative items. The six fabric drawers are visible at the bottom.

2. IMPORTANT SAFETY INSTRUCTIONS


Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 160 lbs for the entire unit. Distribute weight evenly on shelves and drawers.
- **Anti-Tilt Device:** Always install the included anti-tilt device to securely fix the cabinet to the wall. This prevents tipping and ensures the safety of children and pets.
- **Electrical Safety:** The integrated power outlet is UL/ETL certified. Do not overload the outlets. Ensure all cables are properly routed to avoid tripping hazards or damage. Disconnect from power before cleaning or moving the unit.
- **Assembly:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are tightened securely before use.
- **Placement:** Place the TV stand on a level and stable surface. Avoid direct sunlight or extreme temperatures.

3-Tier Design

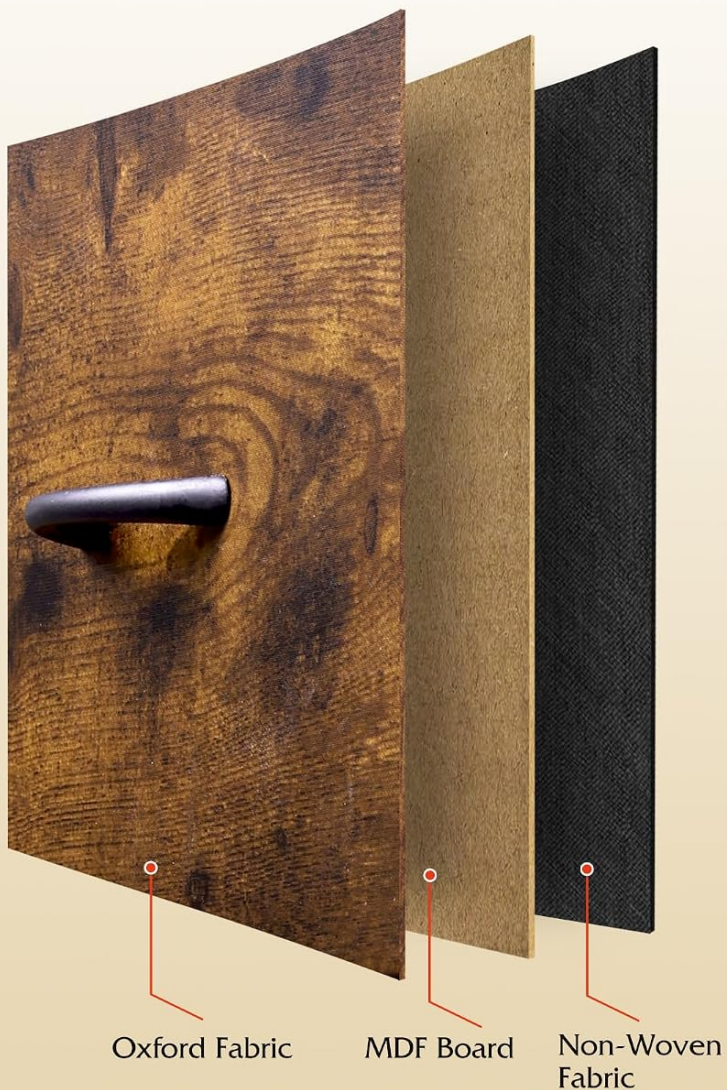

Sturdy Steel Frame

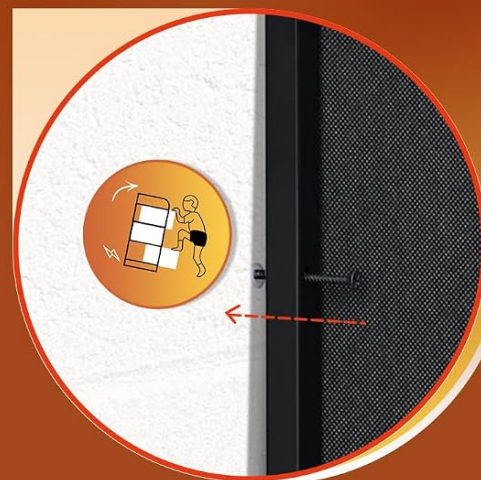

Anti-Tilt Device

Figure 2: Diagram showing the 3-tier design, sturdy steel frame, and anti-tilt device of the WLIVE TV Stand. This image explains the structural integrity of the TV stand, detailing its robust 3-tier design, sturdy steel frame, and the composition of the fabric drawers (Oxford Fabric, MDF Board, Non-Woven Fabric). It also illustrates the anti-tilt device for enhanced safety.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Metal Steel Frame Components
- Wooden Top Panel (P2 grade artificial wood)
- Wooden Shelf Panels
- Fabric Drawers (6 units, detachable, 3 layers: Oxford Fabric, MDF Board, Non-Woven Fabric)
- Integrated Power Outlet (2 AC sockets + 2 USB ports, 1.5m cable)
- LED Light Strip with Remote Control
- Adjustable Feet (6 units)
- Anti-Tilt Device
- Assembly Hardware (screws, bolts, etc.)
- Assembly Tools (e.g., Allen wrench)
- Detailed Assembly Guide

4. ASSEMBLY INSTRUCTIONS (SETUP)

Follow the detailed assembly guide included in your package. All screw parts are clearly marked, and reserved holes are pre-drilled for quick assembly. It is recommended to have two people for assembly.

1. **Unpack and Identify:** Carefully unpack all components and lay them out on a soft, clean surface. Identify each part using the provided assembly guide.
2. **Assemble the Frame:** Begin by assembling the metal steel frame according to the step-by-step diagrams in the guide. Ensure all cross support rods are correctly positioned for stability.
3. **Attach Shelves:** Securely attach the wooden top panel and the internal wooden shelves to the assembled frame using the designated hardware.
4. **Install Power Outlet:** Mount the integrated power outlet unit to its designated location on the frame, typically on the side or back of the top shelf.
5. **Apply LED Lights:** Adhere the LED light strip to the underside of the top shelf or along the designated channels, ensuring proper connection to the power source.
6. **Insert Drawers:** Once the frame is complete, unfold and insert the fabric drawers into their respective compartments.
7. **Attach Adjustable Feet:** Screw the 6 all-directional adjustable feet into the bottom of the frame. Adjust them to ensure the stand is level on your floor.
8. **Install Anti-Tilt Device:** For safety, attach the anti-tilt device to the back of the TV stand and secure it to a wall stud using appropriate wall anchors.

PRODUCT SIZE

The diagram illustrates the dimensions of the 3-tier wooden shelf unit. A silhouette of a person is shown for scale, with a height of 65". The main unit has a total height of 31.57" and a width of 39.65". The top shelf is 11.73" high. The middle shelf is 11.9" high. The bottom section consists of two rows of drawers, each 11.9" high. The top drawer is 11 lbs, the middle drawer is 44 lbs, and the bottom drawer is 44 lbs. The top shelf is 66 lbs. The unit is made of dark wood with black metal framing and has a power cord attached to the side.

Component	Weight (lbs)	Height (in)	Width (in)
Top Shelf	66	11.73	39.65
Middle Shelf	44	11.9	39.65
Bottom Drawer (Top Row)	44	11.9	39.65
Bottom Drawer (Bottom Row)	44	11.9	39.65

- **Music Rhythm Mode:** Activate the music rhythm mode to synchronize the lights with audio, creating a dynamic visual experience for movies, games, or parties.
- **Timer Function:** Set a timer for the lights to automatically turn off after a specified duration.



Figure 4: Image illustrating the LED lighting features of the WLIVE TV Stand, including color options, music rhythm mode, and timer. This visual highlights the versatile LED lighting system of the TV stand, showcasing its ability to display over 6000 colors. It also indicates features like microphone rhythm synchronization, music rhythm mode, and a timer function, all controllable via remote or app.

5.2. Charging Station

The built-in charging station provides convenient power access for your electronic devices.

- **AC Outlets:** Plug in your TV, game console, router, or other AC-powered devices into the two 125V/12A AC sockets.
- **USB Ports:** Use the two 5V/2.4A USB ports to charge smartphones, tablets, or other USB-powered devices.
- **Cable Management:** Route cables neatly to maintain a clean and organized appearance.

CHARGING STATION

PROVIDE POWER FOR YOUR TV
WIFI ROUTER AND PHONE.



2 AC Outlets
125V/12A



2 USB Ports
5V/2.4A



Power Cord
5-Foot

Figure 5: Close-up of the integrated charging station on the WLIVE TV Stand with two AC outlets and two USB ports. A detailed view of the built-in charging station, which includes two standard AC power outlets and two USB charging ports. This feature allows for convenient power access for various electronic devices directly from the TV stand.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand.

- **Cleaning the Wood Surfaces:** Wipe the P2 grade artificial wood desktop and shelves with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Cleaning Fabric Drawers:** The non-woven fabric drawers can be spot cleaned with a mild detergent and water. Allow them to air dry completely before reinserting. Do not machine wash.
- **Frame Care:** The metal steel frame can be wiped clean with a damp cloth.
- **Check Stability:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.

- **Adjustable Feet:** Ensure the adjustable feet are properly set to keep the unit level and prevent wobbling.

7. TROUBLESHOOTING

If you encounter any issues with your WLIVE TV Stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights not turning on.	Power connection issue, remote battery dead, LED strip damaged.	Ensure the power cord for the LED lights is securely plugged in. Check remote control battery. If still not working, contact customer support.
Charging station not providing power.	Main power cord unplugged, device not properly connected, circuit breaker tripped.	Verify the main power cord of the TV stand is fully plugged into a working wall outlet. Ensure devices are correctly inserted into the AC outlets/USB ports. Check your home's circuit breaker.
TV stand is wobbly or unstable.	Uneven floor, loose fasteners, anti-tilt device not installed.	Adjust the 6 adjustable feet to level the stand on uneven floors. Retighten all assembly screws. Ensure the anti-tilt device is properly installed and secured to the wall.
Drawers are difficult to open/close.	Drawer overloaded, fabric misaligned, frame not square.	Reduce the weight in the drawer. Ensure the fabric drawer is properly seated and not snagged. Check that the frame is assembled squarely.

8. SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Model Name	ASNG109DHS2
Product Dimensions	11.7"D x 39.6"W x 31.6"H
Color	Rustic Brown
Mounting Type	Floor Mount
Room Type	Hallway, Living Room, Office
Special Features	Multifunction, Removable Drawers, Sturdy, Adjustable Feet, Easy assembly, LED Lights, Charging Station
Assembly Required	Yes

Feature	Detail
Item Weight	29.5 Pounds
Drawer Quantity	6
Charging Station	2 AC Outlets (125V/12A), 2 USB Ports (5V/2.4A), 5-Foot Power Cord
LED Lights	60000+ colors, Music Rhythm, Timer
Material	P2 Grade Artificial Wood (desktop), Metal Steel Frame, Oxford Fabric, MDF Board, Non-Woven Fabric (drawers)

9. WARRANTY AND SUPPORT

WLIVE is committed to providing high-quality products and excellent customer service. While specific warranty details are provided with your purchase documentation, our professional after-sales team is available to assist you with any questions or concerns regarding your TV stand.

For assistance, please refer to the contact information provided in your product packaging or visit the official WLIVE store on Amazon:

[Visit the WLIVE Store on Amazon](#)

Note: No official product videos with 'Seller' creator type were found in the provided data to embed in this manual.

© 2024 WLIVE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6TXL15L>

More documents and user manuals: <https://manuals.plus/>