



Manuals.plus /

- › ERICAT /
- › ERICAT Carpet Cleaner Machine User Manual

ERICAT B0D6TYY2N8

ERICAT Carpet Cleaner Machine User Manual

Model: B0D6TYY2N8

1. INTRODUCTION

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your ERICAT Carpet Cleaner Machine. Please read this manual thoroughly before first use and retain it for future reference. Proper use and care will ensure optimal performance and extend the lifespan of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, or injury. Read all instructions before using this appliance.

- Always connect to a properly grounded outlet. See grounding instructions.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they

may be present.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without tanks in place.
- Do not use on wet surfaces unless specifically designed for wet pickup.

3. PRODUCT OVERVIEW

3.1 Components

The ERICAT Carpet Cleaner Machine includes the following components:

- Carpet Cleaner Machine Unit
- Integrated Hose with Cleaning Nozzle
- Clean Water Tank (1.08L capacity)
- Dirty Water Tank (0.8L capacity)
- Removable Brush (integrated into nozzle)
- Power Cord

3.2 Specifications

Specification	Value
Model	B0D6TYY2N8
Rated Voltage	110-240V
Rated Power	450W
Vacuum Degree	$\geq 11000\text{Pa}$
Noise Level	$\leq 78\text{dBA}$
Hose Length	1.2m
Clean Water Tank Capacity	1.08L
Dirty Water Tank Capacity	0.8L
Manufacturer	ERICAT

3.3 Product Diagram



Figure 1: Overview of the ERICAT Carpet Cleaner Machine. This image displays the compact design of the cleaner, featuring its handle, dual water tanks (clean and dirty), and the attached hose with a cleaning nozzle. A small dog is positioned next to the machine, illustrating its suitability for pet-related cleaning tasks.



Slim Handle

Portable and Light

Storage

Small in Size

Figure 2: Portability and Storage of the Carpet Cleaner. The top panel shows a person carrying the machine by its slim handle, highlighting its portable and light design. The bottom panel illustrates the machine stored on a shelf, demonstrating its small size and space-efficient storage capabilities.

4. SETUP AND PREPARATION

- 1. Unpack the Machine:** Carefully remove all components from the packaging. Ensure all parts listed in Section 3.1 are present.
- 2. Position the Machine:** Place the carpet cleaner on a flat, stable surface near a grounded electrical outlet.
- 3. Fill the Clean Water Tank:**
 - Locate the clean water tank (typically clear and marked for clean water).
 - Remove the tank from the main unit.
 - Open the fill cap and fill with clean water. For enhanced cleaning, you may add a small amount of carpet cleaning solution suitable for spot cleaners, following the solution manufacturer's instructions. Do not overfill.
 - Securely close the fill cap and reinsert the tank into the machine until it clicks into place.
- 4. Prepare the Area:** Before cleaning, vacuum the area to remove loose dirt and debris. Test any

cleaning solution on an inconspicuous area of the carpet or upholstery for colorfastness.

5. OPERATING INSTRUCTIONS

The ERICAT Carpet Cleaner Machine is designed for effective spot cleaning of carpets, rugs, upholstery, and car interiors. It utilizes a three-step process: spray, brush, and suction.



Figure 3: The three-step cleaning process: Spray, Brush, and Suction. This diagram illustrates how the machine sprays clean water under pressure, a brush thoroughly removes dirt, and then waste water is sucked up, ensuring deep cleaning.

1. **Plug In the Machine:** Connect the power cord to a grounded electrical outlet.
2. **Power On:** Locate the power button (usually on the main unit) and press it to turn on the machine.
3. **Apply Solution (Spray):**
 - Hold the cleaning nozzle directly over the stained area.
 - Press the spray trigger on the nozzle handle to release clean water and cleaning solution onto the stain.
 - Allow the solution to penetrate the stain for a few seconds (refer to cleaning solution instructions for dwell time).
4. **Scrub the Stain (Brush):**

- Using the integrated brush on the nozzle, gently scrub the stained area. Move the nozzle back and forth over the stain to agitate the dirt and loosen it from the fibers.

5. **Extract Dirty Water (Suction):**

- Release the spray trigger.
- Press the nozzle firmly against the surface and slowly pull it towards you, allowing the powerful 11000Pa suction to extract the dirty water and loosened debris into the dirty water tank.
- Repeat the suction passes until no more dirty water is being extracted and the area appears clean and as dry as possible.

6. **Repeat if Necessary:** For stubborn stains, you may need to repeat the spray, scrub, and suction steps.

7. **Power Off:** Once cleaning is complete, turn off the machine and unplug it from the outlet.

5.1 Applications

This machine is suitable for various fabric cleaning tasks:

- **Carpets and Rugs:** Ideal for spot cleaning spills and high-traffic areas.
- **Upholstery:** Effective on sofas, chairs, and other fabric furniture.
- **Stairs:** The compact design and hose length make it convenient for cleaning carpeted stairs.
- **Car Interiors:** Excellent for cleaning car seats and floor mats.
- **Mattresses:** Can be used to refresh and clean mattress surfaces.



Figure 4: Quick cleaning of stains. This image demonstrates the machine's effectiveness in quickly addressing spills, such as a coffee cup overturned on a carpet, using the handheld cleaning nozzle.

Don't Worry About Pet Mess

Suitable for mattresses, fabric sofas,
fabric chairs, carpets, etc.



Figure 5: Addressing pet messes. This image shows the carpet cleaner being used to clean a carpet, with a dog sitting nearby, emphasizing its suitability for cleaning up pet-related stains and odors on various surfaces like mattresses, fabric sofas, and carpets.

Strong Suction Power

Deep cleaning, Keep your car clean



Figure 6: Deep cleaning for car interiors. This image illustrates the machine's strong suction power being used to clean a car's interior, showing before-and-after views of car seats, demonstrating its effectiveness in keeping vehicle upholstery clean.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your carpet cleaner.

1. Empty and Clean the Dirty Water Tank:

- After each use, or when the dirty water tank reaches its maximum fill line, remove it from the machine.
- Carefully empty the dirty water into a sink or drain.
- Rinse the tank thoroughly with clean water to remove any residue.
- Allow the tank to air dry before reattaching it to the machine.

2. Rinse the Clean Water Tank:

- If any cleaning solution remains, empty and rinse the clean water tank with fresh water.
- Allow it to air dry.

3. Clean the Nozzle and Brush:

- Inspect the cleaning nozzle and integrated brush for any trapped debris, hair, or fibers.
 - Remove any obstructions manually or by rinsing under running water.
 - Ensure the spray nozzle is clear and not clogged.
4. **Wipe Down the Machine:** Use a soft, damp cloth to wipe the exterior of the machine. Do not use harsh chemicals or abrasive cleaners.
 5. **Cord and Hose Storage:** Wrap the power cord neatly around the designated storage hooks. Ensure the hose is coiled without kinks.
 6. **Storage:** Store the machine in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Before contacting customer support, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue; machine fault.	Ensure plug is securely in a working outlet. Check circuit breaker. If problem persists, contact support.
No spray or weak spray.	Clean water tank empty; tank not seated correctly; spray nozzle clogged.	Refill clean water tank. Re-seat tank firmly. Clean spray nozzle.
Weak suction.	Dirty water tank full; dirty water tank not seated correctly; suction nozzle blocked; hose leak.	Empty dirty water tank. Re-seat tank firmly. Clear any blockages from suction nozzle. Check hose for damage.
Water leaking from machine.	Tanks not seated correctly; tank caps not sealed; damaged tank/hose.	Ensure both clean and dirty water tanks are securely seated and caps are tightly closed. Inspect tanks and hose for cracks or damage.
Machine making unusual noise.	Obstruction in motor/fan; loose part.	Turn off and unplug. Check for visible obstructions. If noise persists, contact support.

8. WARRANTY AND CUSTOMER SUPPORT

Specific warranty details for the ERICAT Carpet Cleaner Machine are not provided in this manual. Please refer to the product packaging or the retailer's website for warranty information. For technical assistance, replacement parts, or any other inquiries, please contact ERICAT customer support through the retailer where the product was purchased.

Manufacturer: ERICAT

9. ENVIRONMENTAL DISPOSAL

This appliance should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. Proper disposal helps prevent potential negative consequences for the environment and human health.

