

[Manuals.plus](#) /

› [WLIVE](#) /

› WLIVE Black TV Stand User Manual

WLIVE ASNG114BL

WLIVE Black TV Stand User Manual

Model: ASNG114BL | Brand: WLIVE

INTRODUCTION

Thank you for choosing the WLIVE Black TV Stand. This entertainment center is designed to provide ample storage and modern features, including LED lighting and a built-in charging station. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your product.



Figure 1: WLIVE Black TV Stand with LED lights and charging station.

SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly.
- Always use the provided anti-tilt device to secure the TV stand to the wall, especially in homes with children or pets, to prevent tipping.
- Do not exceed the maximum weight capacity of 150 lbs (68 kg) for the top surface.
- Ensure the power outlet for the charging station is easily accessible and meets electrical safety standards (UL/ETL

certified).

- Keep liquids away from the charging station and electrical components.



Figure 2: Anti-tilt device and adjustable feet for enhanced stability.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are included in your package. If any parts are missing or damaged, please contact WLIVE customer service.


Part	Description	Quantity
A	Top Wood Panel	1
B	Metal Frame (Left)	1
C	Metal Frame (Right)	1

Part	Description	Quantity
D	Fabric Drawers (Large)	4
E	Fabric Drawers (Small)	4
F	LED Light Strip	1
G	Charging Station	1
H	Hardware Pack (Screws, Allen Wrench, Anti-tilt Kit)	1

ASSEMBLY INSTRUCTIONS

- Follow these steps carefully to assemble your WLIVE TV Stand. It is recommended to have two people for assembly.
- Step 1: Assemble the Metal Frame.** Connect the left and right metal frames using the provided cross support rods and screws from the hardware pack. Ensure all connections are secure but do not fully tighten yet.
 - Step 2: Attach the Top Wood Panel.** Carefully place the top wood panel onto the assembled metal frame. Align the pre-drilled holes and secure it with screws. Now, fully tighten all screws from Step 1 and Step 2.
 - Step 3: Install the LED Light Strip.** Adhere the LED light strip to the designated area within the open shelf compartment. Connect the power cable and ensure it is routed neatly.
 - Step 4: Install the Charging Station.** Insert the charging station into its designated slot on the top panel. Connect its power cord to an external power source once the unit is in its final position.
 - Step 5: Insert Fabric Drawers.** Unfold all fabric drawers and insert the bottom panels to give them shape. Place the large drawers into the lower compartments and the small drawers into the upper side compartments.
 - Step 6: Secure with Anti-Tilt Device.** Position the TV stand in its desired location. Attach the anti-tilt device to the back of the stand and secure it to the wall according to the instructions in the hardware pack.

3-TIER DESIGN

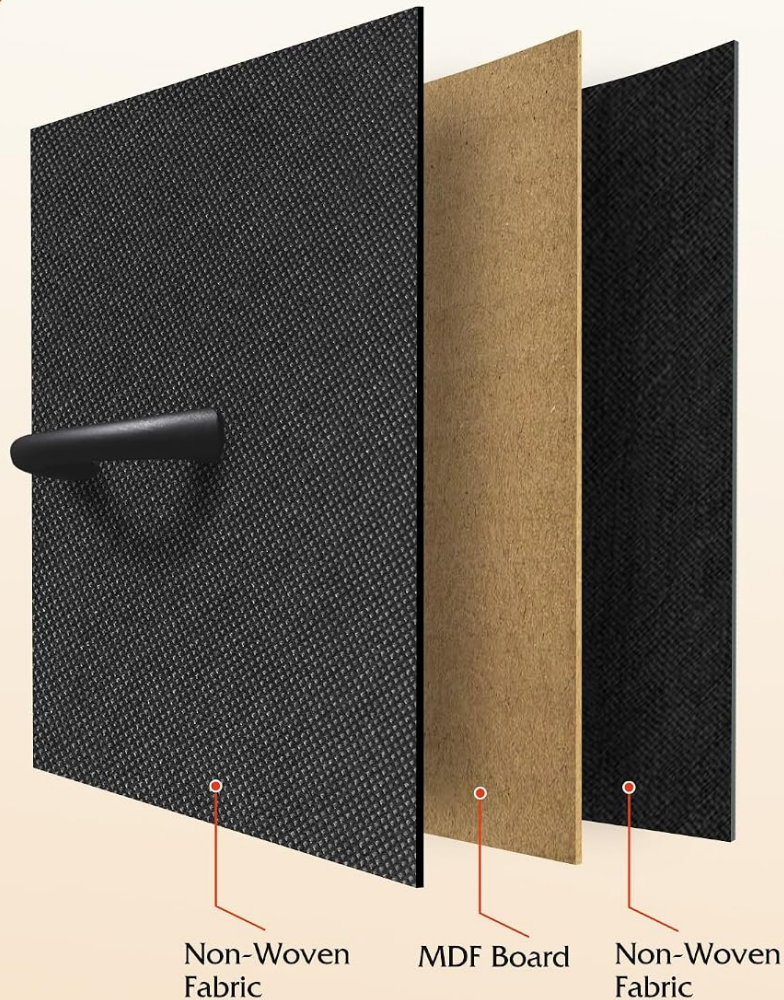

Wear Resistant



Easy to pull handle



Durable & Breathable

Figure 3: Detailed view of the durable 3-tier fabric drawer construction.

OPERATING INSTRUCTIONS

LED Lights Operation

The integrated LED lights offer a customizable ambiance for your living space. Control them using the included remote control or a compatible smartphone application.

- **Power On/Off:** Use the power button on the remote or app to turn the lights on or off.
- **Color Selection:** Choose from over 60,000 colors to match your mood or decor.
- **Brightness Adjustment:** Increase or decrease the light intensity.
- **Mode Selection:** Select various dynamic modes, including music rhythm synchronization, to create a personalized atmosphere for movies, games, or gatherings.

RECESSED CHARGING STATION



Figure 4: LED lights with app control for color, rhythm, and timer functions.

Charging Station Usage

The built-in charging station provides convenient power access for your devices.

- **AC Outlets:** Two (2) 125V/12A AC outlets are available for standard electronics.
- **USB Ports:** Two (2) 5V/2.4A USB ports are provided for charging smartphones, tablets, and other USB-powered devices.
- **Power Cord:** The charging station features a 5-foot flexible power cord for easy connection to a wall outlet.
- **Safety:** The charging station is UL/ETL certified for electrical safety.



Figure 5: Recessed charging station with AC outlets and USB ports.

MAINTENANCE

Proper care and maintenance will extend the life of your TV stand.

- **Cleaning:** Wipe the wood top and metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Fabric Drawers:** The non-woven fabric drawers are easy to clean. Spot clean with a mild detergent and water, then air dry. Do not machine wash.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Electrical Components:** Ensure the charging station and LED lights are kept dry. Do not attempt to repair electrical components yourself.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit is wobbly/unstable.	Screws are loose; uneven floor; anti-tilt device not installed.	Tighten all assembly screws. Adjust the 5 all-directional adjustable feet to level the unit. Install the anti-tilt device securely to the wall.
LED lights are not working.	Power cable disconnected; remote control battery low; light strip damaged.	Check if the LED light power cable is securely plugged in. Replace remote control batteries. If still not working, contact customer service.
Charging station not providing power.	Charging station power cord unplugged; wall outlet not working; device cable faulty.	Ensure the charging station's power cord is fully plugged into a working wall outlet. Test the wall outlet with another device. Try a different charging cable for your device.
Drawers are difficult to open/close.	Drawers are overloaded; fabric is creased; unit is not level.	Reduce the weight in the drawers. Reshape the fabric drawers if creased. Ensure the TV stand is level using the adjustable feet.

SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Model Name	ASNG114 Fabric dresser/BL
Product Dimensions	11.7"D x 47.2"W x 31"H
Color	Black
Mounting Type	Floor Mount
Room Type	Hallway, Living Room, Office
Special Features	Multifunction, Removable, Sturdy, Adjustable Feet, Easy assembly, LED Lights, Charging Station
Assembly Required	Yes
Item Weight	29.5 Pounds
Max TV Size Supported	Up to 55 inches
Charging Station Output	2 AC Sockets (125V/12A), 2 USB Ports (5V/2.4A)
Material	15mm thickened metal steel frame, P2 grade artificial wood top, 3-layer high-quality fiberboard and non-woven fabric drawers.



Figure 6: Product dimensions and drawer capacities.

WARRANTY AND SUPPORT

WLIVE offers a comprehensive warranty for this product. For specific warranty details, please refer to the warranty card included in your package or visit the official WLIVE website. Our professional after-sales team is ready to assist you with any questions or concerns.

Contact Support:

Website: Visit the [WLIVE Store on Amazon](#)

Email: Refer to your product packaging or warranty card for direct email support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question