

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BEYOND HEAT](#) /
- › [BEYOND HEAT Portable Ceramic Space Heater User Manual \(Model: B0D6VM3RF1\)](#)

BEYOND HEAT B0D6VM3RF1

BEYOND HEAT Portable Ceramic Space Heater

Model: B0D6VM3RF1

1. INTRODUCTION

Thank you for choosing the BEYOND HEAT Portable Ceramic Space Heater. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new heater. Please read it thoroughly before use and retain it for future reference.

This 1500W electric heater features PTC fast heating technology, adjustable heat settings, and comprehensive safety features, making it ideal for indoor use in bedrooms, offices, and other small to medium-sized rooms.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic precautions.

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.

- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an overheat protection system that automatically shuts off the heater if it overheats. If this occurs, unplug the heater, wait 10 minutes for it to cool, and then plug it back in.
- The heater is equipped with a tip-over safety switch. If the heater is accidentally tipped over, it will automatically shut off. Ensure the heater is placed on a flat, stable surface for proper operation.

3. PRODUCT OVERVIEW

The BEYOND HEAT Portable Ceramic Space Heater is designed for efficient and safe personal heating. It features a compact design with intuitive controls.



2-IN-1 DESIGN

Power Indicator

Thermostat Control



3 Heat Settings

- 1.Low Heat(750W)
- 2.High Heat (1500W)
- 3.Fan Only

Image: Front view of the BEYOND HEAT Portable Ceramic Space Heater, highlighting the power indicator, thermostat control, and mode selection knob.

Components:

- **Power Indicator:** Illuminates to show the heater is on.
- **Thermostat Control:** Adjusts the desired room temperature.
- **Mode Selection Knob:** Cycles through Fan Only, Low Heat (750W), and High Heat (1500W) settings.
- **Oscillation Button:** Activates the 70-degree oscillation feature for wider heat distribution.
- **Molded Handle:** Integrated into the design for easy portability.
- **Tip-Over Safety Switch:** Located at the bottom, it automatically shuts off the heater if it tips over.

4. SPECIFICATIONS



Image: Detailed view of the heater's dimensions (6.2in width, 8.3in height, 4.7in depth), voltage (120VAC, 60Hz), and power settings (FAN, LOW, HIGH).

Feature	Detail
Brand	BEYOND HEAT
Model	B0D6VM3RF1
Color	Black Ceramic Heater
Power Source	Electric
Heating Method	Convection (PTC Ceramic)
Wattage	1500W (High), 750W (Low)
Number of Speeds	3 (Fan Only, Low, High)
Special Features	Energy Efficient, Overheat Protection, Portable, Tip-Over Switch
Item Weight	1.24 kg

Product Dimensions	16.8D x 21.8W x 14H Centimetres
Indoor/Outdoor Usage	Indoor
Mounting Type	Floor Mount

5. SETUP

1. **Unpack:** Carefully remove the heater from its packaging. Retain packaging for storage or future transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 m) away from walls, furniture, and other combustible materials. Do not place on soft surfaces like carpets or rugs, as this may block air intake and trigger safety features.
3. **Power Connection:** Plug the heater directly into a 120V AC electrical outlet. Do not use extension cords, power strips, or surge protectors, as these can overheat and create a fire hazard.

6. OPERATING INSTRUCTIONS

Your browser does not support the video tag.

Video: This video demonstrates the operation of a 1500W Portable Space Heater, including its fast heating capabilities, adjustable thermostat, and safety features.

1. **Power On:** Plug the heater into a suitable outlet. Press the 'ON/OFF' button on the top panel or use the remote control to turn the unit on. The power indicator light will illuminate.
2. **Select Mode:** Press the 'Mode' button to cycle through the available settings:
 - **Fan Only:** Provides cool air circulation.
 - **Low Heat (750W):** For moderate warmth.
 - **High Heat (1500W):** For maximum warmth and faster heating.
3. **Adjust Thermostat:** Use the thermostat control knob to set your desired room temperature. The heater will cycle on and off to maintain this temperature.
4. **Activate Oscillation:** Press the 'Wdir' (Oscillation) button to enable the 70-degree oscillation feature, distributing warm air across a wider area. Press again to stop oscillation.
5. **Power Off:** Press the 'ON/OFF' button to turn off the heater. The fan will continue to run for approximately 20 seconds to cool down the heating elements before completely shutting off. This is a normal function to prolong the life of the heater.

7. FEATURES

FAST HEATING



Image: A woman relaxing in a room, with the BEYOND HEAT Portable Ceramic Space Heater providing fast and comfortable warmth.

- **PTC Fast Heating:** Equipped with a ceramic PTC heating element, the heater provides rapid warmth, minimizing waiting time.
- **Adjustable Heat Settings:** Offers 3 heat settings (750W/1500W) and a fan-only mode for versatile comfort in various conditions.
- **Overheat Protection:** An internal sensor monitors the heater's temperature. If it exceeds a safe limit, the heater automatically shuts off to prevent damage and ensure safety.
- **Tip-Over Safety Switch:** For enhanced safety, the heater automatically powers off if it is accidentally knocked over or lifted from its base.
- **Portable Design:** Lightweight with a convenient molded handle, making it easy to move between rooms or locations.
- **Low Noise Operation:** Designed to operate quietly, ensuring minimal disturbance in quiet environments like bedrooms or offices.
- **ETL Certified:** Certified for safety standards in Canada.

SAFE DESIGN FOR YOU & YOUR FAMILY

- ✓ Overheat Protection
- ✓ Tip-Over Protection



Image: Two children in a room with the BEYOND HEAT Portable Ceramic Space Heater, emphasizing its safe design with overheat and tip-over protection.

8. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

1. Cleaning:

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- Use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust grilles.
- Never immerse the heater in water or any other liquid.

2. **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

9. TROUBLESHOOTING

If your heater is not operating correctly, please check the following common issues before contacting support:

- **Heater does not turn on:**

- Ensure the power cord is securely plugged into a working 120V outlet.
- Check if the tip-over safety switch on the bottom is fully depressed (heater must be on a flat, stable surface).
- If the overheat protection has activated, unplug the heater for 10 minutes to reset it, then plug it back in.
- Verify that the 'ON/OFF' button has been pressed.

- **No heat, fan is running:**

- Ensure the mode is set to 'Low Heat' or 'High Heat', not 'Fan Only'.
- Adjust the thermostat control to a higher setting than the current room temperature.

- **Heater makes unusual noises:**

- A slight humming sound from the fan is normal.
- If the noise is excessive or unusual, unplug the heater and inspect for any obstructions in the fan or grilles.

If the problem persists after checking these points, please contact customer support.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the manufacturer's website or contact the retailer where the product was purchased. Please have your model number (B0D6VM3RF1) and purchase date available when contacting support.