

AEEZO AZMB1001

AEEZO 10.1" HD Android Tablet User Manual

Model: AZMB1001

1. INTRODUCTION

Thank you for choosing the AEEZO 10.1" HD Android Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before using the tablet to ensure proper function and longevity.

2. SAFETY INFORMATION

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only the original charger and accessories provided or approved by AEEZO.
- Do not attempt to disassemble or repair the tablet yourself. Contact authorized service personnel.
- Keep the tablet away from water and other liquids.
- Dispose of the tablet and its battery responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check the package for the following items:

- AEEZO 10.1" HD Android Tablet
- USB-C Cable
- Power Adapter
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your AEEZO tablet.



Figure 4.1: Front and back view of the AEEZO 10.1" HD Android Tablet, highlighting its sleek design and camera placement. The screen displays "6GB+64GB Android 13".

Tablet certificato GMS

Puoi goderti di più sullo streaming, la navigazione, la musica e le foto che ami in una sola carica.



Display da 10,1 pollici



Android 13



1280*800ips



Storage da 64 G

Figure 4.2: Side profile of the AEEZO tablet, emphasizing its slim design. The image also indicates GMS certification, a 10.1-inch display, Android 13 operating system, 1280x800 IPS resolution, and 64GB storage capacity.



Figure 4.3: Detailed view of the tablet's screen and camera features. This image highlights the 10-inch screen size, 1280x800 resolution, in-cell screen technology for a thinner and lighter profile, eye protection with anti-blue light, a 5MP rear camera, and a 2MP front camera.



Figure 4.4: Physical dimensions of the AEEZO tablet, showing a width of 16.3 cm (6.41 inches) and a height of 24.5 cm (9.68 inches).

5. SETUP

5.1 Charging the Battery

Before first use, fully charge the tablet's battery. Connect the USB-C cable to the tablet's charging port and the other end to the power adapter. Plug the adapter into a wall outlet. The charging indicator will show the charging status. A full charge typically takes 3-4 hours.

Capacity

RAM 6GB (2GB+4GB)

ROM 64GB

Micro SD card 128GB

CPU&GPU

CPU Quad core

GPU GE8300

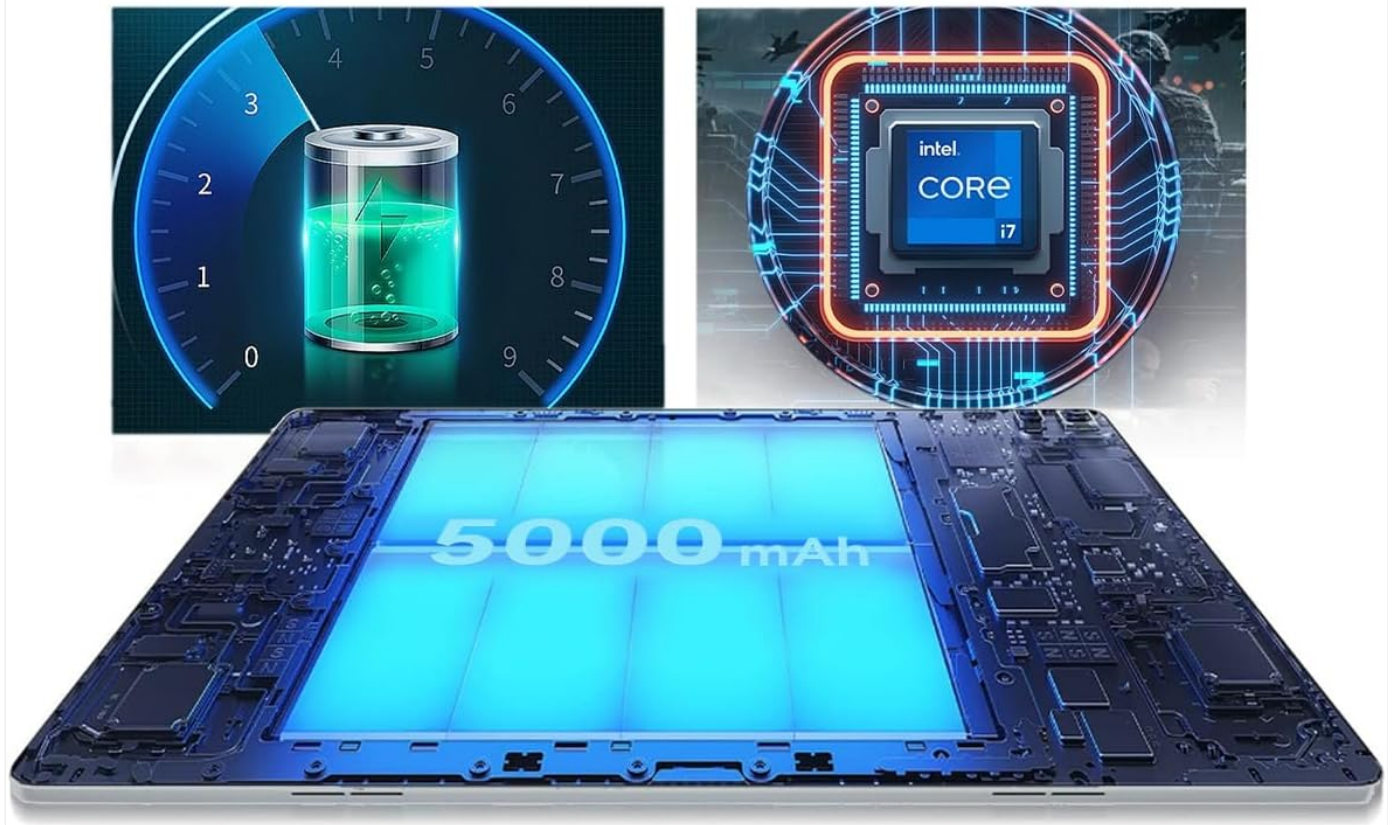


Figure 5.1: Illustration of the tablet's internal components, highlighting the 5000mAh battery capacity. This image also details the tablet's memory configuration (6GB RAM, 64GB ROM, with support for up to 128GB Micro SD card) and its Quad-core CPU with GE8300 GPU.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the AEEZO logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" to shut down the device.
- **To Restart:** From the power-off menu, select "Restart".

5.3 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one. This is necessary for downloading apps from the Google Play Store.
4. Set up screen lock (optional).
5. Review and accept Google services terms.

5.4 Inserting/Removing a MicroSD Card

The tablet supports expandable storage up to 1TB via a MicroSD card. Locate the MicroSD card slot on the side of the tablet. Gently insert the card until it clicks into place. To remove, gently push the card in until it pops out.

6. OPERATING THE TABLET

6.1 Basic Navigation

- **Tap:** To select an item, open an app, or press a button.
- **Touch and Hold:** To open contextual menus or move icons.
- **Swipe:** To scroll through lists, switch between home screens, or navigate within apps.
- **Pinch-to-Zoom:** To zoom in or out on images, maps, or web pages.

6.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.



Figure 6.1: The tablet screen displaying a vibrant night scene, accompanied by icons indicating Wi-Fi connectivity, a 5MP rear camera, and a 2MP front camera, showcasing its multimedia capabilities.

6.3 Downloading Apps

Apps can be downloaded from the Google Play Store. Ensure you are connected to Wi-Fi and signed into your Google account.

1. Open the **Play Store** app.
2. Search for the app you wish to download.
3. Tap **Install**.

6.4 Using the Camera

The tablet features a 5MP rear camera and a 2MP front camera.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera switch icon.

- 4. Select video mode to record videos.

6.5 Connecting to Other Devices

- **Bluetooth:** Go to **Settings > Connected devices > Bluetooth** to pair with Bluetooth headphones, speakers, or other devices.
- **USB-C:** Connect the tablet to a computer using the USB-C cable for file transfer. Select the desired USB connection mode (e.g., File Transfer, PTP) from the notification panel.

7. MAINTENANCE

7.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use liquid cleaners or abrasive materials, as they may damage the surface.

7.2 Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the tablet charging for extended periods after it is fully charged.
- Store the tablet in a cool, dry place if not used for a long time, with the battery charged to about 50%.

7.3 Software Updates

Periodically check for system updates to ensure optimal performance and security. Go to **Settings > System > System update**.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet won't turn on.	Low battery; System crash.	Charge the tablet for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart.
Wi-Fi connection issues.	Incorrect password; Router issue; Tablet Wi-Fi off.	Check Wi-Fi password. Restart router. Ensure Wi-Fi is enabled in settings.
Apps crashing or freezing.	Insufficient RAM; App bug; Outdated app.	Close background apps. Clear app cache/data (Settings > Apps). Update the app from Play Store.
Slow performance.	Too many apps running; Low storage.	Close unused apps. Uninstall unnecessary apps. Clear cache.

9. SPECIFICATIONS

Feature	Detail
Model Number	AZMB1001

Feature	Detail
Display	10.1 inch HD (1280 x 800) IPS
Processor	Quad-Core
RAM	6GB (2GB+4GB)
Internal Storage	64GB ROM
Expandable Storage	Up to 1TB via MicroSD card
Operating System	Android 13
Cameras	Rear: 5MP, Front: 2MP
Battery	5000mAh
Connectivity	Wi-Fi, Bluetooth, USB Type-C
Dimensions	Approx. 24.5 cm x 16.3 cm (9.68 in x 6.41 in)

10. WARRANTY AND SUPPORT

AEEZO products come with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact AEEZO customer service through their official website or the contact information provided in your product documentation.

You can visit the official AEEZO store on Amazon for more information:[AEEZO Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question