

[Manuals.plus](#) /

› [Schwinn](#) /

› Schwinn Echo 2 Seat Kids Bike Trailer Instruction Manual

Schwinn Echo Double

Schwinn Echo 2 Seat Kids Bike Trailer Instruction Manual

Model: Echo Double (13-SC677AZ)

1. INTRODUCTION AND OVERVIEW

The Schwinn Echo 2 Seat Kids Bike Trailer is designed to provide a safe and comfortable way to transport children by bicycle. This trailer features a durable frame, a two-in-one canopy for weather protection, and a universal coupler for easy attachment to most adult bicycles. It is equipped with 20-inch air-filled tires for a smooth ride and a 5-point harness system for child security.



Schwinn Echo Trailer with two children inside, smiling and wearing helmets.

2. SAFETY INFORMATION

Always prioritize safety when using the bike trailer. Adhere to the following guidelines:

- **Maximum Weight Capacity:** The trailer supports a maximum of 40 pounds per rider, with a total maximum capacity of 80 pounds for two riders.
- **Maximum Height Recommendation:** Children should not exceed 31.9 inches in height.
- **Harness System:** Always secure children using the integrated 5-point safety harnesses. Ensure straps are snug but comfortable.
- **Safety Flag:** Attach the included safety flag for increased visibility to motorists and pedestrians.
- **Pre-Ride Check:** Before each ride, verify that the trailer is securely attached to the bicycle, tires are properly inflated, and all safety mechanisms are engaged.
- **Helmet Use:** Ensure all occupants wear appropriate safety helmets.

Safety first

5-point harnesses



Interior view of the Schwinn Echo Trailer showing the 5-point safety harnesses and an included safety flag.

3. PACKAGE CONTENTS

The Schwinn Echo 2 Seat Kids Bike Trailer package includes:

- Schwinn Echo Trailer (main assembly)
- Universal Bike Coupler
- Quick-Release Wheels (2)
- Safety Flag
- Two-in-one Canopy (bug screen and weather shield)

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Schwinn Echo Bike Trailer:

1. **Unfold the Frame:** Carefully unfold the trailer frame until it locks into its open position. Ensure all locking mechanisms are engaged.

2. **Attach Wheels:** Insert the quick-release wheels into the axle mounts on the trailer frame. Secure them by engaging the quick-release levers.
3. **Install Canopy:** Position the two-in-one canopy over the trailer frame and secure it according to the attachment points.
4. **Attach Universal Coupler to Bicycle:** The universal coupler attaches to the rear axle of most adult bicycles. Remove the rear wheel nut, slide the coupler onto the axle, and re-secure the wheel nut. Ensure the coupler is oriented correctly.
5. **Connect Trailer to Coupler:** Slide the trailer arm into the universal coupler. Secure it with the provided pin and safety strap.
6. **Install Safety Flag:** Insert the safety flag into its designated slot on the trailer.



Close-up of a hand attaching the universal coupler of the Schwinn Echo Trailer to a bicycle's rear wheel axle.

5. OPERATING INSTRUCTIONS

To ensure a safe and enjoyable experience:

- **Loading Children:** Place children into the trailer and secure them with the 5-point harnesses. Adjust straps for a snug fit.
- **Canopy Use:** Use the bug screen to protect children from insects. Deploy the weather shield for protection against rain or wind.
- **Rear Storage:** Utilize the rear storage area for small items, such as water bottles or snacks, up to 12 pounds. Do not overload.
- **Riding:** Ride cautiously, especially when turning or on uneven terrain. Be aware of the increased length and width of your bicycle with the trailer attached.
- **Folding for Storage:** To fold the trailer, release the frame locking mechanisms and remove the quick-release wheels. This allows for compact storage.



Side view of the Schwinn Echo Trailer securely attached to an adult bicycle, ready for use.

Compact storage



Schwinn Echo Trailer in its compact, folded state with quick-release wheels removed for storage.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your trailer:

- **Cleaning:** Clean the fabric and frame with mild soap and water. Avoid harsh chemicals. Allow to air dry completely.
- **Tire Pressure:** Periodically check and maintain the recommended air pressure for the 20-inch tires.
- **Fasteners and Connections:** Regularly inspect all bolts, pins, and the coupler connection for tightness and wear. Replace any worn or damaged parts immediately.
- **Storage:** Store the trailer in a dry, protected area when not in use to prevent rust and fabric degradation.

A comfortable ride



Schwinn Echo Trailer exterior view highlighting the weather shield, bug screen, and 20-inch air-filled tires.

7. TROUBLESHOOTING

If you encounter issues, consider the following:

- **Trailer Wobbles or Feels Unstable:** Ensure the universal coupler is securely attached to the bicycle and the trailer arm is firmly connected to the coupler with the safety pin and strap. Check tire pressure.
- **Difficulty Rolling:** Verify that the quick-release wheels are fully engaged and not rubbing against the frame. Check tire pressure.
- **Canopy Not Staying in Place:** Ensure all canopy attachment points are correctly fastened.

8. SPECIFICATIONS

Feature	Detail
Brand	Schwinn

Feature	Detail
Model Name	Echo Double
Part Number	13-SC677AZ
UPC / GTIN	038675067721
Item Weight	12 Pounds
Product Dimensions (L x W x H)	51.8" x 31.9" x 32.5"
Frame Material	Metal (Aluminum)
Maximum Weight Recommendation	40 Pounds per rider (80 lbs total)
Seating Capacity	2 Children
Maximum Height Recommendation	31.9 Inches
Wheel Size	20 inches (Air-filled)
Color	Yellow

9. WARRANTY AND SUPPORT

The Schwinn Echo 2 Seat Kids Bike Trailer comes with a**Limited Lifetime Warranty**. For detailed warranty information, claims, or technical support, please refer to the official Schwinn website or contact their customer service department. Keep your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question