

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Baseus](#) /
- › [Baseus 4-in-1 Car Jump Starter and Air Inflator User Manual](#)

Baseus Inflator-6K

Baseus 4-in-1 Car Jump Starter and Air Inflator User Manual

Model: Inflator-6K

This comprehensive manual provides instructions for the safe and efficient use of your Baseus 4-in-1 device, combining a car jump starter, air inflator, power bank, and LED flashlight.

PRODUCT OVERVIEW

The Baseus 4-in-1 Car Jump Starter and Air Inflator is a versatile and essential tool for roadside emergencies and daily convenience. It integrates four critical functions: a powerful jump starter for vehicles, an efficient air compressor for tires and inflatables, a portable power bank for charging electronic devices, and a bright LED flashlight for illumination.



A front view of the Baseus 4-in-1 device, showcasing its digital display indicating 100% charge, and control buttons below.

Key Features

- **4-in-1 Functionality:** Combines a power bank, car jump starter, air inflator, and flashlight.

- **High Performance:** 6000mAh capacity / 3.7V / 22.2Wh power bank with 150 PSI air compressor.
- **Jump Start Capability:** 12V start voltage, 600A peak current, capable of jump starting a car up to 50 times on a full charge.
- **Versatile Inflation:** Includes various inflation attachments for different tire types, balls, and other inflatables.
- **Integrated Display:** Built-in screen shows battery charge level for the jump starter.
- **Durable Battery Cells:** High-performance polymer battery cells resistant to extreme low and high temperatures.
- **Low Standby Power:** Very low power consumption in standby mode, retaining up to 85% charge after one year of non-use.
- **Safety Protections:** Built-in protection prevents damage to connected devices.
- **USB Output:** 5V/3A, 9V/3A, 12V/2.5A (Max) for charging external devices.
- **Type-C Output:** 45W 9V/5A (Max).

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Baseus
Model	Inflator-6K
Battery Type	Lithium Polymer
Battery Capacity	6000 mAh
Rated Output Capacity	3700 mAh
Input (Type-C)	5V-2.4A
Output (USB-A)	5V-3A (Max)
Start Voltage	12V
Start Current	600A
Peak Current	600A
Air Compressor Pressure	150 PSI
Operating Temperature	Up to 35°C
Dimensions	10 x 5 x 5 cm
Weight	50 grams

PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x Baseus 4-in-1 Car Jump Starter and Air Inflator
- 4 x Inflation Nozzles (for various tire types and inflatables)
- 1 x Type-C Charging Cable
- 1 x Smart Ignition Clip (Jump Start Clamps)

SAFETY INFORMATION

Read all safety warnings and instructions carefully before using this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Do not disassemble, modify, or attempt to repair the device.
- Keep the device away from water, moisture, and high temperatures.
- Do not use the device if it is damaged or has been dropped.
- Ensure correct polarity (+ to +, - to -) when connecting jump start clamps to a vehicle battery. Incorrect connection can cause damage.
- Keep out of reach of children.
- Use in a well-ventilated area.
- Avoid over-inflating tires or other items. Follow recommended pressure levels.
- Do not store the device in direct sunlight or in extreme temperatures.

12 Safety Protections

Your safety is our top priority.



LED Digital Display

Tire pressure, battery level and output status at a glance.



Built-in Attachment Storage

Neat and convenient.



This image highlights the smart safety protections integrated into the jump starter clamps, designed to prevent overcharging, overheating, and short circuits, ensuring safe operation.

SETUP

Charging the Device

Before first use, fully charge the device. It is recommended to fully charge the device after each use to ensure it is ready for emergencies.

1. Connect the provided Type-C cable to the device's input port.
2. Connect the other end of the Type-C cable to a suitable USB power adapter (not included).
3. The digital display on the device will show the charging progress. Charge until the display indicates 100%.



The device can be charged using the provided Type-C cable. Ensure the device is fully charged before use for optimal performance.

OPERATION

Jump Starting a Vehicle

Use this function to start a dead car battery. Ensure the device has at least 50% charge before attempting a jump start.

1. Connect the smart ignition clip (jump start clamps) to the designated jump start port on the device.
2. Attach the **RED** clamp (+) to the positive terminal of the car battery.
3. Attach the **BLACK** clamp (-) to the negative terminal of the car battery.
4. Ensure both clamps are securely connected to prevent arcing.
5. Start the vehicle's engine.
6. Once the vehicle starts, immediately remove the clamps from the car battery, starting with the black (-) clamp, then the red (+) clamp.
7. Disconnect the smart ignition clip from the device.



This image demonstrates the correct connection of the jump starter clamps to a car battery, showing the device ready to initiate a jump start.

Using the Air Inflator

The built-in air compressor can inflate car tires, bicycle tires, and various sports equipment. Refer to the item's recommended pressure before inflating.

1. Select the appropriate inflation nozzle from the included accessories and securely attach it to the air hose.
2. Connect the air hose to the device's inflation port.
3. Connect the nozzle to the valve of the item to be inflated.
4. Use the digital display and control buttons (+ and -) to set the desired pressure (PSI/Bar).
5. Press the start button (often indicated by a fan icon) to begin inflation. The device will automatically stop when the preset pressure is reached.
6. Disconnect the nozzle and air hose from the item and the device.

Multifunctional Design

Jump starting/inflating/lighting/charging.




Powerful Inflation

Fully inflates a tire in a snap.



Instant Jump Start

600A peak current.

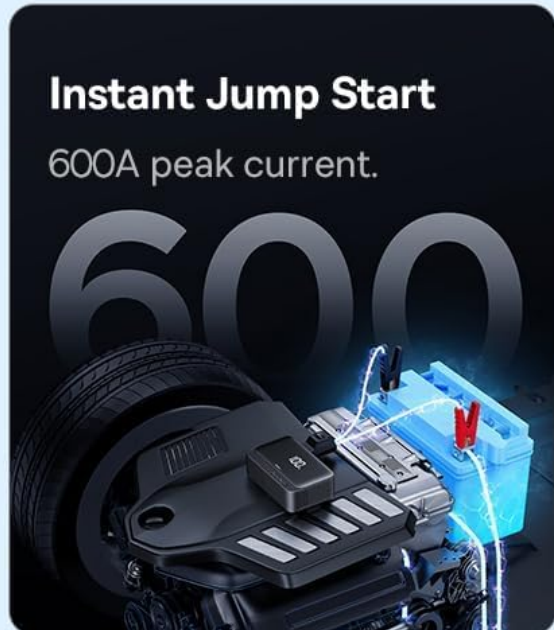

The device actively inflating a car tire, with its digital display showing the current pressure reading, demonstrating its powerful inflation capability.

Using as a Power Bank

The device can charge your mobile phones, tablets, and other USB-powered devices via its USB-A output port.

1. Connect your device's USB charging cable to the USB-A output port on the Baseus 4-in-1 device.
2. The device will automatically begin charging the connected electronic device.
3. Monitor the charging status on your connected device.



The device is shown charging a smartphone, highlighting its function as a portable power bank for various electronic devices.

Using the LED Flashlight

The integrated LED flashlight provides illumination for various situations, including emergencies.

1. Press the flashlight button (usually indicated by a light bulb icon) to turn on the LED light.
2. Press the button again to cycle through different modes (e.g., steady light, SOS signal, emergency beacon).
3. Press and hold the button to turn off the flashlight.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your device.

- **Cleaning:** Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the device is not in regular use, charge it every 3-6 months to maintain battery health and prevent deep discharge.
- **Port Maintenance:** Keep all ports (charging, USB, jump start) free of dust and debris.

TROUBLESHOOTING



If you encounter issues with your Baseus 4-in-1 device, refer to the table below for common problems and solutions.




Problem	Possible Cause / Solution
Device not turning on.	Check the battery level. Recharge the device if the battery is low.
Vehicle not jump starting.	Ensure the jump start clamps are correctly connected (positive to positive, negative to negative). Verify the device has sufficient charge (at least 50%). The vehicle battery might be severely damaged and require professional assistance.
Air inflator not working or not reaching desired pressure.	Check that the inflation nozzle is securely attached to the item and the air hose is firmly connected to the device. Verify the preset pressure is correctly set. Ensure the device has sufficient power.
Device not charging external devices (power bank function).	Ensure the USB charging cable is securely connected to both the device and the external device. Verify the Baseus device has sufficient charge. Try a different USB cable.

WARRANTY AND SUPPORT

This Baseus product comes with a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or visit the official Baseus website. Keep your purchase receipt for warranty claims.

Related Documents - Inflator-6K

	<p>GOOLOO A5 Jump Starter with Inflator User Manual</p> <p>User manual for the GOOLOO A5 Jump Starter with Inflator, featuring 4000A and 150PSI. Includes operation instructions, product highlights, technical specifications, safety warnings, and warranty information.</p>
	<p>Lenercom Jump Starter & Air Pump Quick User Guide</p> <p>This guide provides detailed instructions for the Lenercom 4-in-1 Jump Starter and Air Pump, covering its features, operation, safety guidelines, and troubleshooting. Learn how to jump-start vehicles, use the air compressor, power bank, and LED light functions safely and effectively.</p>

<div><p>Emergency start power supply & air pump</p><p>User Manual</p></div>	<p>QS003 Portable Jump Starter and Air Compressor User Manual</p> <p>Comprehensive user manual for the QS003 portable jump starter and air compressor, detailing product overview, specifications, usage methods for jump-starting and tire inflation, troubleshooting, and safety guidelines.</p>																								
<div><p>YaberAuto AP01</p><p>QUICK-START GUIDE</p><p>CAR JUMP STARTER</p></div>	<p>YaberAuto AP01 Car Jump Starter & Air Compressor Quick-Start Guide</p> <p>This quick-start guide provides essential information on using the YaberAuto AP01, a portable car jump starter and 150 PSI air compressor, including features, operation, and safety precautions.</p>																								
<div><p>UTRAI</p><p>JS-9 Multi-Functional Car Jump Starter</p><p>USER MANUAL</p></div>	<p>UTRAI JS-9 Jump Starter and Air Inflator User Manual</p> <p>Comprehensive user manual for the UTRAI JS-9, a 15000mAh car jump starter with a 150 PSI air inflator. Learn about its features, operation, safety precautions, and troubleshooting.</p>																								
<div><p>Introduction</p><p>Thank you for purchasing ACEZUK M03 car jump starter kit. Please read the user manual carefully before you start to use the product.</p><p>Charge to first</p><p>After receiving the manual, you can start to charge your M03 with your smartphone included.</p><p>Warning</p><p>This unit is for vehicle with 12V batteries. It may be dangerous if it is used with other kind of batteries. Read and understand the safety information. Always using the good method and the good result of electric shock, explosion, fire property damage and personal injury.</p><p>Technical Details</p><table><tr><td>Model</td><td>M03</td></tr><tr><td>Capacity</td><td>20000mAh 96100mAh</td></tr><tr><td>Type & Input/Output</td><td>5V-18V (100W Input/Output)</td></tr><tr><td>USB 100W Output</td><td>5V-3.3A</td></tr><tr><td>Air Compressor</td><td>150PSI</td></tr><tr><td>Dimensions (L*W*H)</td><td>217*115*60mm</td></tr><tr><td>Weight</td><td>2.18kg(4.81lb)</td></tr><tr><td>Jump starter output</td><td>12V</td></tr><tr><td>Working Temperature</td><td>-20°C-50°C(4°F-120°F)</td></tr><tr><td>LED Flashlight</td><td>400 Lumens</td></tr><tr><td>Internal Battery</td><td>Lithium polymer</td></tr><tr><td>Screen size</td><td>4.7" (120mm)</td></tr></table><p>03 1</p></div>	Model	M03	Capacity	20000mAh 96100mAh	Type & Input/Output	5V-18V (100W Input/Output)	USB 100W Output	5V-3.3A	Air Compressor	150PSI	Dimensions (L*W*H)	217*115*60mm	Weight	2.18kg(4.81lb)	Jump starter output	12V	Working Temperature	-20°C-50°C(4°F-120°F)	LED Flashlight	400 Lumens	Internal Battery	Lithium polymer	Screen size	4.7" (120mm)	<p>ACEZUK M03 Car Jump Starter User Manual & Technical Guide</p> <p>Comprehensive guide to the ACEZUK M03 car jump starter kit, covering technical specifications, operation for jump starting vehicles, inflating tires, charging devices, and safety precautions.</p>
Model	M03																								
Capacity	20000mAh 96100mAh																								
Type & Input/Output	5V-18V (100W Input/Output)																								
USB 100W Output	5V-3.3A																								
Air Compressor	150PSI																								
Dimensions (L*W*H)	217*115*60mm																								
Weight	2.18kg(4.81lb)																								
Jump starter output	12V																								
Working Temperature	-20°C-50°C(4°F-120°F)																								
LED Flashlight	400 Lumens																								
Internal Battery	Lithium polymer																								
Screen size	4.7" (120mm)																								