

KIDYWOLF KIDYPRINTPAR

KIDYWOLF Kidyprint Instant Print Camera User Manual

Model: KIDYPRINTPAR

INTRODUCTION

Welcome to the KIDYWOLF Kidyprint Instant Print Camera user manual. This guide provides essential information for the safe and effective use of your new instant camera. The Kidyprint is designed to allow children to capture and instantly print their memories, fostering creativity and exploration.

PRODUCT OVERVIEW

The KIDYWOLF Kidyprint is an instant print camera for children, featuring thermal printing technology that produces black and white images without the need for ink cartridges. It includes a range of creative tools to enhance the photography experience.

- **Thermal Printing System:** Prints black and white images instantly without ink or cartridges.
- **Creative Features:** Equipped with 21 filters, an 8Mpx selfie camera, and a 2.4-inch LCD screen for viewing and navigation.
- **Durable and Portable Design:** Lightweight, robust, and rechargeable via USB-C. Includes a safety neck strap for secure carrying.
- **Included Accessories:** Comes with thermal paper rolls (including sticker and colored options), magnetic frames, and stickers for photo customization.

Une prise en main rapide



Prenns ta
photo



Navigue
simplement



Imprimme en
un clic



Retrouve tes
souvenirs

Figure 1: The KIDYWOLF Kidyprint camera interface, showing the screen and control buttons.

The camera's intuitive interface allows for easy navigation and photo capture, making it suitable for young users.

SETUP

1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed below are present and undamaged:

- KIDYWOLF Kidyprint Camera
- USB-C Charging Cable
- Thermal Paper Rolls (standard, sticker, colored)
- Magnetic Photo Frames
- Neck Strap



Figure 2: The KIDYWOLF Kidyprint camera, its packaging, and included accessories.

2. Charging the Camera

Before first use, fully charge the camera. Connect the provided USB-C cable to the camera's charging port and plug the other end into a compatible USB power adapter (not included) or computer. The charging indicator light will show the charging status.

3. Inserting Thermal Paper

1. Locate the paper compartment on the camera.
2. Open the compartment cover.
3. Insert a roll of thermal paper, ensuring the paper feeds correctly.
4. Close the compartment cover, leaving a small portion of paper extended.

4. Attaching the Neck Strap

Attach the safety neck strap to the designated attachment points on the camera. Ensure it is securely fastened to prevent accidental drops.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press and hold the power button (usually marked with a power symbol) to turn the camera on or off. The 2.4-inch LCD screen will illuminate upon startup.

2. Taking Photos

Point the camera at your subject. Use the 8Mpx selfie camera for self-portraits. Press the shutter button to capture an image. The camera will display a preview on the screen.



Figure 3: Children using the KIDYWOLF Kidyprint camera to capture moments.

3. Navigating Menus and Applying Filters

Use the navigation buttons (up, down, left, right, OK) to browse through the camera's menu options. Select from 21 available filters to add creative effects to your photos before printing.

4. Printing Photos

After capturing or selecting an image, press the print button. The camera will instantly print the image in black and white using its thermal printing system. Allow the print to fully emerge before tearing it off.



Figure 4: Children engaging in various activities with the Kidyprint, including taking photos, printing, coloring, and displaying prints.

5. Viewing Photos and Connectivity

Access the gallery mode to view previously captured images. The camera supports HDMI and USB connectivity for transferring photos to compatible devices like TVs, computers, smartphones, or tablets.



Bandoulière large avec sécurité

Figure 5: A child wearing the Kidyprint camera with its safety neck strap, demonstrating its portability.

MAINTENANCE

1. Cleaning the Camera

Use a soft, dry cloth to clean the exterior of the camera. Do not use liquid cleaners or solvents. For the lens and screen, use a specialized lens cleaning cloth.

2. Replacing Thermal Paper

When the paper roll is depleted, replace it with a new KIDYWOLF thermal paper roll. Follow the instructions in the 'Inserting Thermal Paper' section.



Figure 6: Kidyprint accessories, including various thermal paper rolls and magnetic photo frames, shown with children using them.

3. Battery Care

The camera uses an Alkaline battery. To prolong battery life, avoid fully discharging the camera frequently. Recharge the camera using the USB-C cable when the battery level is low. Store the camera in a cool, dry place when not in use for extended periods.

4. Water Resistance

The KIDYWOLF Kidyprint camera is **not waterproof**. Avoid exposure to water or excessive moisture to prevent damage.

TROUBLESHOOTING

- **Camera Not Turning On:** Ensure the battery is charged. Connect the camera to a power source using the USB-C cable and try again.
- **Poor Print Quality:** Check if the thermal paper is correctly inserted and not damaged. Ensure the camera lens is clean.
- **Paper Jam:** Open the paper compartment and carefully remove any jammed paper. Reinsert a new

roll if necessary.

- **Screen Not Responding:** Try restarting the camera by holding the power button. If the issue persists, contact customer support.

SPECIFICATIONS

Brand	KIDYWOLF
Model	KIDYPRINTPAR
Color	Rose
Screen	2.4 inches LCD
Connectivity Technology	HDMI, USB
Video Resolution	720p
Battery Composition	Alkaline
Product Dimensions (L x W x H)	23.8 x 5.5 x 17.5 cm
Product Weight	610 grams
Image Stabilization	None
Burst Mode Speed	30 FPS
ISO Range	100-3200
Supported File Format	JPEG
Water Resistance Level	Not waterproof
Compatible Devices	TV, computer, smartphone, tablet

WARRANTY AND SUPPORT

Warranty Information

The KIDYWOLF Kidyprint camera comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty claims, please contact KIDYWOLF customer service. Our team is available to provide reactive support and ensure your satisfaction.