

- Manuals.plus /
- > [Juboos](#) /
 - > Juboos Kid's Digital Watch User Manual

Juboos

Juboos Kid's Digital Watch User Manual

Model: MR-2206

Introduction	Features	Specifications	Setup	Operating	Maintenance	Troubleshooting
			Warranty & Support			

1. INTRODUCTION

Thank you for choosing the Juboos Kid's Digital Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch to ensure optimal performance and longevity. Designed for children aged 5-13, this watch combines durability with fun, featuring a waterproof design, colorful LED lights, and essential functions like a stopwatch and alarm.



Figure 1: Front view of the Juboos Kid's Digital Watch.

2. KEY FEATURES

- **Digital Time Display:** Clear LCD display for easy time reading.

- **7-Color LED Backlight:** Press the 'LIGHT' button to illuminate the display with various colors, enhancing visibility in low-light conditions.
- **30M Water Resistance:** Suitable for daily use such as hand washing, face washing, and light rain. *Note: Not suitable for hot water, sauna, or diving. Do not press buttons underwater.*
- **Stopwatch Function:** Accurately record elapsed time for sports and activities.
- **Alarm Clock:** Set daily alarms to help children manage their time.
- **Hourly Chime:** Optional chime to mark each hour.
- **12/24 Hour System:** Easily switch between 12-hour (AM/PM) and 24-hour formats.
- **Durable Construction:** Made with high-quality resin strap and case, stainless steel back, and highly transparent acrylic glass for durability.



Figure 2: Visual representation of the watch's multifunctional capabilities.

3. SPECIFICATIONS

Attribute	Value
Brand	Juboos
Model Number	MR-2206
Dial Diameter	3.5 cm (1.37 inches)
Dial Thickness	1.2 cm (0.5 inches)
Strap Length (Total)	22.5 cm (8.85 inches)
Strap Width	1.5 cm (0.59 inches)
Wrist Circumference (Min)	14.3 cm (5.6 inches)
Wrist Circumference (Max)	19.5 cm (7.67 inches)
Watch Weight	26g (0.91oz)
Water Resistance	30M (3ATM)
Battery Type	1 Lithium Metal battery (required)
Clasp Type	Buckle



Figure 3: Detailed dimensions of the watch.

4. SETUP INSTRUCTIONS

This section guides you through setting the time, date, and alarm on your Juboos Kid's Digital Watch. Refer to the video below for a visual demonstration of these steps.

4.1 Setting Time and Date

The watch has four buttons: **LIGHT** (top left), **MODE** (bottom left), **START** (top right), and **RESET** (bottom right).

1. From the Time Display Mode, press the **MODE (M)** button *three times* to enter the time setting mode. The minutes will begin flashing.
2. Press the **START (S)** button to adjust the minutes. Each press advances the minute by one. Hold to advance quickly.
3. Press the **RESET (R)** button once to switch to setting the hour. The hour will begin flashing.

4. Press the **START (S)** button to adjust the hour. Note the 'A' for AM, 'P' for PM, or 'H' for 24-hour format.
5. Press the **RESET (R)** button again to switch to setting the date (day of the month). The day will flash.
6. Press the **START (S)** button to adjust the day.
7. Press the **RESET (R)** button again to switch to setting the month. The month will flash.
8. Press the **START (S)** button to adjust the month.
9. Press the **RESET (R)** button again to switch to setting the day of the week (SMTWTFS). The current day will flash.
10. Press the **START (S)** button to adjust the day of the week.
11. Once all settings are complete, press the **MODE (M)** button once to return to the Time Display Mode.

4.2 Setting Alarm

1. From the Time Display Mode, press the **MODE (M)** button *two times* to enter the alarm setting mode. The hour will begin flashing.
2. Press the **START (S)** button to adjust the alarm hour.
3. Press the **RESET (R)** button once to switch to setting the alarm minutes. The minutes will flash.
4. Press the **START (S)** button to adjust the alarm minutes.
5. Press the **MODE (M)** button once to return to the Time Display Mode.

4.3 Activating/Deactivating Alarm and Hourly Chime

- To activate/deactivate the alarm: From Time Display Mode, press and hold the **RESET (R)** button, then press the **START (S)** button. An alarm icon (bell) will appear on the display when the alarm is active.
- To activate/deactivate the hourly chime: From Time Display Mode, press and hold the **RESET (R)** button, then press the **MODE (M)** button. The 'SMTWTFS' indicator will appear/disappear when the hourly chime is active/inactive.

Video 1: Comprehensive guide on setting time, date, alarm, and hourly chime functions.

5. OPERATING INSTRUCTIONS

5.1 Using the LED Backlight

Press the **LIGHT** button (top left) to activate the 7-color LED backlight. Hold the button for 3 seconds to cycle through the different colors and flashing modes. Release the button to select the desired color or mode.

Video 2: Demonstration of the 7-color LED backlight feature.



Figure 4: The watch's display illuminated with different LED colors.

5.2 Using the Stopwatch

1. From the Time Display Mode, press the **MODE (M)** button *once* to enter Stopwatch Mode. The display will show '0:00:00'.
2. Press the **START (S)** button to begin counting.
3. Press the **START (S)** button again to pause the stopwatch.
4. Press the **RESET (R)** button to reset the stopwatch to '0:00:00'.
5. Press the **MODE (M)** button once to return to the Time Display Mode.

6. MAINTENANCE

6.1 Water Resistance

The Juboos Kid's Digital Watch is designed with 30M (3ATM) water resistance, making it suitable for everyday water exposure such as hand washing, face washing, and light rain. It is important to note the following:

- Do **NOT** press any buttons while the watch is submerged in water.
- Avoid exposure to hot water, steam (e.g., from showers or saunas), or diving, as this can compromise the watch's water resistance.
- After exposure to water, wipe the watch dry with a soft cloth.

Video 3: Demonstration of the watch's 30M water resistance during hand washing.



Figure 5: The watch is suitable for various daily water activities.

6.2 Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or internal components.

7. TROUBLESHOOTING

If you encounter any issues with your Juboos Kid's Digital Watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is blank or dim	Low or dead battery	Replace the lithium metal battery. Consult a professional if unsure.
Time is incorrect or not advancing	Incorrect setting or low battery	Re-set the time following Section 4.1. If the problem persists, replace the battery.
Buttons are unresponsive	Watch is wet or internal malfunction	Ensure the watch is completely dry. If still unresponsive, contact customer support.
Alarm does not sound	Alarm is not activated or set incorrectly	Verify alarm activation (bell icon) and ensure the alarm time is set correctly (Section 4.3).
Water inside the display	Water resistance compromised (e.g., buttons pressed underwater, exposure to hot water)	Immediately stop using the watch. Place it in a dry, warm place or a desiccant. Contact customer support for repair options.

8. WARRANTY & SUPPORT

For information regarding warranty coverage, product support, or replacement parts, please refer to the official Juboos brand store or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims. Visit the [Juboos Store on Amazon](#) for more products and support.

© 2024 Juboos. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6YYLM9Z>

More documents and user manuals: <https://manuals.plus/>