

[Manuals.plus](#) /

› [Bushnell](#) /

› Bushnell Phantom 3 Slope Golf GPS Handheld Instruction Manual

Bushnell Phantom 3

Bushnell Phantom 3 Slope Golf GPS Handheld Instruction Manual

Model: Phantom 3

1. PRODUCT OVERVIEW

The Bushnell Phantom 3 Slope Golf GPS Handheld is a compact and advanced device designed to provide golfers with precise distance measurements and course information. Featuring patented Slope Compensated Distances, a responsive touchscreen, and auto course recognition, it helps golfers make informed decisions on the course. This manual provides essential information for setting up, operating, and maintaining your device.



Image: The Bushnell Phantom 3 Slope Golf GPS Handheld device, showcasing its compact design and clear display.

2. WHAT'S INCLUDED

Your Bushnell Phantom 3 package includes the following items:

- Bushnell Phantom 3 Handheld Golf GPS

- Belt Clip with Carabiner
- USB C Charging Cable
- PlayBetter #Z05 5000mAh Powerbank



Image: The PlayBetter #Z05 5000mAh Powerbank, included in the bundle to ensure your device stays charged.

3. KEY FEATURES

- **Patented Slope Compensated Distances:** Provides pinpoint accuracy by calculating distances adjusted for uphill and downhill shots, helping you master every shot.
- **Intuitive Touchscreen Interface:** Navigate easily through menus and features with a responsive touchscreen.
- **Auto Course & Hole Recognition:** The device automatically recognizes the course and hole you are playing,

ensuring a smooth experience.

- **Auto-Prompt Score Entry:** Keep track of your score effortlessly with automatic prompts.
- **Integrated BITE Magnetic Cart Mount:** Securely attach your Phantom 3 to a golf cart for easy access.
- **GreenView with Moveable Pin Placement:** Visualize the green layout and adjust the pin location for more precise distances.
- **Hazard & Layup Distances:** Get distances to up to 6 hazards or layup points per hole to plan your strategy.
- **38,000+ Preloaded Courses:** Access a vast database of worldwide golf courses without additional downloads.
- **Bushnell Golf App Integration:** Connect to the Bushnell Golf app via Bluetooth for additional benefits, course updates, and data to improve your game.
- **Extended Battery Life:** Enjoy up to 18 hours of golf (approximately 4 rounds) on a single charge.



Image: The Bushnell Phantom 3 display showing a slope compensated distance of 154 yards, with adjusted ranges below.

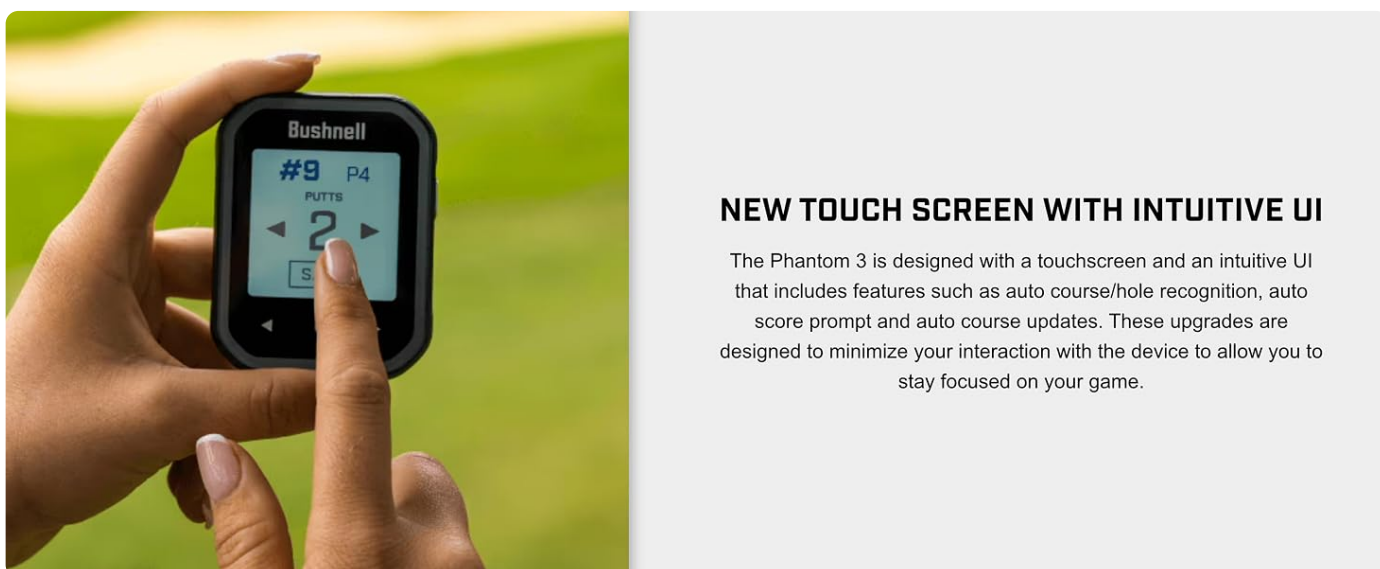


Image: A user interacting with the Bushnell Phantom 3's touchscreen, demonstrating its intuitive user interface for score entry.

INTEGRATED BITE MAGNETIC CART MOUNT

We have improved texturing and provided more surface area to give the Phantom 3 Slope more BITE than ever.



Image: The Bushnell Phantom 3 securely attached to a golf cart frame using its integrated BITE magnetic mount.

4. GETTING STARTED

Charging the Device

Before first use, fully charge your Phantom 3 using the provided USB-C charging cable and PlayBetter power bank. Connect the USB-C end to the device and the USB-A end to the power bank or a compatible USB wall adapter. The battery indicator on the screen will show charging status.

Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) until the Bushnell logo appears.
- **To Power Off:** Press and hold the Power button until the device prompts you to power off, then confirm your selection.

5. OPERATING INSTRUCTIONS

Selecting a Course

Once powered on, the Phantom 3 will automatically search for nearby golf courses. Select your desired course from the list displayed on the touchscreen. The device will then automatically recognize the current hole.

Viewing Distances

The main screen displays large, easy-to-read distances to the front, center, and back of the green. With Slope Compensated Distances, the device provides adjusted yardage based on elevation changes.



CENTER FRONT/BACK DISTANCES

162 154 146



Image: The Bushnell Phantom 3 display clearly showing distances to the front, center, and back of the green, aiding in shot planning.

GreenView and Moveable Pin

Access the GreenView feature to see the shape of the green. Use the touchscreen to move the pin location to match the actual pin position on the course, providing more accurate distances to the flag.



GREENVIEW WITH MOVABLE PIN PLACEMENT

Cycle through the different pin locations and select to get a more precise distance to the flag.

Image: The Bushnell Phantom 3 displaying the GreenView feature, allowing users to cycle through and select different pin locations for precise distances.

Hazard and Layup Distances

The device can display distances to up to 6 hazards or layup points per hole. This information is crucial for strategic course management.



Image: The Bushnell Phantom 3 display showing distances to various hazards on a golf hole.

Shot Distance Calculation

Utilize the shot distance feature to measure how far your last shot traveled. This can be reset easily after each shot.

Score Entry

The auto-prompt score entry feature allows you to quickly input your score after each hole, helping you keep an accurate record of your round.

6. BUSHNELL GOLF APP INTEGRATION

Enhance your golfing experience by connecting your Phantom 3 to the Bushnell Golf app via Bluetooth. The app provides additional product benefits, information, and data to further improve your game. It also allows for easy course updates.

BUSHNELL GOLF APP

The Bushnell Golf app provides additional product benefits, information and data to further help improve your game, as well as access to easily be able to update your GPS device (for 2021 GPS products and beyond).



Image: A smartphone displaying the Bushnell Golf app interface, showing course layouts and data.

7. MAINTENANCE AND CARE

- Keep the device clean by wiping it with a soft, damp cloth.
- Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.
- Store the device in a dry place when not in use.
- Ensure the USB-C port cover is properly sealed to prevent water or dust ingress.

8. TROUBLESHOOTING

- **Device not powering on:** Ensure the device is fully charged. Connect it to the charger and wait a few minutes before attempting to power on again.
- **GPS signal not acquired:** Ensure you are in an open area with a clear view of the sky. It may take a few minutes to acquire a signal, especially when using it for the first time in a new location.
- **Incorrect distances:** Verify that the correct course and hole are selected. If using GreenView, ensure the pin placement is accurately adjusted.
- **Device unresponsive:** Try performing a soft reset by pressing and holding the power button for an extended period (e.g., 10-15 seconds) until the device restarts.
- **Bluetooth connectivity issues:** Ensure Bluetooth is enabled on both your Phantom 3 and your smartphone. Try unpairing and re-pairing the device with the Bushnell Golf app.

9. SPECIFICATIONS

Item Weight	2.75 ounces
Product Dimensions	0.66 x 2.28 x 2.95 inches
Display Size	2.28 Inches
Battery Life	14 Hours (up to 18 hours / 4 rounds)
Connectivity Technology	Bluetooth
Map Type	Worldwide (38,000+ courses)

10. WARRANTY INFORMATION

The Bushnell Phantom 3 Slope Golf GPS Handheld is covered by a **Bushnell 1 Year Manufacturer Warranty**. Please refer to the official Bushnell website or your product packaging for full warranty terms and conditions.

11. PRODUCT VIDEO

Watch this official product video for an overview of the Bushnell Phantom 3 GPS Rangefinder's features and benefits.

Your browser does not support the video tag.

Video: An official overview of the Bushnell Phantom 3 GPS Rangefinder, highlighting its key functionalities and design.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6Z87ZKL>

More documents and user manuals: <https://manuals.plus/>