

[Manuals.plus](#) /

› [Vicco](#) /

› Vicco Elmo Children's Wardrobe with 2 Drawers, Sonoma, 100 x 200 cm - Instruction Manual

Vicco 22087

Vicco Elmo Children's Wardrobe with 2 Drawers, Sonoma, 100 x 200 cm - Instruction Manual

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before assembly and use. Retain this manual for future reference.

- **Tip-Over Hazard:** If the furniture tips over, it can lead to serious, even fatal injuries. To prevent this, it is mandatory to anchor the wardrobe to the wall. Use appropriate fasteners suitable for your specific wall type.
- **Fastener Security:** All fasteners must be sufficiently tightened and checked regularly to ensure stability.
- **Product Condition:** Do not use the item if it is defective or damaged. Contact the manufacturer or supplier for replacement parts.
- **Supervision:** Do not leave children unattended near the furniture, especially during assembly or if not properly secured.
- **Heat Sources:** Avoid placing the wardrobe near open flames or intense heat sources such as electric heaters or gas ovens.

2. PRODUCT OVERVIEW

The Vicco Elmo Children's Wardrobe is designed for organizing children's rooms, offering storage for clothes, toys, and books. It features a hanging rail, multiple shelves, and two spacious drawers.



Image 2.1: Front view of the Vicco Elmo Children's Wardrobe, showcasing its Sonoma finish and functional design.



Image 2.2: The Elmo wardrobe integrated into a child's bedroom, demonstrating its aesthetic appeal and how it complements other furniture.

3. SETUP AND ASSEMBLY

The Vicco Elmo Children's Wardrobe requires assembly. All necessary assembly instructions and hardware are included in the packaging. Please follow the step-by-step guide provided with your product for detailed instructions.

3.1. Before You Begin

- **Unpack:** Carefully unpack all components and check against the parts list in the included assembly manual.
- **Tools:** Ensure you have the necessary tools (e.g., screwdriver, hammer) as specified in the assembly manual.
- **Space:** Assemble the wardrobe in a spacious, clean area to prevent damage to components.

3.2. Assembly Steps (General Guidance)

1. Assemble the main frame of the wardrobe according to the provided diagrams.

2. Install the back panel, ensuring it is securely fitted.
3. Attach the shelves and the hanging rail.
4. Assemble the two drawers and insert them into their designated slots.
5. **Wall Anchoring:** Securely attach the wardrobe to the wall using the provided anti-tip hardware. This step is crucial for safety.

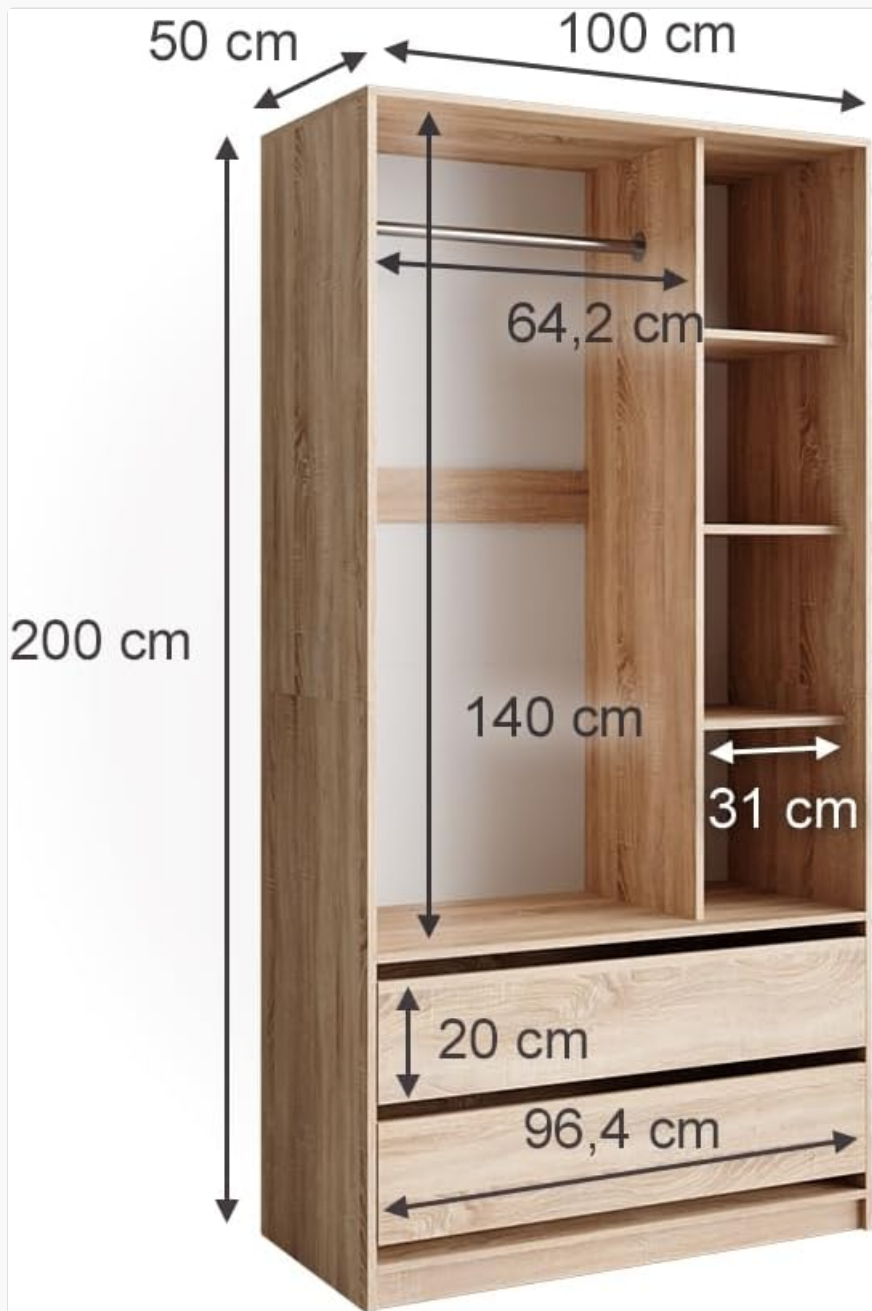


Image 3.1: Detailed dimensions of the Elmo wardrobe, including height, width, depth, and internal compartment measurements, essential for planning placement and assembly.

4. OPERATING INSTRUCTIONS

The Elmo Children's Wardrobe is designed for practical storage in a child's room.

- **Hanging Section:** Use the integrated hanging rail for clothes that need to be hung, such as shirts, dresses, or jackets.
- **Shelves:** Utilize the multiple shelves for folded clothing, books, or storage bins for toys.
- **Drawers:** The two bottom drawers provide enclosed storage for smaller items, accessories, or additional clothing,

helping to keep the room tidy.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 10 kg per shelf/drawer to ensure stability and longevity of the furniture.



Image 4.1: A close-up view of the wardrobe's interior, highlighting the hanging rail and adjustable shelves for versatile storage.



Image 4.2: The two bottom drawers shown open, illustrating their depth and capacity for storing various items.

5. MAINTENANCE AND CARE

Proper care will help maintain the appearance and longevity of your wardrobe.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the melamine coating.
- **Spills:** Clean up spills immediately to prevent staining or damage to the material.
- **Fastener Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary.
- **Avoid Overloading:** Do not overload shelves or drawers beyond their recommended weight capacity.

6. TROUBLESHOOTING

If you encounter any issues with your Vicco Elmo Children's Wardrobe, refer to the following common solutions:

- **Wobbly Wardrobe:** Ensure all assembly screws are fully tightened. Verify that the wardrobe is placed on a level surface. If wall-mounted, check the wall anchors for security.
- **Drawers Sticking:** Check that the drawer runners are correctly installed and free from obstructions. Ensure the drawer contents are not overflowing or unevenly distributed.
- **Missing Parts:** If any parts were missing upon delivery, refer to the assembly manual's parts list and contact the manufacturer or supplier for replacements.
- **Damaged Components:** Do not attempt to repair severely damaged components. Contact the manufacturer or supplier for replacement parts.

7. SPECIFICATIONS

Feature	Specification
Brand	Vicco
Model Name	Elmo Children's Wardrobe
Model Number	22087
Color	Sonoma
Dimensions (L x H x D)	100 x 200 x 50 cm (39.4 x 78.7 x 19.7 inches)
Material	Engineered Wood (16mm Particle Board with Melamine Coating)
Net Weight	66 kg (145.5 lbs)
Gross Weight (with packaging)	74 kg (163.1 lbs)
Maximum Weight Capacity (per shelf/drawer)	10 kg (22 lbs)
Special Feature	Removable Shelf

8. WARRANTY INFORMATION

Specific warranty details for the Vicco Elmo Children's Wardrobe are not provided in the product information. Please refer to your purchase documentation or contact the retailer/manufacturer directly for warranty terms and conditions.

9. CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other product-related inquiries, please contact the seller or manufacturer. Contact information can typically be found on your purchase receipt or the product packaging.

Manufacturer: ok-living

Spare Parts: Information regarding the availability of spare parts is not provided. Please contact the manufacturer or supplier for spare part inquiries.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D6ZRVNJF>

More documents and user manuals: <https://manuals.plus/>