



Manuals.plus /

- › Kenko /
- › Kenko Digital Camera KC-ZM08 User Manual

Kenko KC-ZM08

Kenko Digital Camera KC-ZM08 User Manual

Model: KC-ZM08

INTRODUCTION

Thank you for purchasing the Kenko Digital Camera KC-ZM08. This compact digital camera is designed for ease of use, allowing you to capture everyday moments with its 5x optical zoom, touch panel operation, and various convenient features. Please read this manual thoroughly before using the camera to ensure proper operation and to maximize your enjoyment of its capabilities. Keep this manual in a safe place for future reference.

PACKAGE CONTENTS



セット内容


① デジタルカメラ ケンコー KC-ZM08

【付属品】

カメラ本体、リチウムイオン充電機、ストラップ
USBケーブル (Type-A to Type-C)、取扱説明書



② microSD32GB

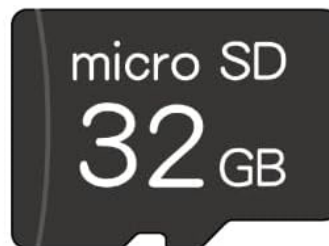

This package includes the Kenko Digital Camera KC-ZM08 and a 32GB microSD card, providing everything you need to start capturing photos and videos.

- Kenko Compact Digital Camera KC-ZM08
- Rechargeable Lithium-ion Battery
- Wrist Strap
- USB Cable (Type-A to Type-C)
- Instruction Manual
- microSD Card (32GB)

KEY FEATURES

5x Optical Zoom

光学5倍ズーム



広角28mmから望遠142mmをカバーする
光学5倍ズームを採用。

The camera features a 5x optical zoom lens, covering a versatile range from wide-angle 28mm to telephoto 142mm (35mm equivalent). This allows for capturing a wide variety of scenes, from expansive landscapes to distant subjects.

[Intuitive Touch Panel Operation](#)

タッチパネル



タッチパネル式液晶モニターでモードや設定をサクサク変えることができます。

Easily change modes and settings with the responsive touch panel LCD monitor. This intuitive interface simplifies camera operation, making it quick and effortless to adjust your shooting preferences.

Convenient Rear Camera for Selfies

リアカメラ



※写真はイメージです

ボタン1つでリアカメラに切り替えて自撮りできます。モニターを見ながら写真も動画も撮れます。

Switch to the rear camera with a single button press for easy selfies. You can capture both photos and videos while viewing yourself on the monitor, ensuring you get the perfect shot.

Shortest Shooting Distance: Approx. 10cm

最短撮影距離 約 10cm



広角時に最短で約10cmまで被写体に寄って接写できます。(フロントレンズの場合)

When shooting at wide-angle, you can get as close as approximately 10cm to your subject, allowing for detailed close-up photography (with the front lens).

Built-in LED Flash and Constant Light

内蔵LED



フラッシュが内蔵されているだけでなく、
定常光LEDライトも使用できるので
動画撮影に便利です。

The camera not only has a built-in flash for still images but also features a constant LED light, which is convenient for video recording in low-light conditions.

Slow Motion Video Recording

スローモーション撮影



※写真はイメージです

手軽にスローモーション動画も撮れます。

Easily capture slow-motion videos to add a creative touch to your recordings.

Time-Lapse Shooting

The camera supports time-lapse shooting, automatically capturing images at set intervals to create dynamic time-lapse videos.

Self-Timer Function

Utilize the self-timer for group photos with friends and family, or for convenient self-portraits.

Webcam Capability

Connect the camera to your computer via USB to use it as a webcam for video calls and live streaming.

Digital Image Stabilization (for Video)

Reduce camera shake during video recording with the built-in digital image stabilization feature, ensuring smoother footage.

SETUP GUIDE

1. **Charge the Battery:** Insert the rechargeable lithium-ion battery into the camera. Connect the camera to a USB power source using the provided USB Type-A to Type-C cable. The charging indicator will show the charging status. Ensure

the battery is fully charged before first use.

2. **Insert microSD Card:** Open the card slot cover and gently insert the provided 32GB microSD card until it clicks into place. Ensure the card is inserted in the correct orientation.
3. **Attach Wrist Strap:** Securely attach the wrist strap to the camera to prevent accidental drops.
4. **Power On:** Press and hold the power button to turn on the camera.
5. **Initial Settings:** Follow the on-screen prompts to set the date, time, and language.

OPERATING INSTRUCTIONS

Taking Photos

1. **Select Photo Mode:** Press the 'MODE' button to select the photo shooting mode.
2. **Frame Your Shot:** Use the LCD screen to compose your image.
3. **Focus:** Gently press the shutter button halfway down to focus. The focus frame will turn green when focus is achieved.
4. **Capture:** Press the shutter button all the way down to take the picture.

Recording Videos

1. **Select Video Mode:** Press the 'MODE' button to select the video recording mode.
2. **Start Recording:** Press the shutter button to start recording. A red indicator will appear on the screen.
3. **Stop Recording:** Press the shutter button again to stop recording.

Using the Touch Panel

Tap icons on the LCD screen to navigate menus, change settings like image size, ISO, exposure, and picture quality (Super Fine, Fine, Normal). Swipe to browse through captured media in playback mode.

Switching to Rear Camera

Locate the dedicated button for switching between the front and rear cameras. Press this button to activate the rear camera for convenient selfies or vlogging.

Playback Mode

Press the playback button to view your captured photos and videos. Use the navigation buttons or touch screen to scroll through your media.

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses to gently wipe away dust or smudges. Do not use harsh chemicals.
- **Cleaning the Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and then wipe dry.
- **Battery Care:** Store the battery in a cool, dry place when not in use. Avoid fully discharging the battery for extended periods.
- **Storage:** When storing the camera for a long time, remove the battery and microSD card. Store the camera in a dry, well-ventilated area away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Battery may be depleted. Charge the battery fully. Ensure the battery is inserted correctly.
Cannot take photos/record videos.	microSD card may be full or not inserted correctly. Check card status or replace. Ensure sufficient battery charge.
Images are blurry.	Ensure the lens is clean. Check focus by pressing the shutter button halfway. Hold the camera steady during shooting.
Touch screen is unresponsive.	Restart the camera. Ensure the screen is clean and dry.

SPECIFICATIONS

Feature	Detail
Model Name	KC-ZM08
Brand	Kenko
Optical Zoom	5x
Digital Zoom	2x
Photo Sensor Technology	CMOS
Effective Still Resolution	56 MP
Video Capture Resolution	1080p
Minimum Focal Length	28 mm
Maximum Focal Length	142 mm
Image Stabilization	Digital (for video)
Compatible File Formats	JPEG, MP4
Display Size	2.8 inches
Flash Type	Built-in (Auto, Always On)
Connectivity	USB
Battery Type	Lithium-ion
Product Weight	148 grams (excluding accessories, battery)
Dimensions	Approx. 100 x 62 x 32 mm

WARRANTY AND SUPPORT

The Kenko Digital Camera KC-ZM08 comes with a 1-year manufacturer's warranty. For technical support, troubleshooting assistance, or warranty claims, please refer to the contact information provided in the separate warranty card or visit the official Kenko website.

Please retain your proof of purchase for warranty purposes.

PRODUCT VIDEOS

Kenko Digital Camera KC-ZM08 Overview

Your browser does not support the video tag.

This video provides a general overview of the Kenko Digital Camera KC-ZM08, highlighting its compact design and ease of use for everyday photography and casual walks.

Digital Camera KC-ZM08 Features

Your browser does not support the video tag.

A short video showcasing various features of the KC-ZM08 digital camera.