

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BEYOND HEAT](#) /
- › [BEYOND HEAT Electric Garage Heater \(Model UHQTV5M\) - Instruction Manual](#)

BEYOND HEAT UHQTV5M

BEYOND HEAT Electric Garage Heater (Model UHQTV5M) - Instruction Manual

Efficient and Safe Heating for Garages, Workshops, and Patios

1. INTRODUCTION

Thank you for purchasing the BEYOND HEAT Electric Garage Heater. This manual provides essential information for the safe and efficient operation of your new heater. Please read all instructions carefully before installation and use, and retain this manual for future reference.

2. PRODUCT FEATURES

- **Effective Radiant Heat:** Warms people and objects directly for efficient heating.
- **Dual Heat Settings:** Offers 750W and 1500W power options.
- **Adjustable Halogen Light:** Provides additional illumination with angle adjustment, operable independently of heat.
- **90° Adjustable Tilt:** Allows precise direction of heat.
- **Durable Construction:** Features a robust metal housing and metal safety grille.
- **Enhanced Safety:** Equipped with overheat protection, a 3-prong grounded safety plug, and an improved fray-resistant pull string.
- **Versatile Mounting:** Designed for ceiling mount installation in various indoor spaces.

3. PACKAGE CONTENTS

Please ensure all items are present before installation:

- BEYOND HEAT Electric Garage Heater (Model UHQTV5M)
- Mounting Arm/Bracket
- Remote Control (AAA batteries not included)
- Installation Hardware (bolts, nuts, washers)
- Instruction Manual

4. SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, read and understand all instructions before using this heater.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater, or return to authorized service facility for examination and/or repair.
- Do not use outdoors. This heater is intended for indoor use only.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug into a grounded outlet.
- The heater includes an overheat protection system that automatically shuts off the heater if it reaches unsafe temperatures. If this occurs, unplug the heater and inspect for any obstructions.

5. SETUP & INSTALLATION

The BEYOND HEAT Electric Garage Heater is designed for ceiling mounting. Ensure the mounting surface is sturdy and can support the weight of the heater.

5.1 Mounting Bracket Installation

1. Identify a suitable location on your ceiling or overhead structure. Ensure there is adequate clearance from combustible materials (at least 3 feet from the front, sides, and rear).
2. Position the mounting bracket against the chosen surface. Mark the drill points for the screws.
3. Drill pilot holes if necessary and securely fasten the mounting bracket using appropriate screws and anchors for your surface type.

5.2 Heater Attachment

1. Remove the bolts and nuts from the side arms of the heater.
2. Align the heater's side arms with the mounting bracket. Push the heater up, compressing the spring-loaded arms, and snap it into place on the bracket.
3. Re-insert the bolts and nuts on each side and tighten them to secure the heater to the bracket.
4. Adjust the angle of the heater by loosening the side bolts, tilting the heater to the desired 90° angle, and then re-tightening the bolts.



Figure 1: Heater dimensions and 90-degree tilt adjustment for versatile heating.

This image illustrates the heater's dimensions (24 inches wide, 12.2 inches high, 3.3 inches deep) and its ability to tilt up to 90 degrees, allowing for flexible heat direction.

5.3 Electrical Connection

Plug the heater's 3-prong grounded safety plug directly into a 120V grounded wall outlet. Do not use extension cords.



Figure 2: BEYOND HEAT Electric Garage Heater mounted and ready for use.

This image shows the heater installed on an overhead structure, highlighting its sleek black and chrome design and the glowing quartz radiant elements when active.

Your browser does not support the video tag.

Video 1: A user demonstrates the quick heating and easy assembly of the BEYOND HEAT Electric Garage Heater, noting its quiet operation and space-saving design.

6. OPERATING INSTRUCTIONS

The heater can be operated using the pull string switch or the included remote control.

6.1 Power On/Off and Heat Settings

The heater offers two heat settings: 750W (low) and 1500W (high).

- **Pull String:** Pull the string once for 750W (one quartz tube active), pull again for 1500W (both quartz tubes active), pull a third time to activate the halogen light along with 1500W heat, and pull a fourth time to turn the heater off.
- **Remote Control:** Use the 'ON/OFF' button to power the unit. Select 'Low Heat' for 750W or 'High Heat' for 1500W.



Figure 3: Detailed view of the heater's controls, including the pull cord for power settings and the halogen lamp.

This diagram labels the mounting arm, arm release button, halogen lamp, power setting indicator (OFF, 750W, 1500W, 750W with light, 1500W with light), and pull cord for selecting power settings.

6.2 Halogen Light Operation

The integrated halogen light can be operated independently or with the heat function.

- **Pull String:** The halogen light activates on the third pull (1500W with light) and remains on until the heater is turned off.
- **Remote Control:** Use the 'Light' button on the remote to toggle the halogen light on or off.

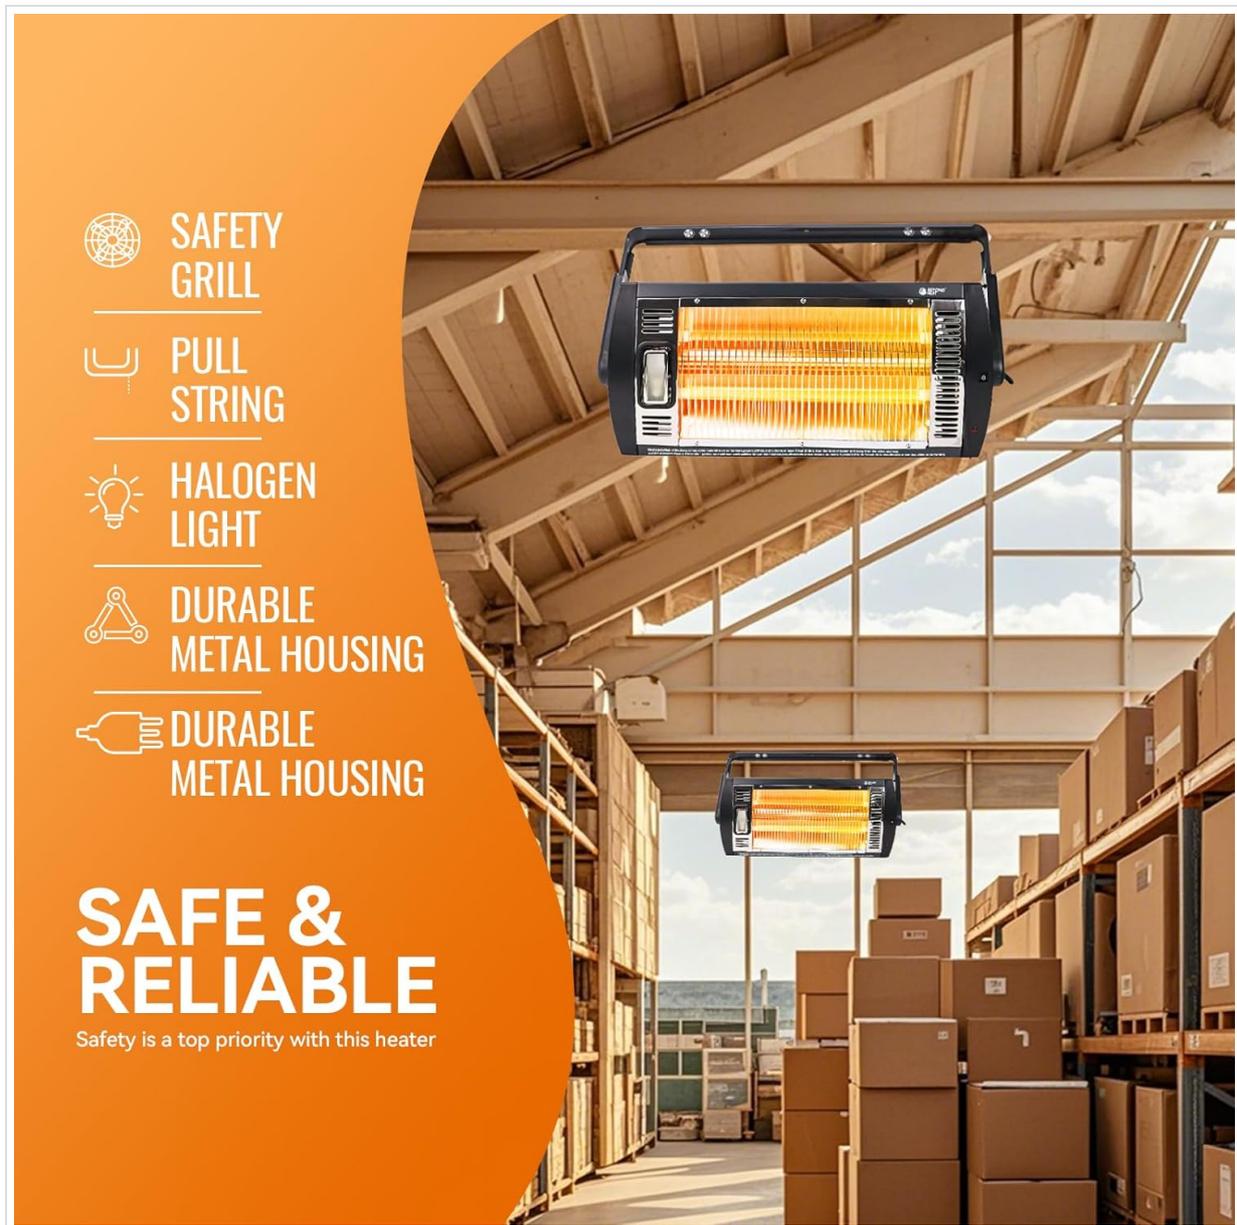


Figure 4: The heater's safety grille, pull string, halogen light, and durable metal housing are shown, emphasizing its safe and reliable design.

This image highlights the safety features of the heater, including the safety grille, pull string, halogen light, and durable metal housing, ensuring safe and reliable operation.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the heater in a cool, dry place.
- **Inspection:** Periodically inspect the power cord and plug for any signs of damage. If damaged, do not use the heater and contact customer support.

8. TROUBLESHOOTING

- **Heater does not turn on:** Ensure the heater is securely plugged into a grounded 120V outlet. Check if the overheat protection system has activated (unplug, let cool, and inspect for obstructions).
- **Insufficient heat:** Verify the heater is set to the desired heat setting (750W or 1500W). Ensure the

room size is appropriate for the heater's output.

- **Remote control not working:** Check and replace the AAA batteries in the remote control. Ensure there are no obstructions between the remote and the heater's infrared sensor.

9. SPECIFICATIONS

Specification	Detail
Brand	BEYOND HEAT
Model Number	UHQTV5M
Power Output	750W / 1500W
Voltage	120V
Heat Type	Dual Quartz Radiant
Mounting Type	Ceiling Mount
Dimensions (DxWxH)	24" x 3.3" x 12.2"
Item Weight	7.98 pounds
Special Features	Overheat Protection, Halogen Light, 90° Tilt
Certifications	ETL Approved (US)

10. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the product packaging or contact BEYOND HEAT customer service directly. Keep your purchase receipt for any warranty claims.