

FREESEA FS-32

FREESEA Automatic Fish Feeder Instruction Manual

Model: **FS-32** | Brand: **FREESEA**

PRODUCT OVERVIEW

The FREESEA Automatic Fish Feeder FS-32 is designed to provide convenient and reliable feeding for your aquarium fish, including bettas and turtles. It supports both manual and automatic feeding modes, ensuring your aquatic pets are fed even when you are away.

- **Manual and Automatic Modes:** Offers flexible feeding schedules with options for 12, 24, and 48-hour automatic feeds, plus instant manual feeding.
- **Adjustable Feeding Opening:** Allows precise control over the amount of food dispensed, suitable for various fish sizes and types. The feeder rotates 360° for consistent distribution.
- **Versatile Food Compatibility:** Designed to work with different types of fish food, including flakes, granules, powder, and strips.
- **Long-Lasting Power Supply:** Features a high-capacity rechargeable battery with Type-C charging, providing up to 45 days of use on a single charge.



Figure 1: FREESEA Automatic Fish Feeder FS-32, showing the main unit, charging cable, and accessories.

SETUP INSTRUCTIONS

1. Unpacking and Assembly

Carefully remove all components from the packaging. The package includes the main feeder unit, a USB Type-C charging cable, a fish feeding ring, and mounting accessories.



Figure 2: Components of the FS-32 feeder, including the main unit, charging cable, and mounting options.

2. Charging the Feeder

Before first use, ensure the feeder is fully charged. Connect the provided USB Type-C cable to the charging port on the feeder and plug the other end into a compatible USB power adapter (not included).



Figure 3: Connecting the USB Type-C charging cable to the feeder.

A full charge can last up to 45 days, eliminating the need for frequent battery replacements.

Your browser does not support the video tag.

Video 1: Demonstration of the rechargeable design and charging process for the fish feeder.

3. Filling the Food Container

The feeder has a 120ml capacity food drum. To fill, gently push open the loading sliding cover on the top of the feeder. Pour your desired fish food (flakes, granules, powder, or strips) into the drum. Close the cover securely after filling.

ADJUSTABLE FEEDING SLIDER



Figure 4: Illustrates the 120ml capacity and various food types compatible with the feeder.

4. Mounting the Feeder

The FREESEA feeder offers two installation methods:

- **Clip-On Glass:** Use the adjustable clamp to secure the feeder to the edge of your aquarium glass. This method is suitable for glass thickness less than 1 inch (24mm).
- **Stick-On Aquarium:** For tanks without a suitable edge, use the provided adhesive pad to attach the feeder directly to the aquarium lid or side. Ensure the surface is clean and dry before applying.

Excellent Rechargeable Battery

No Need for Electrical Outlets



Figure 5: Shows both clip-on and stick-on installation options.

OPERATING INSTRUCTIONS

1. Adjusting Feeding Amount

The feeder features an adjustable feeding slider. Slide this mechanism to control the size of the opening from which food is dispensed. This allows you to customize the portion size based on the number and type of fish in your aquarium.

ADJUSTABLE FEEDING SLIDER



Figure 6: The adjustable slider on the food drum to control dispense quantity.

2. Setting Feeding Modes

The feeder offers two primary feeding modes:

- **Manual Mode:** Press the manual mode button (hand icon) once to dispense food immediately. This is useful for supplemental feeding or observing your fish.
- **Automatic Mode:** Long press the manual mode button to cycle through automatic feeding intervals: 12 hours, 24 hours, or 48 hours. An indicator light will illuminate next to the selected interval (12, 24, or 48) to confirm your setting. The feeder will automatically dispense food at the set interval.

TWO FEEDING MODES

Choose the right mode according to feeding needs



Manual:

Press the  button.
Feed your favorite fish anytime!

Automatic:

12H: Feed every 12 hours

24H: Feed every 24 hours

48H: Feed every 48 hours



Figure 7: Control panel showing manual and automatic feeding options.

Your browser does not support the video tag.

Video 2: Step-by-step guide on how to use the feeder, including setting modes and filling.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your FREESEA Automatic Fish Feeder.

- **Refilling:** Monitor the food level in the transparent drum and refill as needed. The 120ml capacity typically lasts for an extended period depending on feeding frequency and amount.
- **Cleaning the Dispenser:** Periodically check the food dispensing opening for any clogs or residue, especially if using flake food which can sometimes stick. Gently clean the opening to ensure smooth operation.
- **Battery Care:** The feeder's high-capacity battery provides up to 45 days of use. Recharge the unit using the provided

Type-C cable when the battery indicator suggests low power.

TROUBLESHOOTING

- Feeder Not Dispensing Food:**
 - Check if the food drum is empty and refill if necessary.
 - Ensure the dispensing opening is not clogged. Clean any stuck food particles.
 - Verify the battery level. Recharge the feeder if the battery is low.
- Overfeeding:**
 - Adjust the feeding slider to a smaller opening to reduce the amount of food dispensed per rotation.
 - For very small tanks or fish, you may need to further restrict the opening (e.g., by applying a small piece of tape over part of the opening) to prevent overfeeding.
- Automatic Feeding Not Working:**
 - Confirm that an automatic feeding interval (12H, 24H, or 48H) is selected and its indicator light is on.
 - Ensure the feeder is fully charged.

SPECIFICATIONS

Feature	Detail
Model Name	FS-32
Brand	FREESEA
Item Weight	7.8 ounces
Product Dimensions	3.55 x 1.85 x 5.12 inches
Material	Plastic
Color	Black Green
Power Source	1 Lithium Ion battery (included), Type-C rechargeable
Food Drum Capacity	120ml
Battery Life	Up to 45 days on a single charge

WARRANTY AND SUPPORT

The FREESEA Automatic Fish Feeder FS-32 comes with a **12-month warranty service** from the date of purchase.

If you have any questions, concerns, or require assistance with your automatic fish feeder, please do not hesitate to contact FREESEA customer support. We are committed to providing satisfactory answers and support within 24 hours.

For support, please refer to the contact information provided in your product packaging or visit the official FREESEA website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question