

Hoffen BTP

Hoffen BTP Adjustable Aluminum Boat Table Pedestal Leg Instruction Manual

Model: BTP

1. PRODUCT OVERVIEW

The Hoffen BTP Adjustable Aluminum Boat Table Pedestal Leg is designed for versatile use in marine, RV, pontoon, yacht, and other recreational vehicle applications. Constructed from high-quality aluminum alloy with a surface oxidation polishing treatment, this pedestal offers durability and a lightweight design. It features an adjustable height mechanism and a removable design for convenience.

Key features include:

- **Premium Aluminum Alloy Material:** Ensures durability and a load-bearing capacity of up to 60 lbs for the table top.
- **Stable Base:** Features an aluminum alloy connection part and a nut design for enhanced stability and secure table placement.
- **Removable Design:** Allows for easy detachment of the table leg or tabletop.
- **Adjustable Height:** Vertically adjustable from a minimum of 21-1/4 inches to a maximum of 27-3/4 inches.



Image 1.1: Hoffen BTP Adjustable Aluminum Boat Table Pedestal Leg in retracted and extended positions.

2. SAFETY INFORMATION

Please read and understand all safety instructions before installation and use.

- **Weight Limit:** Do not exceed the maximum recommended weight of 150 lbs on the table supported by this pedestal. Exceeding this limit may cause instability or damage.
- **Stability Check:** Always ensure the table is stable and securely fastened before use. Regularly check all connections for tightness.
- **Quick-Release Mechanism:** Use caution when operating the quick-release button for detachable tabletops to prevent pinching fingers or accidental release.
- **Installation:** Ensure the mounting surface is strong enough to support the pedestal and any attached tabletop and load. Use appropriate fasteners for your specific mounting material.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Adjustable Table Pedestal Leg (1 unit)

- Filler Cap (1 unit)
- Assembly Hardware (Screws for mounting base and top plate)



Image 3.1: Included components for the Hoffen BTP table pedestal leg.

4. INSTALLATION INSTRUCTIONS

Follow these steps for proper installation of the Hoffen BTP table pedestal leg:

1. **Step 1: Prepare Mounting Surface.** Select a suitable, flat, and sturdy surface for mounting the base plate. Ensure there is adequate clearance for the table and leg.
2. **Step 2: Mount the Base Plate.** Position the base plate on the desired floor location. Use the provided assembly hardware (screws) to securely fasten the base plate to the floor. Ensure it is flush and tight.
3. **Step 3: Insert the Pedestal Leg.** Align the bottom of the pedestal leg with the mounted base plate. Insert the leg into the base, ensuring it seats fully. Rotate the leg to engage the locking mechanism if present, or press the black button on the base to adjust the direction and secure the leg.
4. **Step 4: Attach the Tabletop Plate.** Secure the top plate of the pedestal to the underside of your table. Use appropriate screws for your tabletop material, ensuring they are not too long to penetrate the table surface.
5. **Step 5: Connect Tabletop.** Place the tabletop onto the pedestal leg, aligning the top plate with the leg's receiver. Ensure it is securely seated.



Image 4.1: Visual guide for the installation steps.

5. OPERATION

5.1 Height Adjustment

The Hoffen BTP pedestal leg offers 6 adjustable height positions, ranging from 21-1/4 inches (minimum) to 27-3/4 inches (maximum).

- To adjust the height, locate the black knob on the side of the pedestal leg.
- Rotate the black knob to loosen the locking mechanism.
- Carefully extend or retract the inner tube of the pedestal to the desired height.
- Once the desired height is reached, rotate the black knob in the opposite direction to tighten and secure the leg in place. Ensure it is firmly locked before applying weight to the table.

DIMENSIONS

Of Different Adjustments

**6 ADJUSTABLE HEIGHT
LARGER ADJUSTABLE RANGE
(21-1/4" - 27-3/4")**

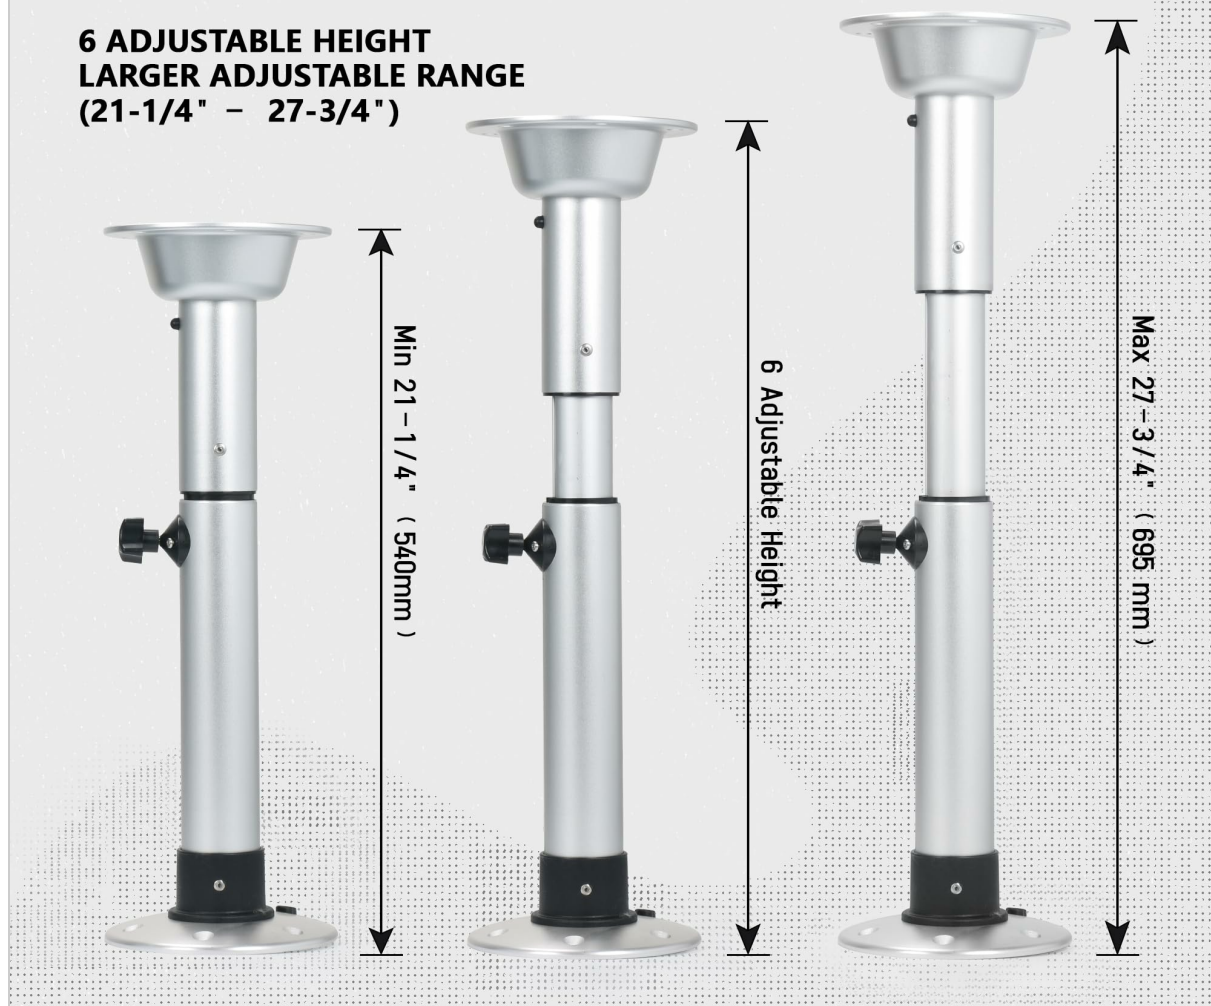


Image 5.1: Different adjustable heights of the pedestal leg.

5.2 Removable Design

The pedestal leg is designed for easy removal, allowing for flexible space management.

- To remove the table leg from the base, ensure the bottom base is tightened to stabilize it.
- Press the button located on the bottom base and rotate the leg to detach it.
- To remove the tabletop from the leg, locate any quick-release buttons or locking mechanisms on the top plate and disengage them.

Image 5.2: Illustration of the removable design.

6. MAINTENANCE

To ensure the longevity and proper function of your Hoffen BTP table pedestal leg, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the pedestal leg with a dry cloth to remove dust and debris. Avoid using abrasive cleaners or solvents that could damage the surface finish.

- **Inspection:** Periodically inspect all components, including the base plate, leg, and top plate, for any signs of wear, damage, or loose connections.
- **Lubrication:** If the height adjustment mechanism becomes stiff, a small amount of silicone-based lubricant can be applied to the inner sliding surfaces. Avoid oil-based lubricants that may attract dirt.
- **Storage:** If the leg is removed for storage, keep all components in a dry, protected environment to prevent corrosion or damage.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your table pedestal leg.

7.1 Table Wobbles

- **Loose Connections:** Check all screws fastening the base plate to the floor and the top plate to the table. Tighten any loose fasteners.
- **Pedestal Not Locked:** Ensure the height adjustment knob is fully tightened and the leg is securely locked at the desired height.
- **Uneven Mounting Surface:** Verify that the floor surface where the base is mounted is flat and level. Shims may be required for uneven surfaces.
- **Overload:** Ensure the weight on the table does not exceed the recommended 60 lbs for the table top or 150 lbs for the entire assembly.

7.2 Difficulty Adjusting Height

- **Knob Not Fully Loosened:** Ensure the black adjustment knob is rotated sufficiently to allow the inner tube to slide freely.
- **Debris:** Inspect the sliding mechanism for any dirt or debris that might be obstructing movement. Clean as necessary.
- **Lack of Lubrication:** Apply a small amount of silicone-based lubricant to the sliding surfaces if movement is stiff.

8. SPECIFICATIONS

Feature	Specification
Brand	Hoffen
Model Name	BTP (Boat Table Leg)
Material Type	Aluminum Alloy
Color	Silver
Product Dimensions (D x W x H)	7"D x 7"W x 28"H (Max Extended)
Adjustable Height Range	21-1/4" to 27-3/4"
Number of Height Positions	6
Maximum Weight Recommendation	150 Pounds (for entire assembly)
Item Weight	5 Pounds
Product Care Instructions	Wipe with Dry Cloth

Included Components

Filler Cap, Assembly Hardware

9. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the product packaging or contact Hoffen customer service directly. Contact details are typically available on the manufacturer's official website or through your point of purchase.

Related Documents - BTP

 HOFFEN URZĄDZENIE DO WATY CUKROWEJ COTTON CANDY MAKER INSTRUKCJA / INSTRUCTION MANUAL	HOFFEN Cotton Candy Maker CCM-2216 Instrukcja Obsługi Instrukcja obsługi dla urządzenia HOFFEN Cotton Candy Maker (Model CCM-2216). Zawiera informacje o przeznaczeniu, specyfikacjach, zasadach bezpieczeństwa, użytkowaniu, czyszczeniu, konserwacji i gwarancji.
 HOFFEN NEBULIZATOR KOMPRESOROWY / COMPRESSOR NEBULIZER / A500LW02 INSTRUKCJA OBSŁUGI / INSTRUCTION MANUAL	Instrukcja Obsługi Nebulizatora Kompresorowego HOFFEN A500LW02 Szczegółowa instrukcja obsługi dla nebulizatora kompresorowego HOFFEN A500LW02. Zawiera informacje o specyfikacji technicznej, bezpiecznym użytkowaniu, czyszczeniu, konserwacji, przechowywaniu i utylizacji. Przeznaczony do użytku domowego w leczeniu dróg oddechowych.
 HOFFEN CZAJNIK ELEKTRYCZNY ZE STALI NIERDZEWNEJ / ELECTRIC KETTLE INSTRUKCJA / INSTRUCTION MANUAL	Hoffen Electric Kettle K-9280 Instruction Manual This document provides the instruction manual for the Hoffen Electric Kettle, Model K-9280. It covers intended use, technical specifications, safety precautions, operation, cleaning, maintenance, repair, storage, disposal, CE declaration, and warranty information.
 Hoffen FRYTOWNICA BEZTŁUSZCZOWA MODEL : AF-2501D INSTRUKCJA OBSŁUGI Symbol ostrzeżenia: należy przestrzegać instrukcji obsługi i zasad bezpieczeństwa. Symbol ostrzeżenia: należy przestrzegać instrukcji obsługi i zasad bezpieczeństwa.	Hoffen AF-2501D Frytownica Beztłuszczowa - Instrukcja Obsługi Kompletna instrukcja obsługi frytownicy beztłuszczowej Hoffen model AF-2501D. Dowiedz się o bezpiecznym użytkowaniu, specyfikacjach technicznych, czyszczeniu i rozwiązywaniu problemów.

	Hoffen SC-7099-17 Slow Cooker: User Manual and Instructions Comprehensive user manual for the Hoffen SC-7099-17 Slow Cooker, covering intended use, technical specifications, safety instructions, operation, cleaning, troubleshooting, and warranty information.
	HOFFEN HB-2155 Hand Blender Set: User Manual and Safety Instructions Comprehensive user manual for the HOFFEN HB-2155 Hand Blender Set, covering intended use, technical specifications, safety instructions, operation, cleaning, maintenance, and warranty information.


Documents - Hoffen – BTP



[WiMiUS K5 Projector User Manual](#)

Comprehensive user manual for the WiMiUS K5 projector, covering setup, operation, features, and troubleshooting. Learn how to connect devices, adjust settings, and optimize your viewing experience.

lang:en score:17 filesize: 3.52 M page_count: 113 document date: 2023-07-07

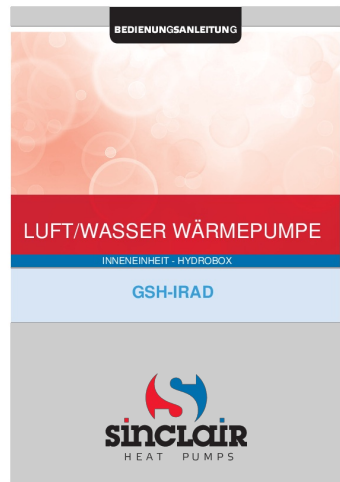

[\[pdf\] User Manual](#)

BEDIENUNGSANLEITUNG GSH IRAD Sinclair Solutions sinclair um gsh irad de solutions files xx deutsch user manuals heat pump s therm 3 generace |||

BEDIENUNGSANLEITUNG LUFT/WASSER WRMEPUMPE INNENEINHEIT - HYDROBOX GSH-IRAD H E AT PU M P S bersetz ... il mit Rohren Ausgangsteil Umlaufpumpe Durchflussmesser Drucksensor Steuerung Niederspannungsquelle **BTP**-Kommunikation Sicherungsautomat Spezifikation Bedientafel Teilenummer I0002090001 I0002090002...

lang:de score:14 filesize: 1.8 M page_count: 24 document date: 2016-12-15