

[Manuals.plus](#) /

› [singlehomie](#) /

› SingleHomie 30 cm 2-Zone Induction Cooktop User Manual (Model SI235G35)

singlehomie SI235G35

SingleHomie 30 cm 2-Zone Induction Cooktop

MODEL: SI235G35

[Introduction](#)

[Safety Information](#)

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. Introduction

Thank you for choosing the SingleHomie 30 cm 2-Zone Induction Cooktop, Model SI235G35. This manual provides essential information for the safe and efficient use of your new appliance. Please read these instructions thoroughly before installation and operation, and retain them for future reference.

2. Safety Information

Important Safety Instructions: Read Carefully Before Use

- Ensure the cooktop is installed by a qualified technician according to local regulations.
- Do not touch hot surfaces. Always use oven mitts or pot holders.
- Do not operate the cooktop with wet hands.
- Keep children away from the appliance during operation and when it is cooling down.
- Never leave the cooktop unattended while cooking.
- Do not store flammable materials on or near the cooktop.
- Use only induction-compatible cookware.
- In case of a crack in the ceramic glass surface, immediately switch off the appliance and disconnect it from the power supply.
- Do not use the cooktop as a work surface or for storage.

- Individuals with pacemakers or similar medical implants should consult their doctor before using an induction cooktop.




Image: The cooktop includes safety features such as a hot surface reminder, overheat protection, and an automatic shut-off function to enhance user safety during cooking.

3. Product Overview

The SingleHomie SI235G35 is a 30 cm 2-zone induction cooktop designed for efficient and precise cooking. It features advanced half-bridge technology for stable heating and quiet operation.

3.1 Key Features

- **Half-Bridge Technology:** Provides precise temperature control, uniform heating, and up to 30% more energy efficiency compared to single-transistor designs. This technology minimizes operational noise and temperature fluctuations.
- **Dual Cooking Zones:** Two independently controllable cooking zones with a total power output of 3500W. The larger zone offers 2000W (2300W with Boost) and the smaller zone offers 1200W (1500W with Boost).
- **9 Power Levels:** Allows for versatile cooking, from gentle simmering to rapid boiling.
- **Boost Function:** Temporarily increases power by up to 50% for faster heating.
- **0-99 Minute Timer:** For precise cooking control and automatic shut-off.
- **Safety Lock:** Child safety lock to prevent accidental operation.
- **Low Noise Operation:** Advanced heating and noise reduction technology minimizes electromagnetic and fan noise.
- **Intuitive Touch Controls:** User-friendly interface for effortless operation.

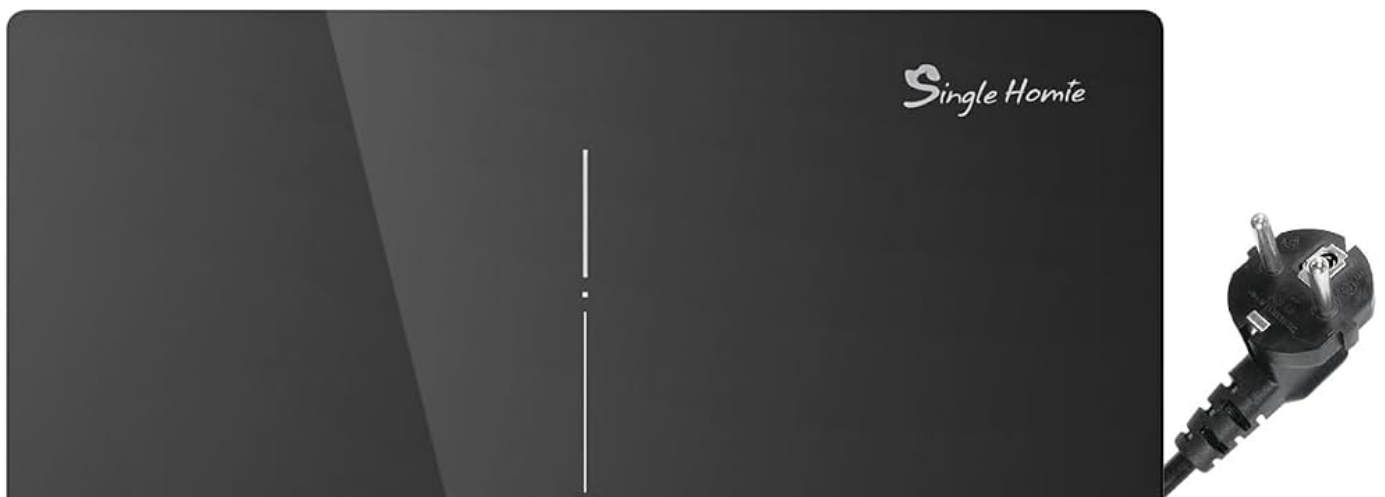

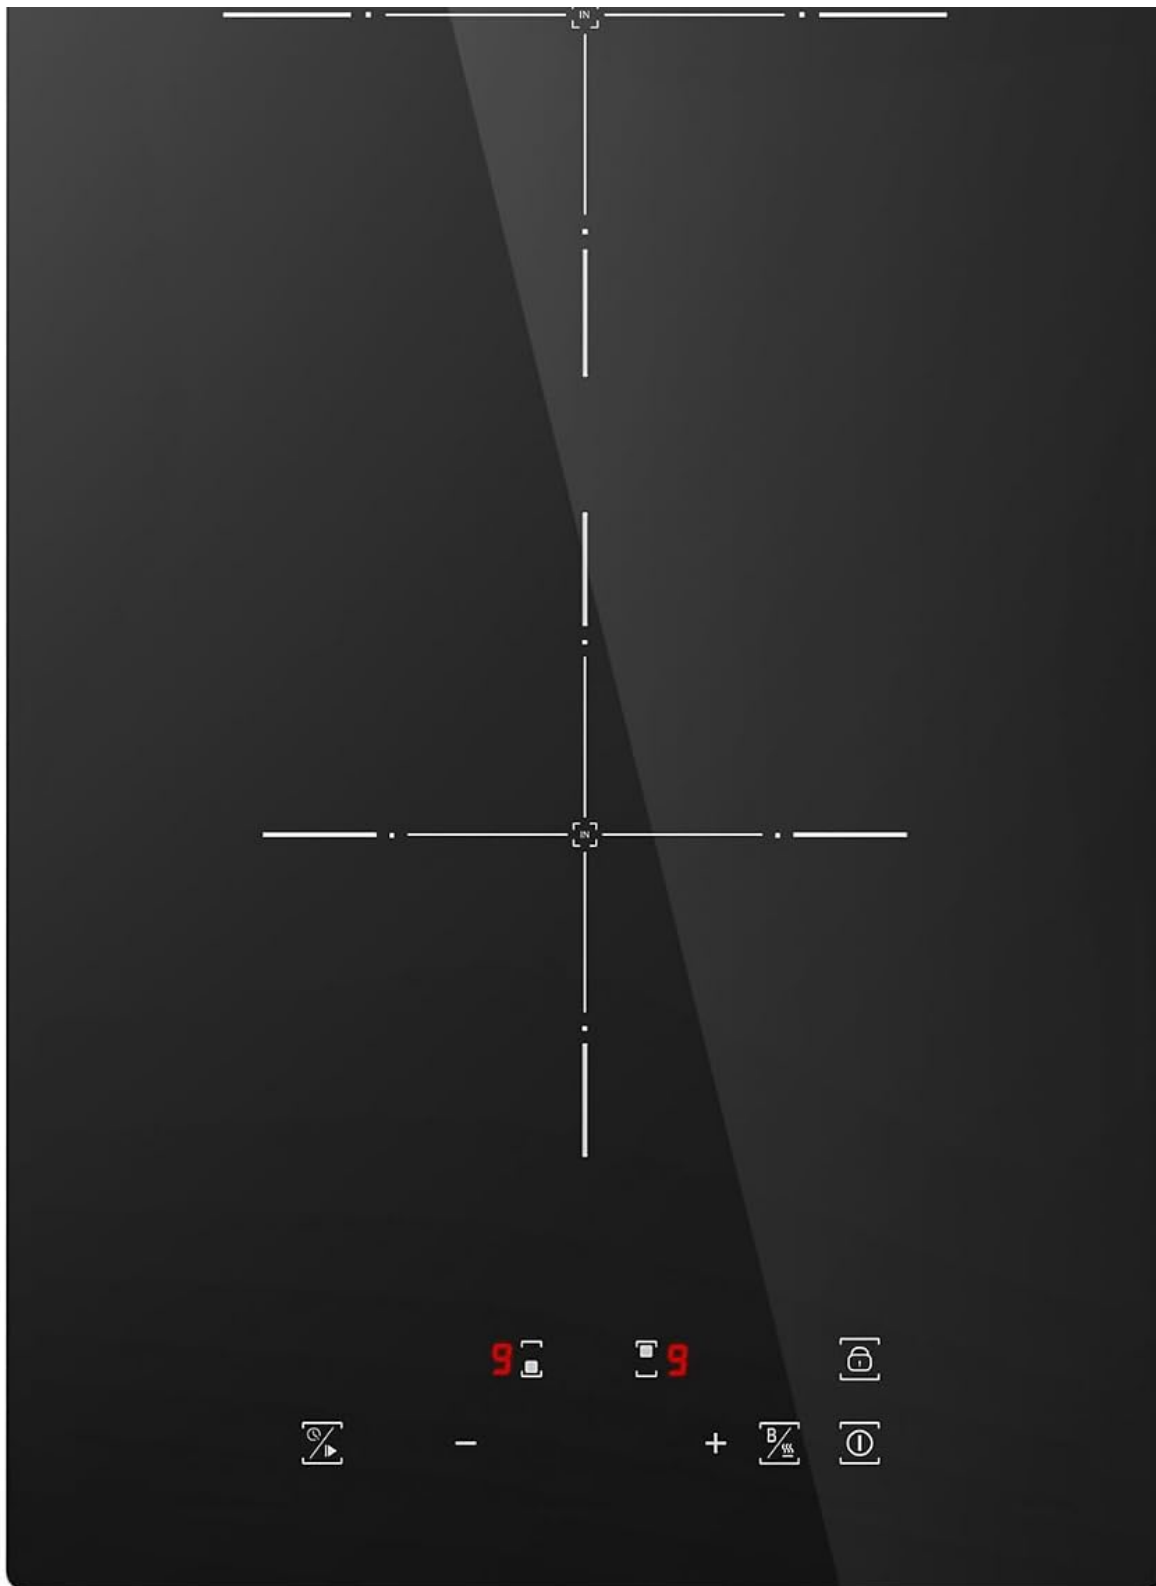 


Image: The SingleHomie 30 cm 2-zone induction cooktop, showcasing its sleek black ceramic glass surface and integrated power cord.



Image: This diagram illustrates the power output for each cooking zone, highlighting the 3500W total power and the boost capabilities for rapid heating.



Image: A comparison table detailing the benefits of Half-Bridge Technology, such as higher efficiency and stable power output, over traditional single-tube designs.



Image: A graph demonstrating the consistent and stable heating performance of the SingleHomie cooktop, contrasting it with the intermittent heating patterns of other models.

4. Setup

4.1 Unpacking

- Carefully remove the cooktop from its packaging.
- Inspect the appliance for any damage. Do not install if damaged.
- Retain packaging materials for future transport or return if necessary.

4.2 Installation

This induction cooktop is designed for built-in installation. It comes with a plug for easy connection, eliminating the need for complex wiring.

- **Cut-out Dimensions:** Ensure your countertop has a cut-out of 49.5 cm x 26.5 cm.
- **Appliance Dimensions:** The cooktop measures 52 cm (length) x 29 cm (width) x 5 cm (height).
- **Electrical Connection:** Connect the cooktop to a standard electrical outlet using the provided plug. Ensure the power supply matches the appliance's requirements.
- Ensure adequate ventilation around the appliance.

Built-in Design, Easy installation



Image: This illustration provides the precise dimensions for the cooktop and the necessary countertop cut-out, facilitating straightforward built-in installation.


4.3 Initial Use

- Before first use, clean the ceramic glass surface with a damp cloth.
- Ensure all packaging materials and protective films are removed.

5. Operating Instructions

The cooktop features intuitive touch controls for easy operation.

Intuitive and Simple Interface

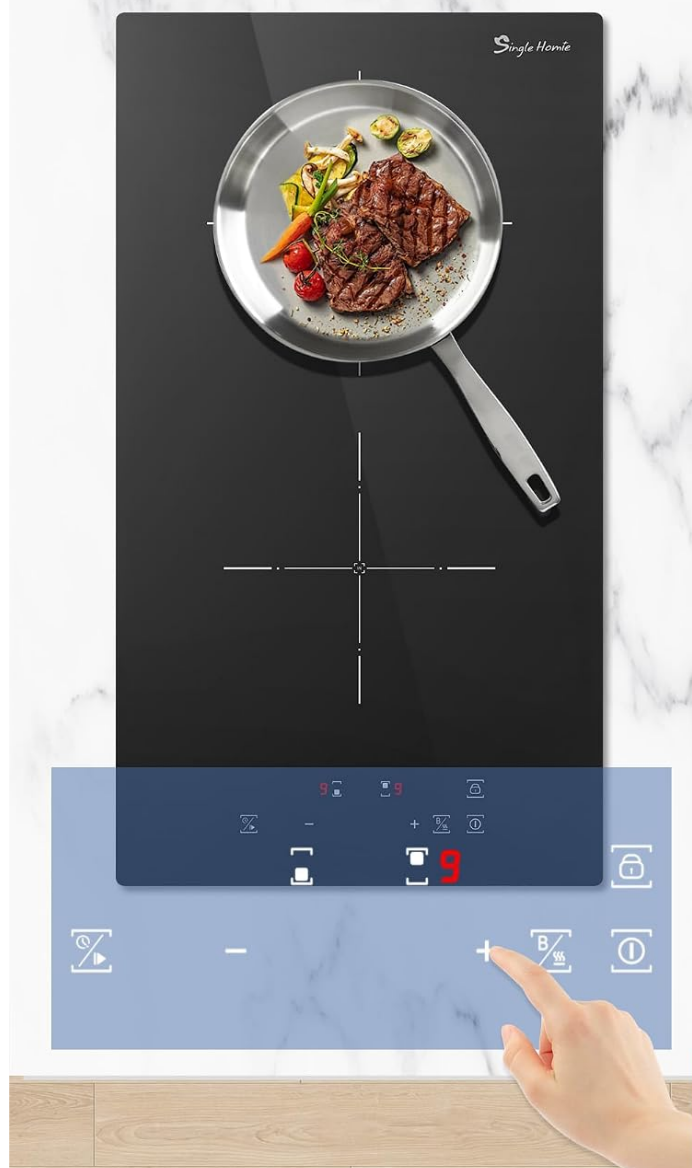

Easy to Clean

Image: The cooktop's intuitive touch control panel, designed for user-friendly operation with clear indicators for various functions.

5.1 Power On/Off

- To turn on, touch the **Power** button. The display will show '0' or 'L'.
- To turn off, touch the **Power** button again.

5.2 Adjusting Power Levels

- Select the desired cooking zone by touching its corresponding control.
- Use the + and - buttons to adjust the power level from 1 to 9.

9 Heating Levels with Boost Function

Fast cooking and up to 40% energy saving

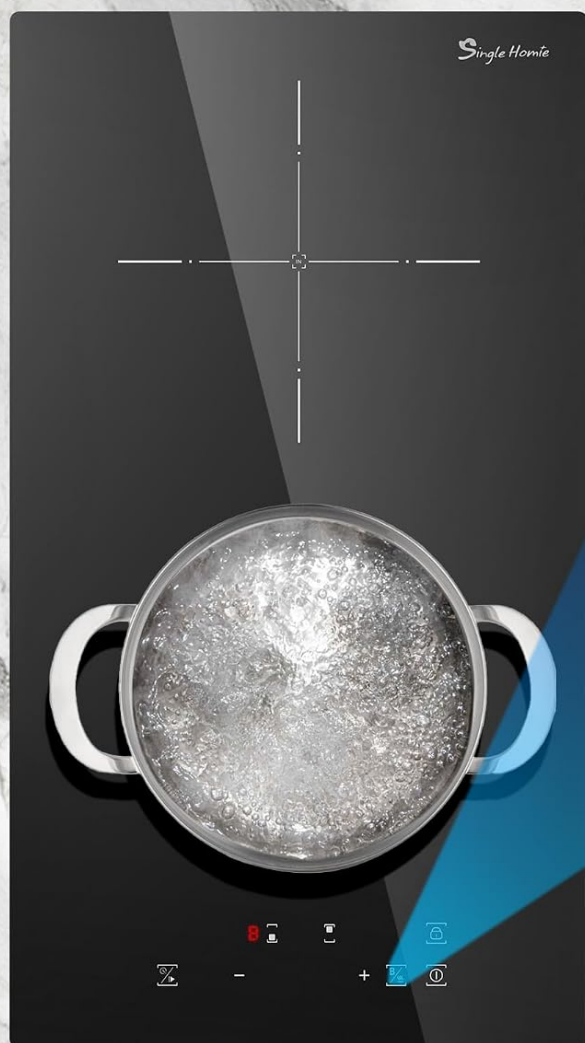


Image: The cooktop in operation, demonstrating the availability of 9 heating levels and the boost function for efficient cooking.

5.3 Boost Function

- To activate Boost, select a cooking zone and then touch the **Boost** button (often indicated by 'B').
- The Boost function increases the power to the selected zone for approximately 5 minutes, ideal for rapid boiling or searing.
- After 5 minutes, the power level will automatically revert to its previous setting.

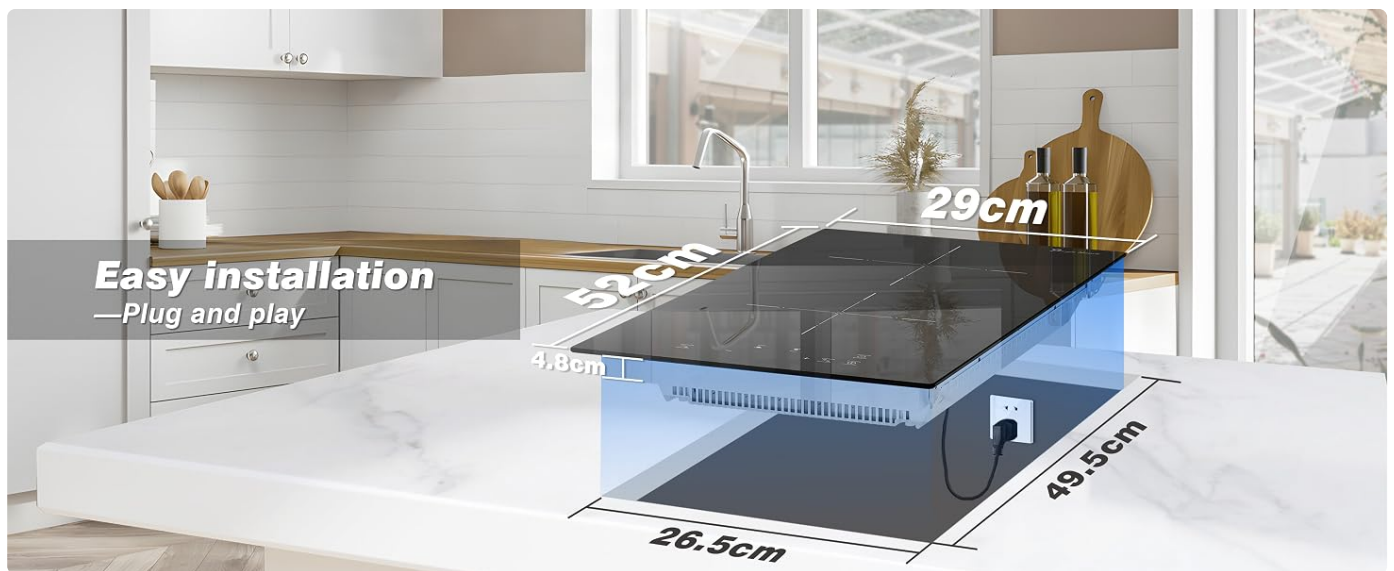


Image: The Boost function in action, providing a temporary surge of power to quickly heat contents, such as boiling water.

5.4 Timer Function

- To set the timer, select a cooking zone and then touch the **Timer** button.
- Use the **+** and **-** buttons to set the desired cooking time from 0 to 99 minutes.
- Once the timer expires, the selected cooking zone will automatically switch off.

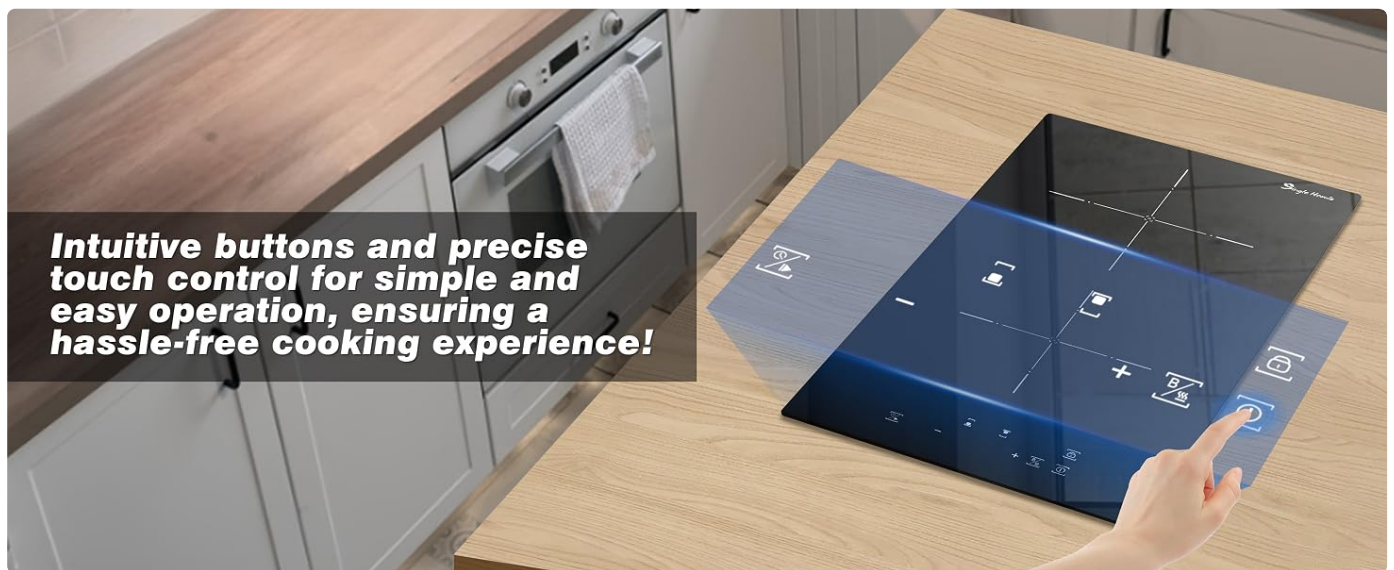


Image: The cooktop's timer function, allowing users to set cooking durations up to 99 minutes for precise and worry-free meal preparation.

5.5 Safety Lock (Child Lock)

- To activate the safety lock, touch and hold the **Lock** button for a few seconds. An indicator will light up.
- When activated, the control panel is locked to prevent accidental changes to settings or activation by children.
- To deactivate, touch and hold the **Lock** button again until the indicator turns off.



Image: The safety lock feature, designed to prevent unintended operation, particularly useful in households with children.

5.6 Compatible Cookware

Induction cooktops require specific types of cookware. Use pots and pans with a magnetic base.

- **Compatible Materials:** Cast iron, enameled iron, stainless steel with a magnetic base, or composite bottom pots.
- **Incompatible Materials:** Glass, aluminum, copper, or ceramic cookware without a magnetic base.
- **Cookware Size:** Ensure the bottom of the cookware is flat and has a diameter between 14 cm and 26 cm for optimal performance.



Image: A visual guide to compatible and incompatible cookware, emphasizing the need for magnetic, flat-bottomed pots and pans within the specified size range.

6. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

6.1 Cleaning the Ceramic Glass Surface

- Always ensure the cooktop is cool before cleaning.
- Wipe spills immediately with a damp cloth.
- For stubborn stains, use a ceramic hob cleaner and a soft cloth. Avoid abrasive cleaners, scouring pads, or harsh chemicals.

- Dry the surface thoroughly after cleaning to prevent water spots.

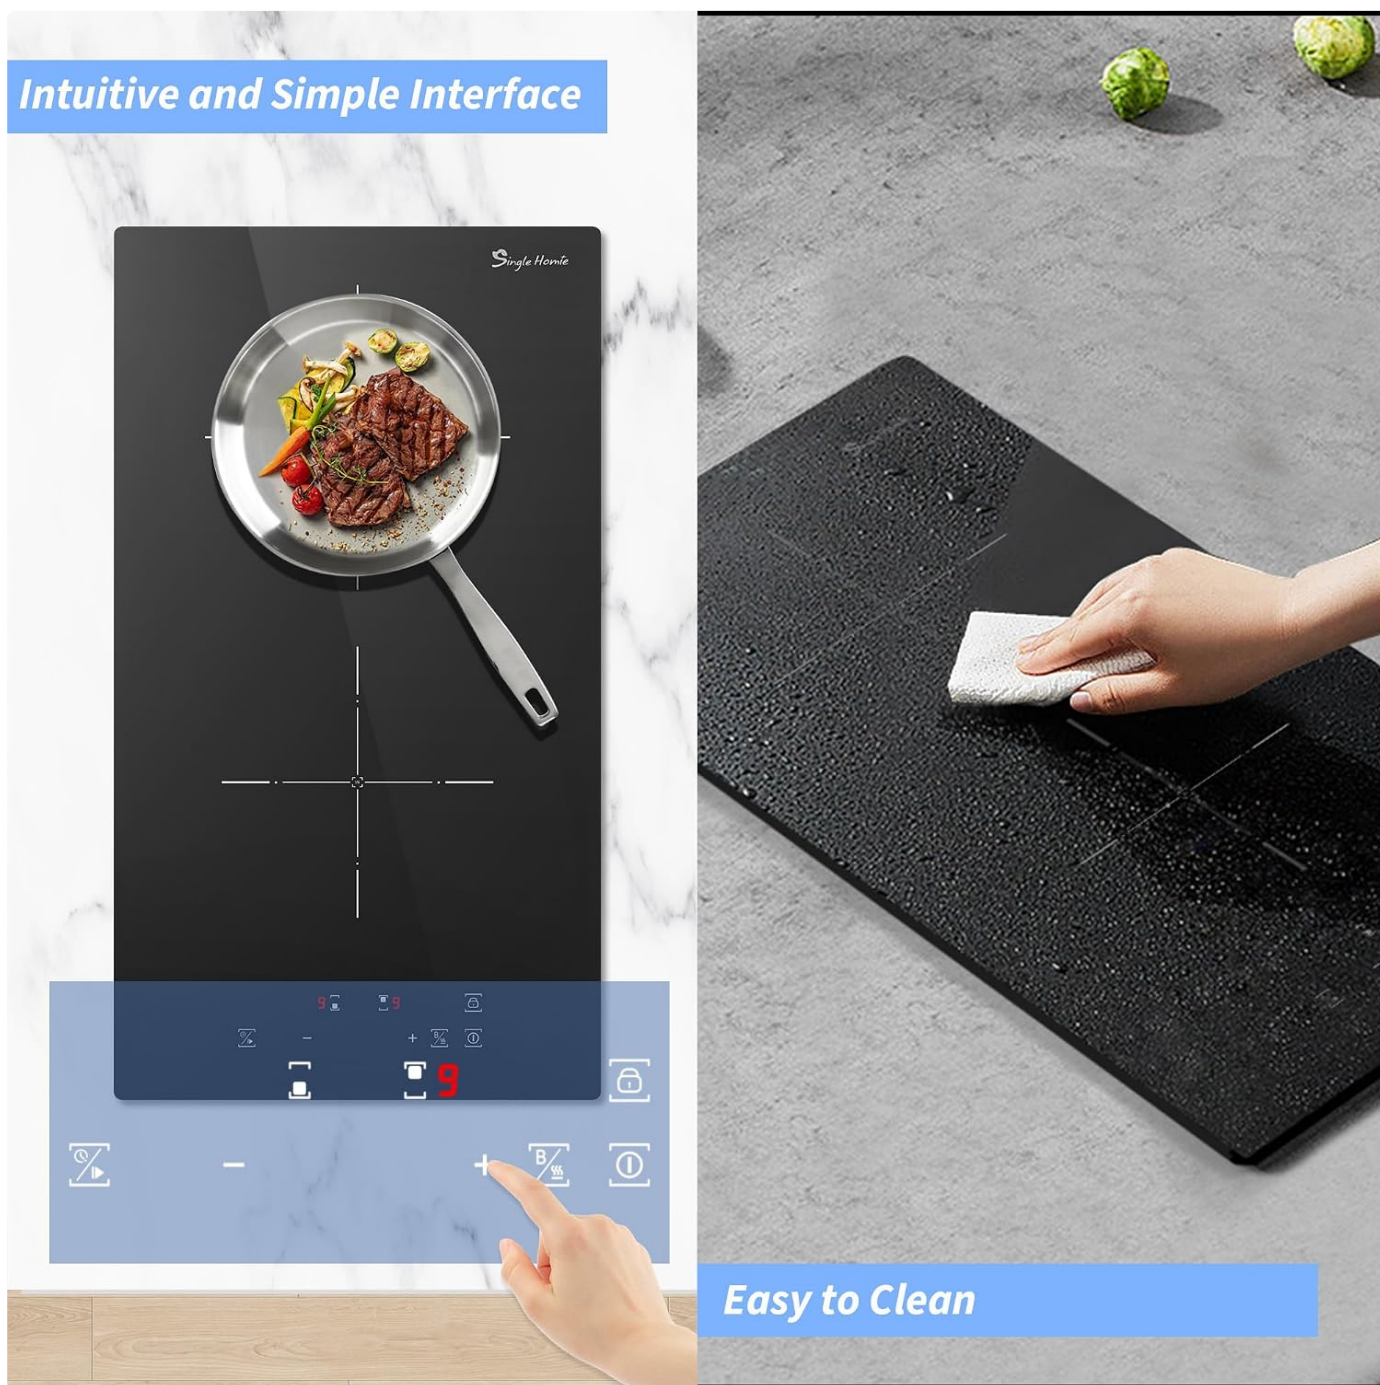


Image: The smooth ceramic glass surface of the cooktop is easy to clean, requiring only a soft cloth and appropriate cleaner.

6.2 General Care

- Avoid dropping heavy objects on the cooktop surface, as this can cause damage.
- Do not drag cookware across the surface to prevent scratches.
- Ensure proper ventilation around the appliance to prevent overheating.

7. Troubleshooting

Before contacting customer support, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; power cord not properly connected; circuit breaker tripped.	Check power connection; reset circuit breaker.
Cooktop not heating.	Incompatible cookware; cookware not centered; no pot detected.	Use induction-compatible cookware; center the pot on the zone; ensure a pot is present.
Display shows 'E' or error code.	Internal fault; overheating.	Turn off and unplug the cooktop for a few minutes, then restart. If the error persists, contact customer support.
Unusual noise during operation.	Normal fan noise; resonance from cookware.	Some fan noise is normal. Check if the cookware is causing resonance; try different cookware.
Cooktop automatically shuts off.	Overheat protection activated; timer expired; no cookware detected for an extended period.	Allow the cooktop to cool down; check timer settings; ensure cookware is present.

8. Specifications

Feature	Detail
Brand	SingleHomie
Model Number	SI235G35
Product Dimensions	52 x 29 x 5 cm
Cut-out Dimensions	49.5 x 26.5 cm
Weight	5.5 kg
Power Source	Corded Electric
Total Power Output	3500W
Number of Heating Zones	2
Heating Surface Material	Glass Ceramic
Special Features	Low noise, Uniform heating, Boost function, 9 power levels, 99-minute timer, Child safety lock
Color	Black
Country of Origin	China

9. Warranty and Support

For warranty information and details on returns, please refer to the purchase platform's policies or contact SingleHomie customer service directly. Typically, products can be returned within 30 days of receipt if you change your mind. For defective or damaged products, specific assistance is available through the seller.

If you encounter any issues not covered in this manual or require further assistance, please contact SingleHomie

customer support through the retailer where the product was purchased.

© 2024 SingleHomie. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset the SingleHomie SI235G35 induction cooktop if it is only beeping and the lights are flashing on and off?

Based on the troubleshooting guide for the SingleHomie SI235G35 induction cooktop, beeping and flashing lights (or an 'E' error code) typically indicate an internal fault or an overheating issue. To reset the appliance, follow...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0D73469QS>

More documents and user manuals: <https://manuals.plus/>